



28PINS - SCHEMATIC

<http://www.28pins.com>


Micro USB

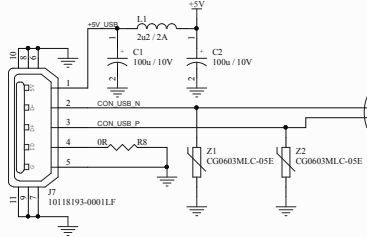


POWER

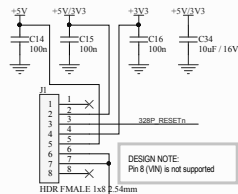


POWER PADS




3V3 LDO




Power Selection




POWER LED

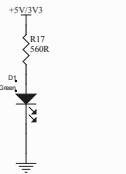


USER LED

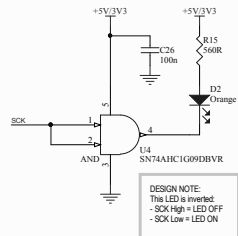


RESET (16U2)

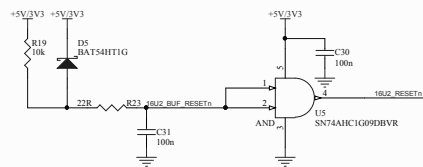

RESET (328P)

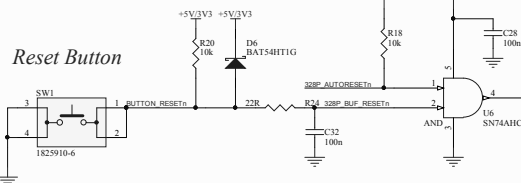

USER BUTTON

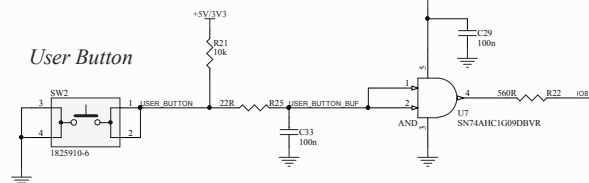

DESIGN NOTE:
This board supports 5V or 3.3V voltage level on the IO pins.
1) 5V IO - Fit everything as defined in this schematic. 'NF' means, do not fit this component.
2) 3.3V IO - Remove R27, R18, R28, 'Replace Y1 (change from 10MHz to 10MHz)', 'Replace Y2 (change from 10MHz to 8MHz)'.
3) Both 5V and 3.3V, selected through JP4 - Remove R27, Remove R28, R18, 'Replace Y1 (change from 10MHz to 10MHz)', 'Replace Y2 (change from 10MHz to 8MHz)'.
*Note: The 10MHz crystals are not recommended for 3.3V operation. We need to adjust their values, that's why the change.
IMPORTANT: Once you change the crystal value, you may need to re-compile your source code.


DESIGN NOTE:
About JP2:
1) DebugWire support - Short 1&2. This was added to support possible debugWire debugging (programming?) of 328P through 16U2. In this case, the 16U2 needs to have a correct firmware and has to behave as a debugWire tool.
2) ISP programmer mode - Short 2&3. In this case, take a cable and connect J5 & J6 together. Upload AVRISP MKII firmware into 16U2 and you can program 328P. Example of AVRISP MKII firmware can be found at LUFA projects: <http://www.lufa-lib.org/projects/avr-isp/> (Tip: rename LEDs of the old AVRISP MKII LUFA project to the IOX and TX LEDs on the 28Pin board)
3) ISP header - Short 3 & 4. In this mode, the ICSP1 header is used as a standard ISP header to program 16U2 through ISP interface by an ISP programmer.

DESIGN NOTE:
About JP1:
1) Autoreset Enabled - Short 1&2. In this case, 16U2 is used to reset 328P when firmware inside 328P is updated from Arduino IDE.
2) 16U2 DFU mode Enabled - Short 2&3. 16U2 HWB pin is sampled by 16U2 during RESET. If pulled low, then after Reset the 16U2 will go into DFU mode (it's the mode when you can flash 16U2 firmware through USB and ArduISP software: <http://www.arduino.cc/boards/firmware>).

DIP SOCKET



MOUNTING HOLES



FIDUCIALS



LAYOUT NOTE:
1) Route all the POWER tracks with minimum track width 0.4mm.
2) Route all the other tracks by 0.4mm and change them by the end of the design to 0.2mm. To change all of them at once, use this filter "not InNet(*)" and not InNet (GND7) and isTrack and OnLayer(L1) or OnLayer ("L2") and then set 0.2mm width in PCB Inspector panel.

FEDEVEL Academy	
Learn Schematic and PCB Design - ONLINE	
(c) 2015 FEDEVEL Academy	http://www.fedevel.com/academy
Title: 28Pins	Version: [No Variations]
Page Contents: [03] - 28PINS SCHEMATIC.SchDoc	Checked by:
Size: DWG NO	Revision: V111
Date: 4/28/2015	Sheet: 3 of 5