

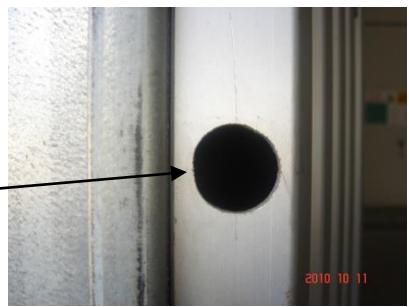

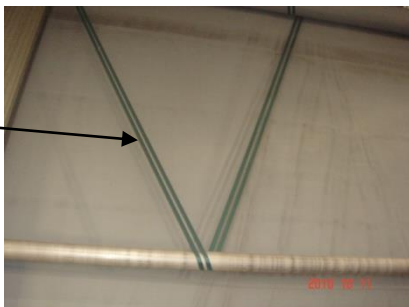


No.	INSTRUCTIONS		KEY POINTS / CONTACTS
1.	Manually operate the doors by pressing the up button, check for any loose cables or wires, the door must operate without excessive noise, squeaks, etc.		<p>✚ ENSURE PERSONNAL PROTECTIVE EQUIPMENT (PPE) IS WORN: -</p> <ol style="list-style-type: none"> HARD HAT STEEL CAP BOOTS GLOVES
2.	Check that the inner and out floor track works, if you lay a piece of steel across both strips the door must open.		
3.	With a rag, wipe the eye sensors that prevent the door from coming down if the doorway are blocked by a person or vehicle.		 <p>While the door is coming down kick the yellow part up, this will send the door back up.</p>
4.	Check for broken elastics that help the door up.		<p>Any problems with the door contact Maxidoor 083 235 6269 for a quote to repair.</p>

Controlled By:	QA DEPT	Approved By:		
Signature:		Signature:	Date:	Page 1 of 1