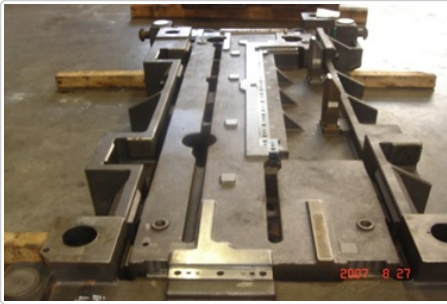
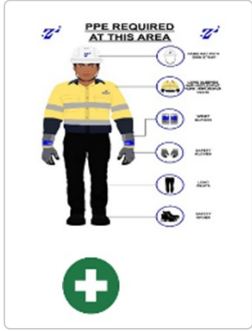
 VALUE INTEGRATOR	MAINTENANCE WORK INSTRUCTIONS	SOP No: MAW1544
	DIE INSPECTION	Rev: 0.0
		Date: 13 OCT 2025

No.	INSTRUCTIONS	VISUALS	KEY POINTS / CONTACTS
1.	Place your lockout on crane remote, ensure the crane is supporting the die on the stand. Remove the crane remote battery and keep with you.		
2.	CASTING: Visually inspect for any cracks.		

Controlled By:	Maintenance	Approved By:	Zondi, Ndumiso	Page 1 of 1
Date: Monday, October 13, 2025				

UNCONTROLLED WHEN PRINTED WITHOUT RED CONTROLLED STAMP & SIGNATURES