

280

/Users/rob/Documents/Documents – Astrid/3d\_printing/gear\_helper/gear\_module\_0.5.scad

260

240

220

200

180

160

140

120

100

80






























60

40

20

0

Scale is to calibrate actual printed dimension. Check both X and Y. Measure between tick 0 and last tick

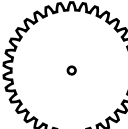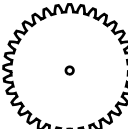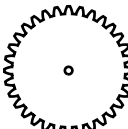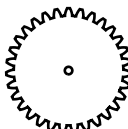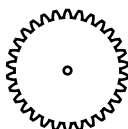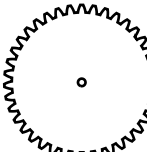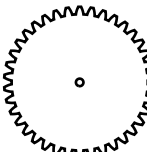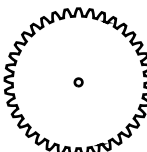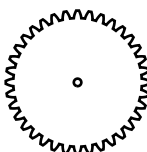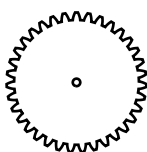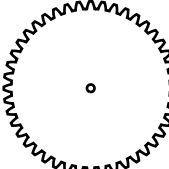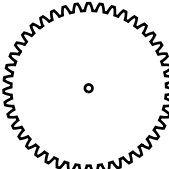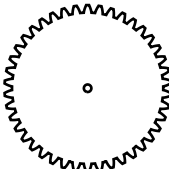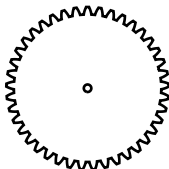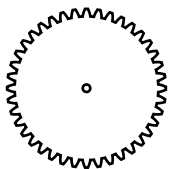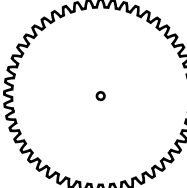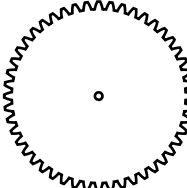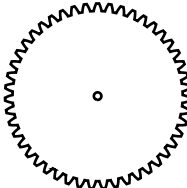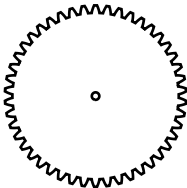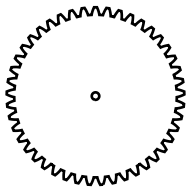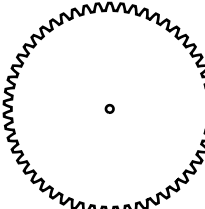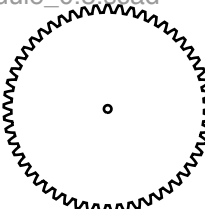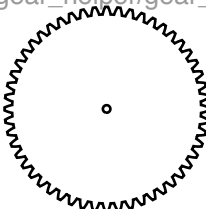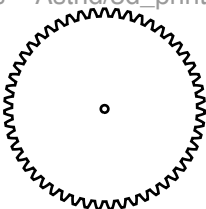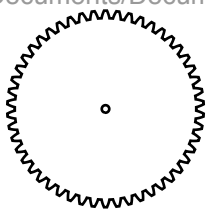

20

40

60

80

100

120

140

160

180