


Operational Rules for A380:

1. Operational RWY: 16/34;
2. Operational TWYs: D(south of Q),E,E1-E7,E9-E11,G(south of R),G1,G5,G8(BTN G&E),G9(BTN G&E),Q(west of D),R(west of D),S(west of D),W(west of D),Y(BTN R&W),Z(BTN R&W).
3. Operational Stands: Nr.317,350,361,362,391.
4. A380 are strictly forbidden to operate within the area not mentioned above.
5. Follow-me vehicle is not available for arrival and departure aircraft.
6. A380 taxiing route:

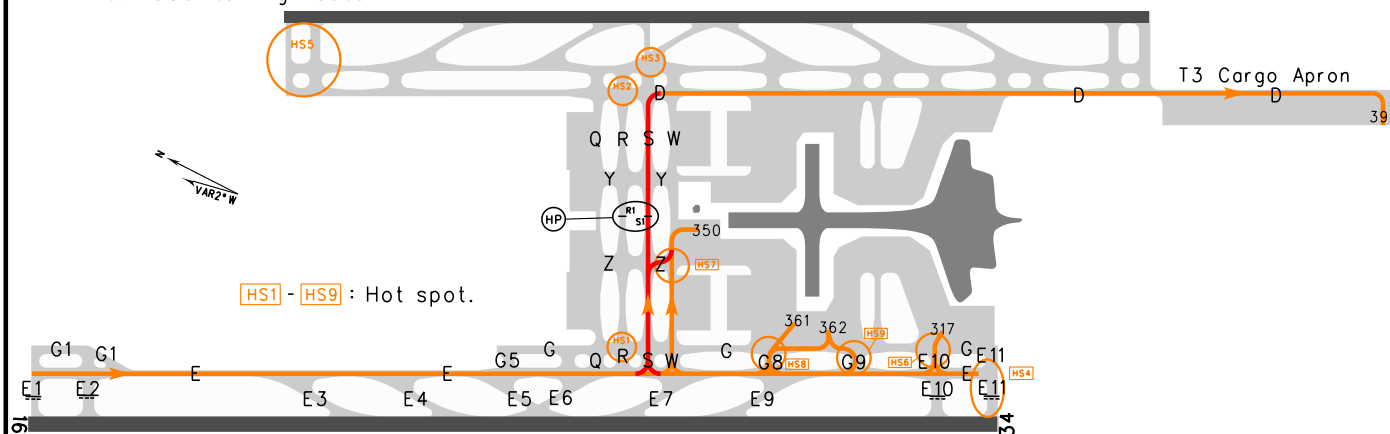


Taxiing route to Stand NR317:  
Landing for RWY16: E-E10-Stand NR317,  
Landing for RWY34: E-E10-Stand NR317.

Taxiing route to Stand NR361:  
Landing for RWY16: E-G8(BTN G&E)-NR361,  
Landing for RWY34: E-G8(BTN G&E)-NR361.

Taxiing route to Stand NR350:  
Landing for RWY16: E-W(west of D)-NR350  
or E-S(west of D)-Z-NR350,  
Landing for RWY34: E-W(west of D)-NR350  
or E-S(west of D)-Z-NR350.

Taxiing route to Stand NR362:  
Landing for RWY16: E-G8/G9(BTN G&E)-G-NR362,  
Landing for RWY34: E-G8(BTN G&E)-G-NR362.

Taxiing route to Stand NR391:  
Landing for RWY16: E-S(west of D)-D(south of Q)-NR391,  
Landing for RWY34: E-S(west of D)-D(south of Q)-NR391.

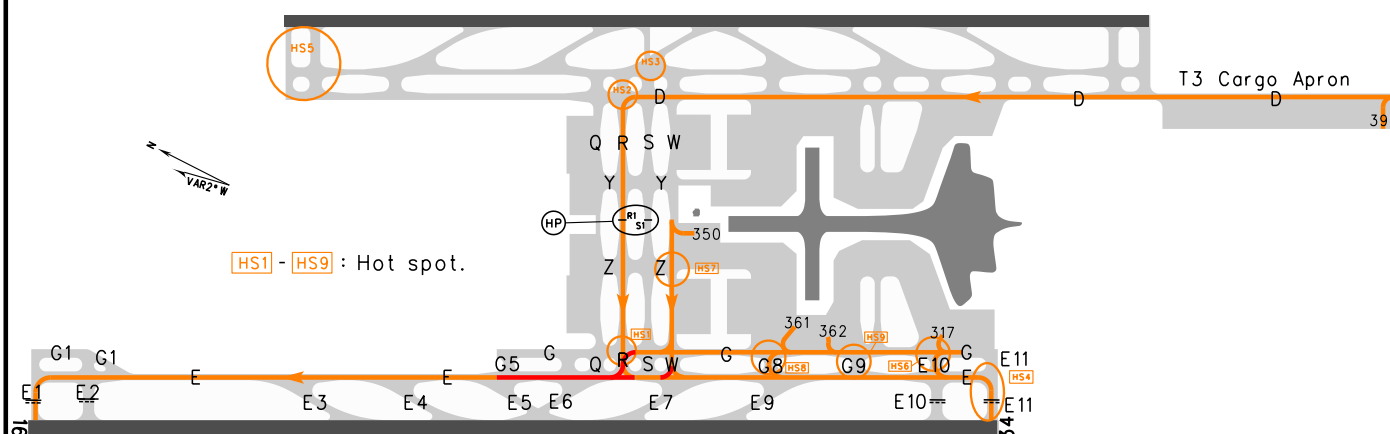

Taxiing route from Stand NR317:  
Departure for RWY16: G-R(BTN G&E)-E-E1,  
Departure for RWY34: G-E10(BTN G&E)-E-E11.

Taxiing route from Stand NR361:  
Departure for RWY16: G-R(BTN G&E)-E-E1,  
Departure for RWY34: G-G8(BTN G&E)-E-E11.

Taxiing route from Stand NR350:  
Departure for RWY16: W(west of D)-E-E1  
or W(west of D)-G-R-E-E1,  
Departure for RWY34: W(west of D)-E-E11.

Taxiing route from Stand NR362:  
Departure for RWY16: G-R(BTN G&E)-E-E1,  
Departure for RWY34: G-G8(BTN G&E)-E-E11.

Taxiing route from Stand NR391:  
Departure for RWY16: D(south of Q)-R(west of D)-E-E1,  
Departure for RWY34: D(south of Q)-R(west of D)-E-E11.

Changes: Route & note.