


Nastavitve gdb za razhroščevanje:

#### 4.2.4 STM32CubeIDE

Reset and connection modes can be changed through


Run -> Debug Configurations -> Debugger

Figure 32. Select Generator Options Reset Mode

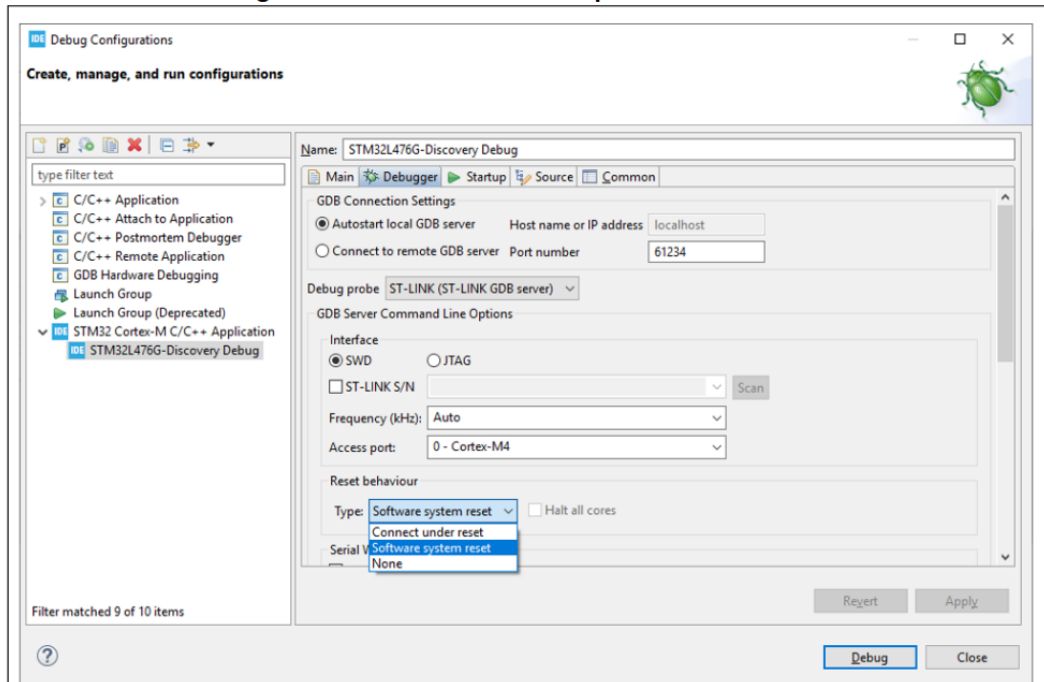

Nastavitve bližnjic:

Problem {

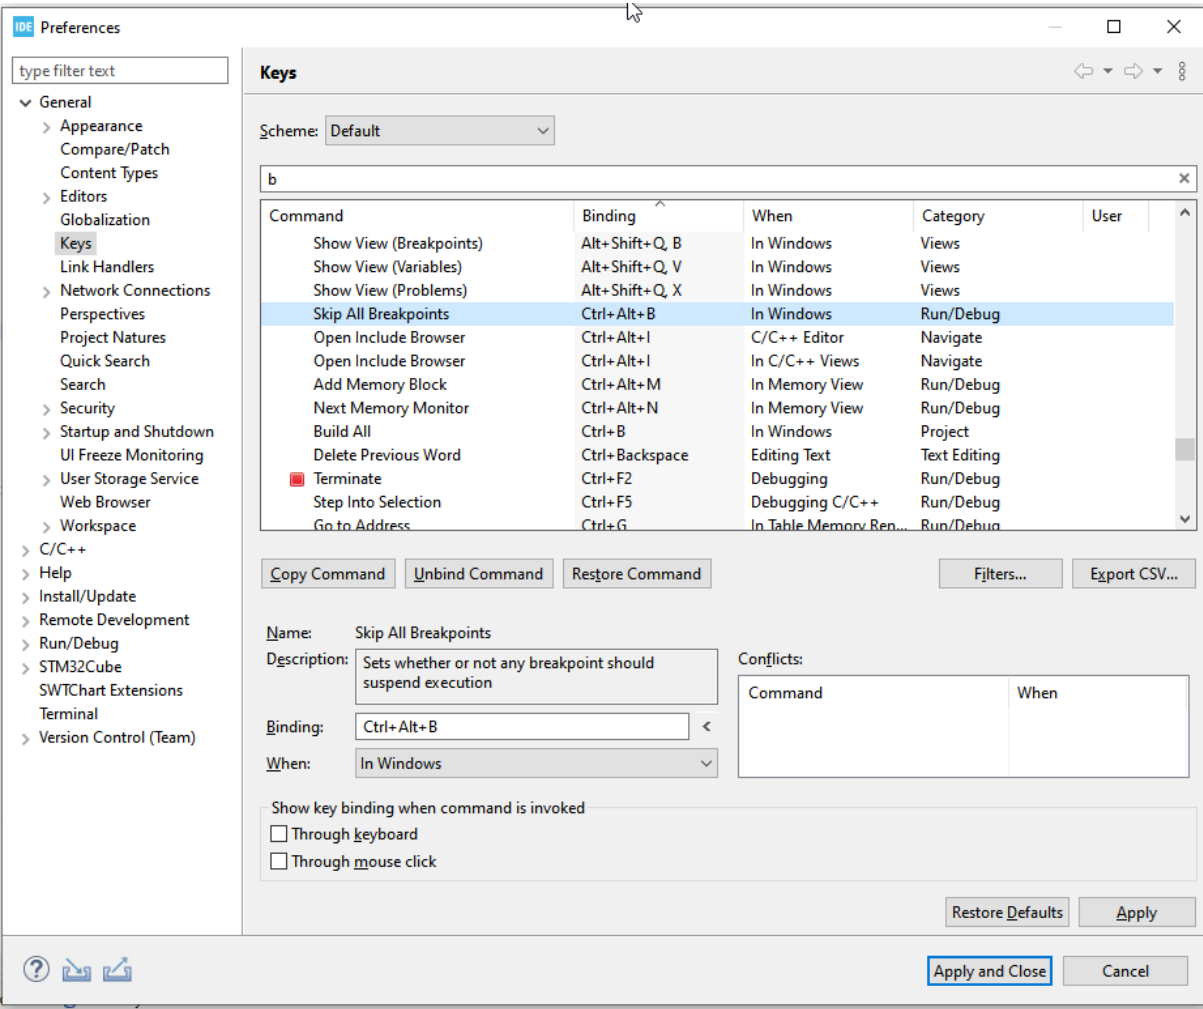

Problem ]

