

MOTODEFY™+

USER MANUAL



LIFE.  POWERED.

Copyright

©2012 Motorola Mobility, Inc. All rights reserved. This document, or parts thereof, may not be reproduced in any form without the prior permission of Motorola Mobility, Inc.

rkrisprowriter

Disclaimer

The purpose of this manual is only to showcase the various sections a standard manual should have.

It may be used only as a reference by students of the TWB Online Fundamental Certification Program.

There is no intended commercial value for this manual.

If this material has been found and does not belong to you, please return it to:

Motorola Mobility, Inc,
#56, Arekere Mico Layout,
Bannerghatta Road,
Bangalore 560076. India.
Phone: +91 80 26582609

Preface

This User Guide provides information and instructions to a first-time user on how to use the MOTODEFY™+ mobile device. The purpose of this document is to help you understand and use the following features:

- ◆ Making a call.
- ◆ Receiving a call.
- ◆ Sending a Short Message Service (SMS).
- ◆ Setting a reminder in the Calendar.
- ◆ Changing the Ringtone for incoming calls.

Document Conventions

In this document the following conventions will be used:

- ◆ Notes in this document will be depicted as given below.

Note: Universal Inbox contains all your messages which include your Facebook messages, emails, and text messages.

- ◆ Warnings will be depicted as given below.

Warning: You will see Facebook messages and emails from various accounts only if those accounts have been activated on your phone.

- ◆ Cross references will be depicted as given below.

Refer to the Security section on Page 8

- ◆ MOTODEFY™+ mobile device will be referred to as **mobile phone**.

Contents

Introduction 1

Getting Started 1

 Parts and Keys..... 1

Status Indicators 1

Inserting the SIM card, Memory card and the Battery..... 2

Switch the Phone On or Off..... 3

Lock the Screen..... 3

Unlock the Screen..... 3

Calls..... 3

 Making calls 3

 Receiving calls..... 3

 Changing the Ringtone for Incoming calls 4

 Speed Dialing 4

 Mute and Hold..... 4

 Speaker On or Off 4

 Using the keypad during a call..... 4

Messaging..... 4

 Replying to the Messages..... 4

 Creating Messages..... 5

Text Entry..... 5

Setting the Reminder for a Calendar entry 5

Safety Instructions 5

Troubleshooting 6

Glossary 7

Index 8

Feedback Form 9

Table of figures

Figure 1: Parts and Keys..... 1

Figure 2: Status Indicators 1

Figure 3: Lock Symbol 3

rkrisprowriter

Introduction

MOTODEFY™+ is a life-proof mobile phone that takes anything life throws your way. It is a scratch resistant, dust proof and waterproof mobile phone. **Refer to Safety Instructions on page 5** before you start using your MOTODEFY™+

Getting Started

Let us get started with the depiction of the Parts and Keys of MOTODEFY™+

Parts and Keys

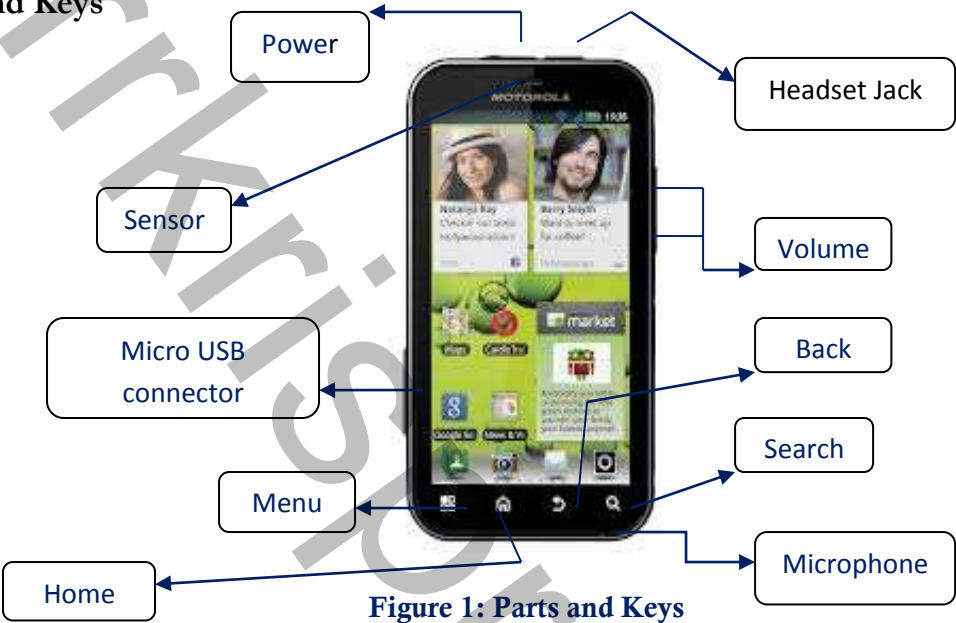


Figure 1: Parts and Keys

Status Indicators

	Bluetooth active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi active		downloading
	volume		voicemail message
	vibrate		3G (fastest data)
	silent		flight mode
	mute call		battery (charging)
	signal (roaming)		battery (full charge)
	speakerphone active		alarm set
	GPRS (fast data)		EDGE (faster data)

Figure 2: Status Indicators

Inserting the SIM card, Memory Card and the Battery

1. Open the cover by sliding the button towards right.



2. Insert the Subscriber Identification Module (SIM) Card.



3. Insert the Memory Card.



4. Insert the Battery.



5. Close the cover.





6. Lock the cover.

Switch the Phone On or Off

1. Refer [Figure 1](#) to see the **'Power'** button.
2. Press and hold the **'Power'** button to switch on or off the phone.

Lock the Screen

Press the **'Power'** button to lock your screen.

Unlock the Screen

1. Press the **'Power'** button.
2. Hold the lock symbol (represented in red) shown in [Figure 3](#) and slide it to your right to unlock the screen.






Figure 3: Lock Symbol

Calls




This section covers how to make and receive calls using MOTODEFY™+

Making calls



1. Using **'Dialer'** tab

1. Touch the **dialer** icon. 
2. Touch the **'Dialer'** tab.
3. Press the number using the keypad.
4. Press the **call** icon. 
5. Press the **end call** icon  to end your call.


2. Using **'Recent'** tab

1. Touch the **dialer** icon. 
2. Touch the **'Recent'** tab.
3. Use the **call** icon  to call the name or number you have chosen from the recent calls list.
4. Press the **end call** icon  to end the call.

Receiving calls


1. Drag the **answer call** icon  to the right to answer a call.
2. Drag the **end call icon**  to the left to reject a call.

Changing the Ringtone for Incoming calls



1. Click on the **'Menu'** button. 
2. Click on the **'Settings'** option.
3. Click on the **'Sounds'** option.
4. Click on the **'Phone Ringtone'** option
5. Choose a song or an Android system sound to be used as your ringtone.

Note: Similar steps as above are followed to change the ringtone for notifications. Just choose **'Notification Ringtone'** option instead of **'Phone Ringtone'** in Step 4. Notification tones are used when you get a message (text, email, system) or reminder updates.


Speed Dialing

1. Touch the **dialer** icon. 
2. Press and hold a number on the keypad. For example, '3'.
3. Touch **'OK'** to assign speed dial.
4. Choose the contact you need to assign for '3'. For example, 'Emily.'
5. Now press and hold the number '3' to speed dial Emily.

Mute and Hold

After receiving a call, you can mute the call using the  icon. You can hold the call using the  icon.

Speaker On or Off

Touch the speaker icon  to switch on or off the speaker while you are on call.


Using the keypad during a call

While on call, touch the **keypad** icon  to display the keypad.

Messaging


This section describes how to send text messages using MOTODEFY™+

Replying to the Messages

1. Touch the messaging icon. 
2. Choose **'Text Messaging'**.
3. Click on the message for which you need to send a reply.
4. Type text in the **'Enter the message here'** text box.
5. Press **'Send.'**

Note: Refer to the **Text Entry section on Page 5** to know more about entering text using the keypad.

Creating Messages

1. Touch the **messaging** icon. 
2. Press the '+' symbol.
3. Click on the 'To' textbox and type initial letters of the name of the contact or number of the contact.
4. A menu of numbers or names will be displayed.
5. Choose your desired number or name.
6. Click on the 'Enter message here' text box and type your message using the keypad.
7. Press 'Send.'


Text Entry

You have two ways of entering text using the keypad.

- ◆ **Traditional typing method:** You manually type the letters on the keypad.
- ◆ **SWYPE™ method:** You swipe the letters over the keypad.

Both the approaches allow you to, manually create words or use the dictionary to predict words. SWYPE™ is an easier option for the user.

Setting the Reminder for a Calendar entry

Click on the **calendar** icon  to view the calendar.
To add an event and reminder on a particular date:

1. Choose the date.
2. Click on '+' symbol to add an event in the calendar entry.
3. On the 'Create event' page, type necessary details in the required text boxes like 'What,' 'Where' and so on.
4. Mention the 'Start' and 'End' date if needed.
5. Click on the 'Reminders' button and choose the reminder time. For example, '15 minutes' or '1 week'.
6. Click on 'Save' button to finish the event addition.

Safety Instructions

Handle and store batteries properly to avoid damage or injury.

- ◆ Do not use damaged batteries.
- ◆ Do not place the battery or the cell phone near a heat source.
- ◆ Do not put the battery in liquids.
- ◆ Do not dry a wet battery with an appliance or heat source. For example, Microwave oven or a Hair dryer.
- ◆ Do not charge a damp or wet mobile device. The battery could be wet, and it could do irreversible damage to the battery.

Note: Ensure that the battery compartment is always covered and all the plug points are covered to avoid damage of the mobile device due to exposure to the above-said conditions. The mobile device can resist damage to an extent as specified in the product information but caution should be exercised to avoid the instances mentioned above.

Warning: Motorola recommends you always use Motorola-branded accessories like Battery and Charger with this mobile device to prevent any damage or accidents due to faulty accessories. Motorola's warranty does not cover the damage caused due to faulty non-Motorola brand accessories.

Troubleshooting

If your phone stops working for some reason other than the reasons mentioned in the **Safety Instructions section on Page 5**, try the following steps:

- ◆ Switch off the phone.
- ◆ Remove the battery once and place it back in its compartment.
- ◆ Replace the cover.
- ◆ Switch on the phone.

Try a factory reset in case the mobile software crashes. The factory reset can be done as given below:

- ◆ Click on the menu icon  > Settings > Privacy Settings > Factory Data Reset.
- ◆ Restart the mobile device.

Take the mobile device to an authorized Motorola service center if none of the above instructions helps.

Glossary

Bluetooth - Bluetooth is a wireless protocol for exchanging data over short distances from fixed and mobile devices.

EDGE - Is a data system. It provides nearly three times faster speeds than the outdated GPRS system.

GPRS - General Packet Radio Service is a packet-switching technology that enables data transfers through cellular networks. It is used for mobile internet, MMS and other data communications.

GPS - Global positioning system is a space-based satellite navigation system that provides location and time information anywhere on the Earth.

SMS - Short Messaging service is a technology that allows you to send text messages using mobile phones

Wi-Fi - Is WLAN (Wireless Local Area Network) technology. It provides short-range wireless high-speed data connections between mobile data devices and nearby Wi-Fi access points.

Index

Battery	2	Parts	1
Calendar.....	5	Phone Ringtone'	4
Calls.....	3	Reminder.....	5
cover	2	Ringtone.....	4
dialer	3	Safety	5
Hold	4	Screen	3
Introduction.....	1	Settings'	4
Keys.....	1	SIM card	2
life-proof.....	1	Sounds.....	4
Lock.....	3	Speaker	4
Memory card	2	Speed Dialing	4
Menu.....	4	Status Indicators	1
Messaging.....	4	SWYPE	5
Mute	4	Text Messaging	4
Notification Ringtone.....	4	Unlock.....	3

Feedback Form

Please spend a few minutes to fill this form to help us serve you better. Your feedback is valuable to us. Check the appropriate box

Do you like the look and feel of the mobile phone?	<input type="checkbox"/> Yes <input type="checkbox"/> No
Is your mobile phone easy to use?	<input type="checkbox"/> Yes <input type="checkbox"/> No
Is the calling and messaging facility in your mobile phone satisfactory?	<input type="checkbox"/> Yes <input type="checkbox"/> No
Does your mobile phone have good reception?	<input type="checkbox"/> Yes <input type="checkbox"/> No
How do you rate the overall product quality?	<input type="checkbox"/> Good <input type="checkbox"/> Average <input type="checkbox"/> Poor
Additional Comments	

Please mail this feedback form to:

Motorola Mobility, Inc,
#56, Arekere Mico Layout,
Bannerghatta Road,
Bangalore 560076. India.
Phone: +91 80 26582609