

Bose® QuietComfort® 25

Acoustic Noise Cancelling® headphones




<http://global.Bose.com>

U.S. only:

<http://owners.Bose.com/QC25>


1.

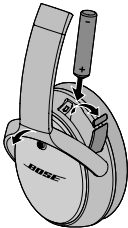

2.




3.

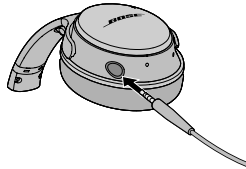


4.



5.



6.

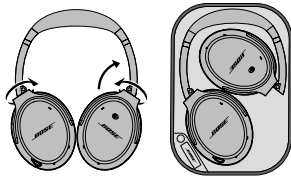

Please read and follow this Owner's Guide and the Important Safety Instructions and keep for future reference.


For additional information about your headphones including accessories and replacement parts, refer to: <http://global.Bose.com>
U.S. only: owners.Bose.com/QC25

Setting up the headphones

- 1.** Tilt the headband away from the right earcup and open the battery compartment. Insert one AAA battery.
- 2.** Switch on the power button to activate Noise Cancelling. The power indicator glows solid green. **Note:** When the power is off, the headphones will still provide audio. For best quality audio, turn the power on.
- 3.** Connect the audio cable to the connector on the left earcup.
- 4.** Connect the other end of the audio cable to the standard 3.5 mm headphone jack on your device.

Controlling your Samsung Galaxy device

The headphones have an in-line remote with an integrated microphone for convenient control of select devices.

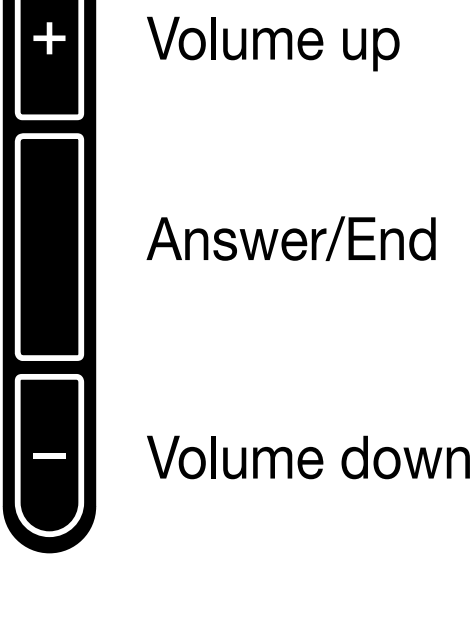

Easily control volume, track selection, and voice applications, plus switch between music and calls.

Note: The **S** marking on the back of the remote indicates that these Bose® QuietComfort® 25 headphones are designed for use with Samsung Galaxy devices. Full controls may not be available for some models. Refer to your Samsung Galaxy user guide to see if remotes work with your model.

Adjust volume	Press + or -
Play/pause	Press and release Answer/End.
Skip forward	Press and release Answer/End twice quickly.
Skip backward	Press and release Answer/End three times quickly.
Fast forward	Press Answer/End twice and hold.
Rewind	Press Answer/End three times and hold.
Answer or end a call	Press and release Answer/End.
Ignore incoming call	Press and hold Answer/End.
Switch to incoming call; put current call on hold	While on call, press Answer/End once. Press again to return to first call.
Switch to incoming call; end current call	While on call, press and hold Answer/End for about 2 seconds and release.
Use voice control	Press and hold Answer/End. See device's user guide for compatibility and usage information.

Connecting to in-flight entertainment systems

- 5.** Audio jack configurations on airplanes vary. For a single 3.5 mm jack, first use the audio cable plug directly; for a dual output jack, use the included adapter.

If the airplane's sound system is too loud for comfortable listening, the adapter can be used to reduce the volume with either a single or dual output jack.

Storing the headphones

6. Rotate both earcups so they lie flat. Then fold the right earcup in toward the headband. Place the headphones into the case.

Caution: If the headphones will be stored without use for more than 30 days, remove Alkaline batteries to avoid leakage.

Battery information

Compatible battery types	Battery life	Time remaining when indicator flashes
Alkaline	35 hrs	7 hrs
Recharge-able NiMH - Low self discharge	28 hrs	4 hrs

Note: While the indicator flashes, the headphones will continue to operate normally until the battery is fully depleted. Then the headphones will emit a soft clicking noise for approximately one minute before shutting down.

Troubleshooting

No noise reduction

- Make sure the headphones power is switched on. The power indicator should glow solid green.
- Replace the AAA battery. The power indicator blinks green when the battery is low.

Low or no volume

- Make sure a music source is playing and the volume is turned up.
- Make sure both ends of the audio cable are firmly connected.

Crackling noise; intermittent loss of noise reduction

- Make sure both ends of the audio cable are firmly connected.
- Replace the AAA battery.

Low rumbling sound

- Adjust the fit of the headphones on your ears.
- Make sure no foreign objects are inside the earcups and the port holes are not blocked.
- Replace the AAA battery.

Microphone is not working

- Make sure you are using a compatible Samsung Galaxy device.
- Make sure both ends of the audio cable are firmly connected.
- Make sure the port holes on the earcup are not blocked.
- Try another phone call.
- Try another compatible device.

Device is not responding to (remote) button commands

- Make sure you are using a compatible Samsung Galaxy device.
- For multi-press functions, vary the speed of button presses.

For your records

The serial number is located on the warranty card included in the carton and on a label inside the right earcup (R).
Serial number:

Please keep your receipt with the owner's guide.

Now is a good time to register your headphones. You can do this easily by going to <http://global.Bose.com/register>.

Samsung Galaxy is a trademark of Samsung Electronics Co., Ltd.

©2015 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.




United States	1-800-367-4008
Australia	1800 061 046
Austria	0800-2673 444
Belgium	80092815
Canada	877 650 2073
China	86 400 880 2266
Denmark	80337799
Finland	80005505
France	0800 857 758
Germany	0800 2673 444
Hong Kong	852 2123 9000
Hungary	+43 1 6040 434 31
India	1800 11 2673
Ireland	1800656755
Italy	800 83 22 77
Japan	0570 080 021
Latin Markets	508 614 6000
Luxemburg	0800 92835
Mexico	001 800 900 2673
Netherlands	8002674333
New Zealand	0800 501 511
Norway	80081190
Poland	(48) 22-853-0031
Sweden	20909060
Switzerland	0800 880 020
Taiwan	886 2 2514 7977
United Arab Emirates	800 2673
United Kingdom	8081688972

For additional countries, please visit:
<http://global.Bose.com>



©2015 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM742963 Rev. 00

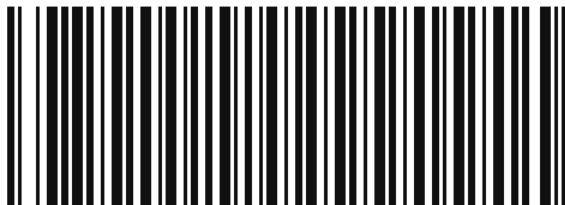

742963-0010