


SpeedAC iQ – Add a new language

N.B. *Need to download RTC CONFIGURATOR from the SpeedAc iQ Knowledge base

****Work only with version V2.5.0 and up for Net, Gross and Duplex weigher!**

****Work only with version V3.1.0 and up for IP weigher!**


- Download the Excel file **SpeedACiQ_SpareLanguage.xlsm** from the SpeedAc iQ Knowledge base
- Open the file and fill it with the names corresponding to the **TX_** of the new language. (Refer to English file).



- And make sure to fill the entire **SpareLanguage** column (i.e)

Text Strings	SpareLanguage
TX_LANG_TRANSLATED	Yes
TX_LanguageName	New language
TX_SCALE_TYPE	
TX_BATCH_NAME	
TX_BATCH_DETAILS	
TX_BATCH_COUNTALL	
TX_BATCH_PRESET	
TX_ID_ACTUAL_PROD	
TX_CONFIRM_RESETLIFETIME	
TX_BATCH_CURRENT_PROD	
TX_BATCH_MIN_ACCEPTED	
TX_BATCH_RESIDUE	
TX_BATCH_MAX_ACCEPTED	
TX_ID_LIFETIME_PROD	
TX_ID_NOMINAL_WEIGHT	
TX_ID_UNITS_DONE	
... Generate translate.ini English (+)	

- Create a new folder in your **local disk C** called **TestTranslate**.
- Then click the button **.ini** to generate the file translation.ini.

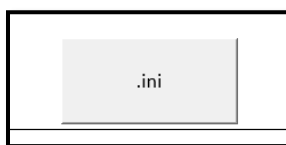


- The file **translation.ini** will be in the folder indicated in the Excel file (**C:\TestTranslate**).

Destination Path: C:\TestTranslate

 **translation.ini**

- Open RTC CONFIGURATOR and then connect the controller. Click on Device, select **FTP Browser**.

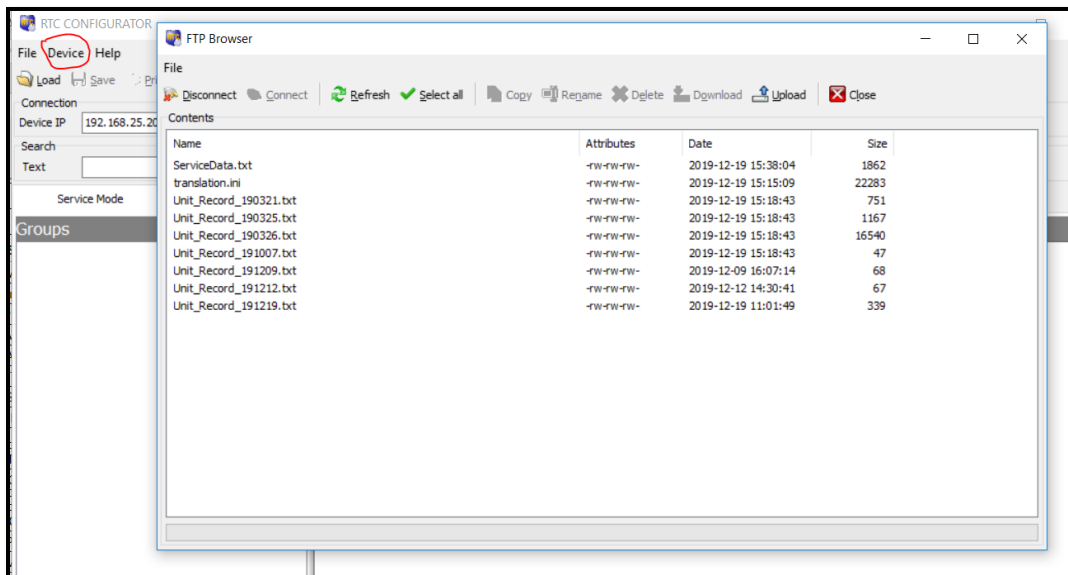

- Upload the file **translation.ini** and then restart the controller.

