

[BioStar 2](#), [RS485](#), [antipassback](#), [localzone](#)

## Local Anti-Passback configuration (No License)

This document will guide you how to configure Local Anti-Passback zone which is provided without license.


### RS-485 Mode

Local zone means RS-485 based, master device is zone master. Please refer to the below link for RS-485 configuration.

[RS485 Mode \(Master, Default, Slave\)](#)

### Door configuration

Go to Device tap, click Add Door and configure the door which you want to set up Anti-Passback zone.

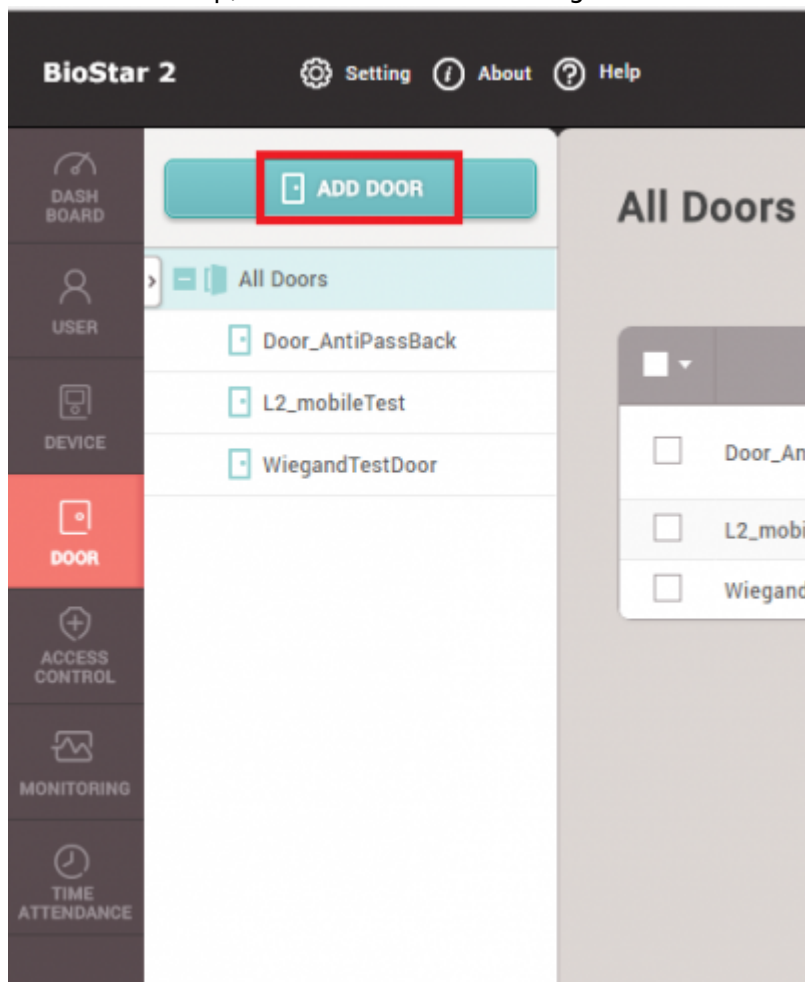

Assign each Entry device and Exit device to the devices you have already added at the above step. (RS-485 Master and Slave devices)

**Door\_AntiPassBack** 1/3

**Information**

- Name: Door\_AntiPassBack
- Description: abc
- Group: All Doors

**Configuration**

**Entry Device:** BioStation 2 546832586 (192.168.14.228)\_TEST2

**Door Relay(s):** None

**Exit Button:** BioStation 2 546832586 (192.168.14.228)\_TEST2

**Door Sensor:** BioStation 2 546832593

**Exit Device:** None

**Switch:** Normally Open

**Door\_AntiPassBack**

**Information**

- Name: Door\_AntiPassBack
- Description: abc
- Group: All Doors

**Configuration**

**Entry Device:** BioStation 2 546832586 (192.168.14.228)\_TEST2

**Door Relay(s):** Relay 0 of BioStation 2 546832586 (192.168.14.228)\_TEST2 Device

**Exit Button:** Input Port 0 of BioStation 2 546832586 (192.168.14.228)\_TEST2 Device

**Door Sensor:** None

**Exit Device:** None

**Switch:** BioStation 2 546832586 (192.168.14.228)\_TEST2

BioStation 2 546832593

Once you assigned Entry Device and Exit Device, Anti-Passback and Alarm menu will be added at the bottom.

**Configuration**

**Entry Device:** BioStation 2 546832586 (192.168.14.228)\_TEST2

**Door Relay(s):** Relay 0 of BioStation 2 546832586 (192.168.14.228)\_TEST2 Device

**Exit Button:** Input Port 0 of BioStation 2 546832586 (192.168.14.228)\_TEST2 Device

**Door Sensor:** None

**Exit Device:** BioStation 2 546832593

**Switch:** Normally Open

**Option**

**Open**

**Open Time:** 3 sec

**Dual Authentication**

**Device:** No device

**Anti PassBack**

**Type:** None

**Alarm**

**Anti PassBack:** Action

**Add**

From:  
<https://kb.supremainc.com/knowledge/> -

Permanent link:  
[https://kb.supremainc.com/knowledge/doku.php?id=en:2xfaq\\_how\\_to\\_configure\\_anti-passback\\_zone\\_basic-no\\_license](https://kb.supremainc.com/knowledge/doku.php?id=en:2xfaq_how_to_configure_anti-passback_zone_basic-no_license)

Last update: 2017/10/26 15:58