



Manual for AE UTM – Machine 1.0

1. Login Page:

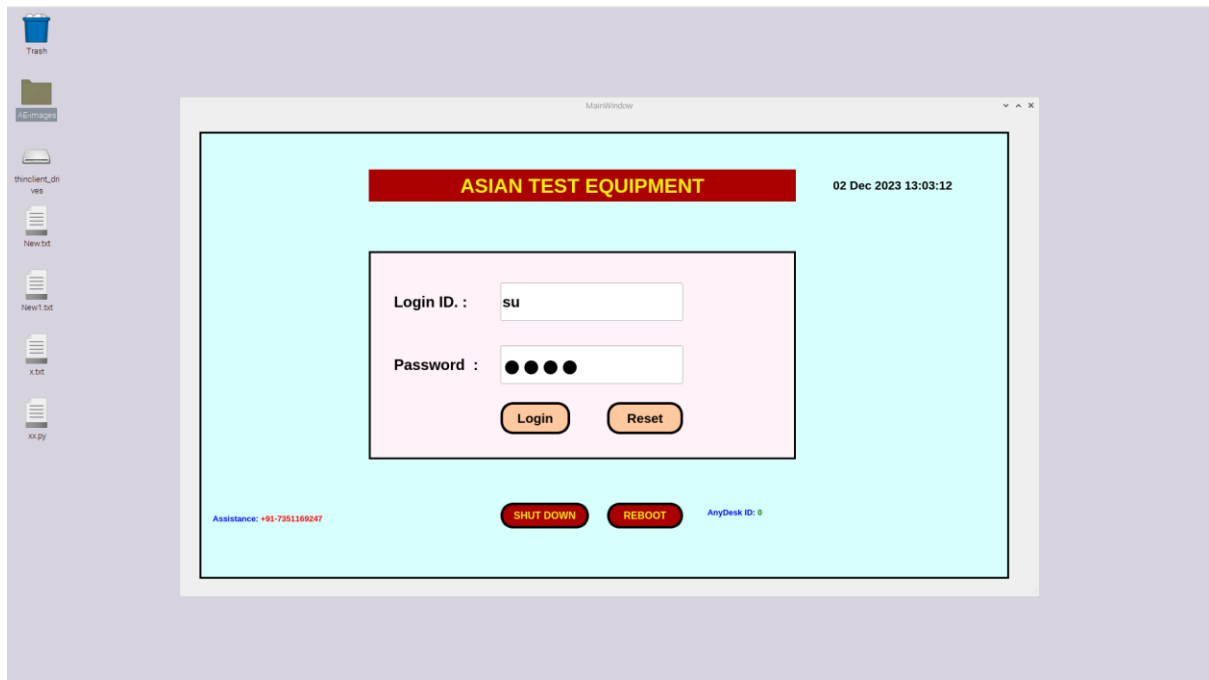


Here use "1000" as password.


2. Main Page:

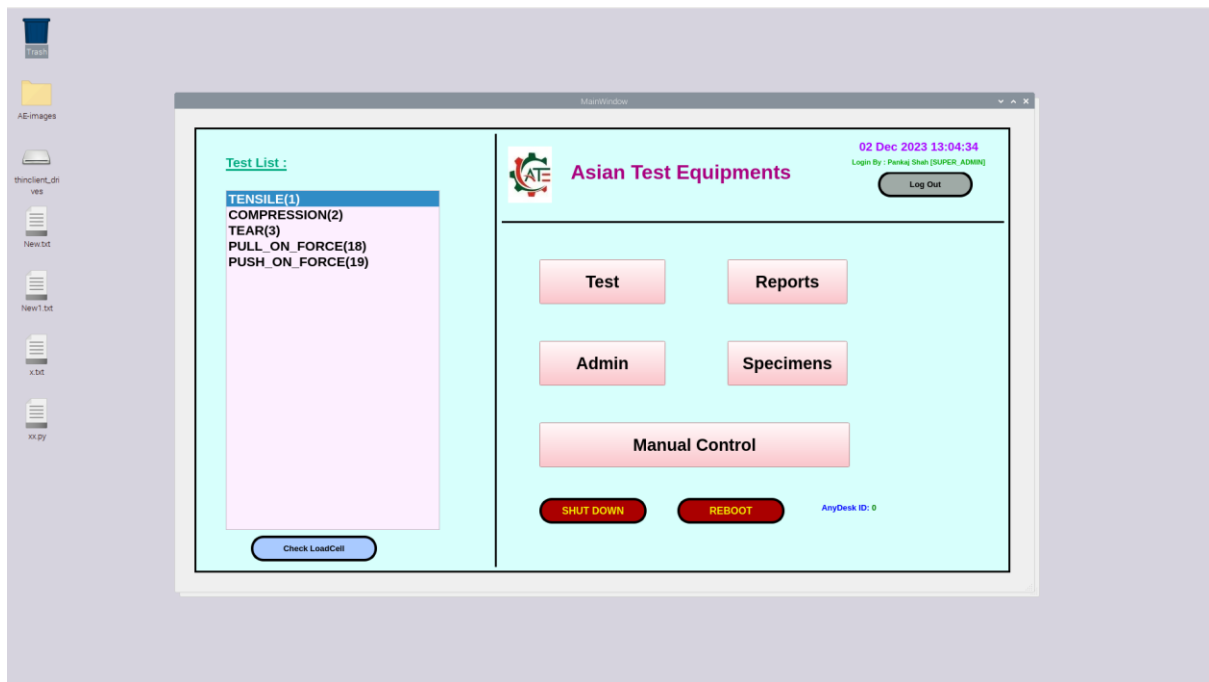


3. Set Load Cell:

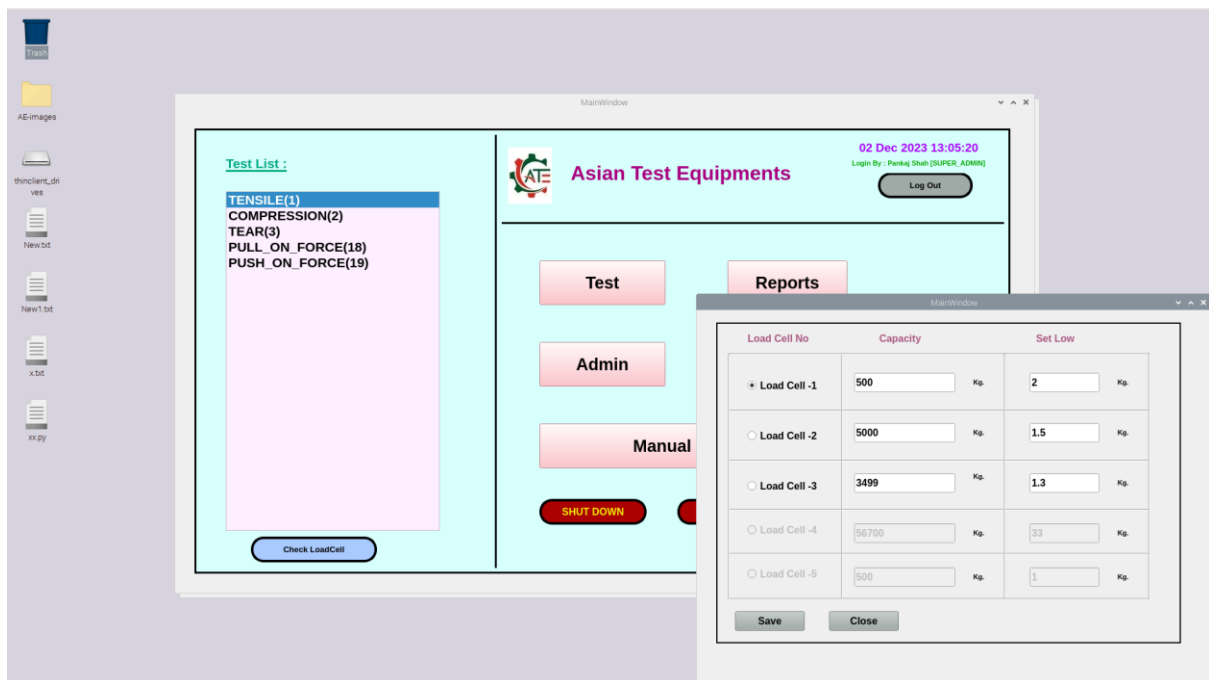

4. Manual Control UP-DOWN Motor:

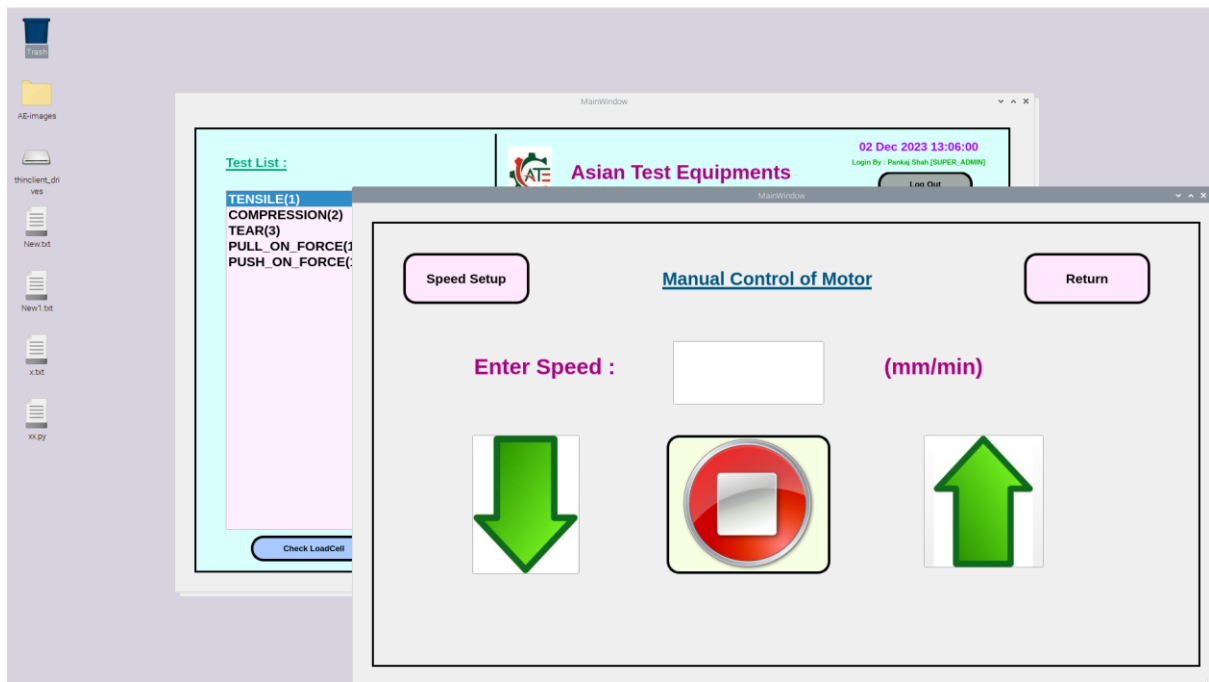


5. Tensile Test Page :

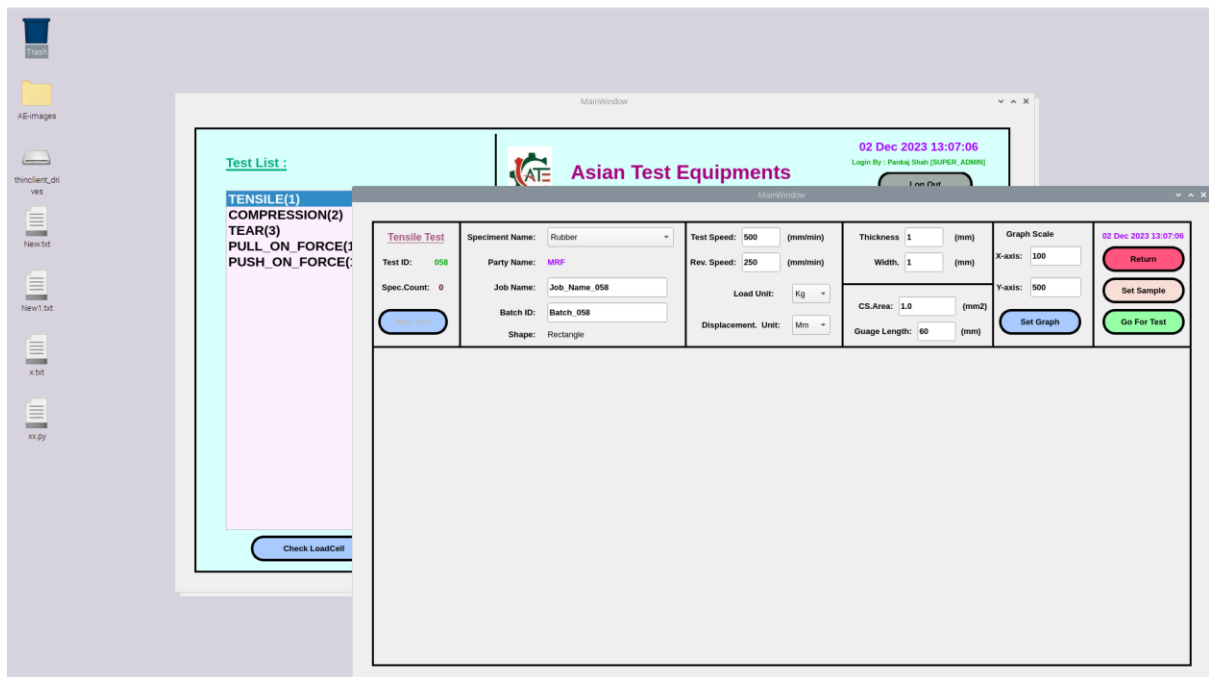


6. Tensile Test Start Page:




7. Admin Page:

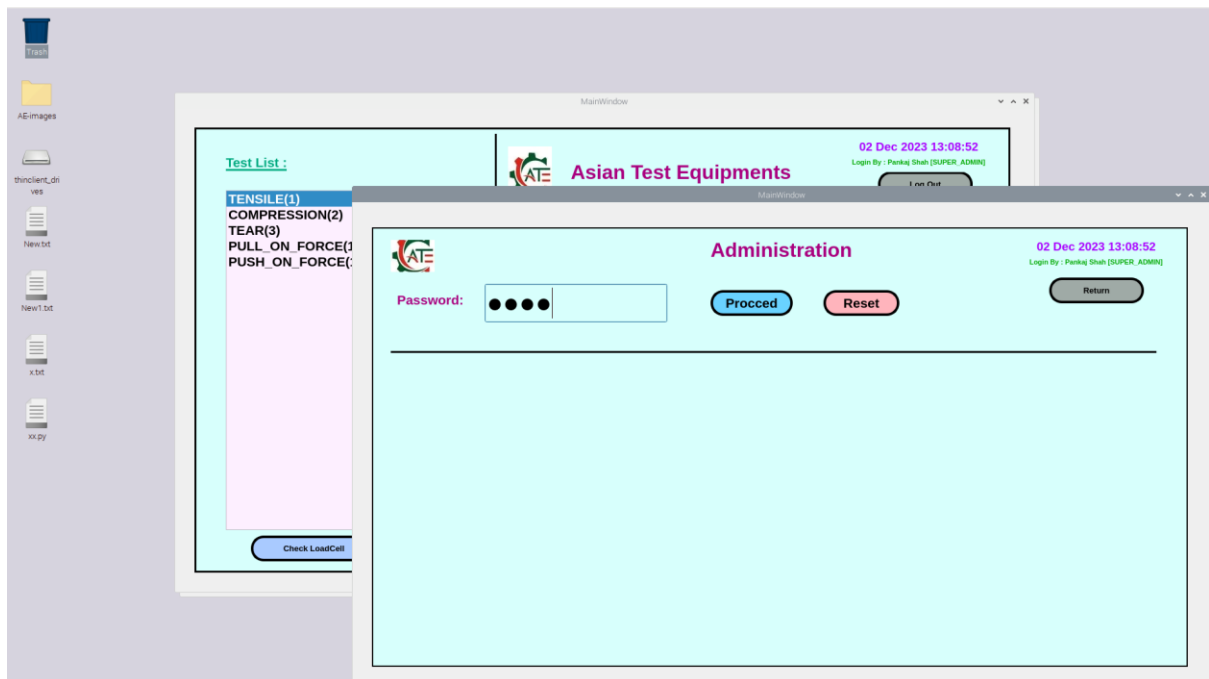


8. Admin Page Detail Icons:

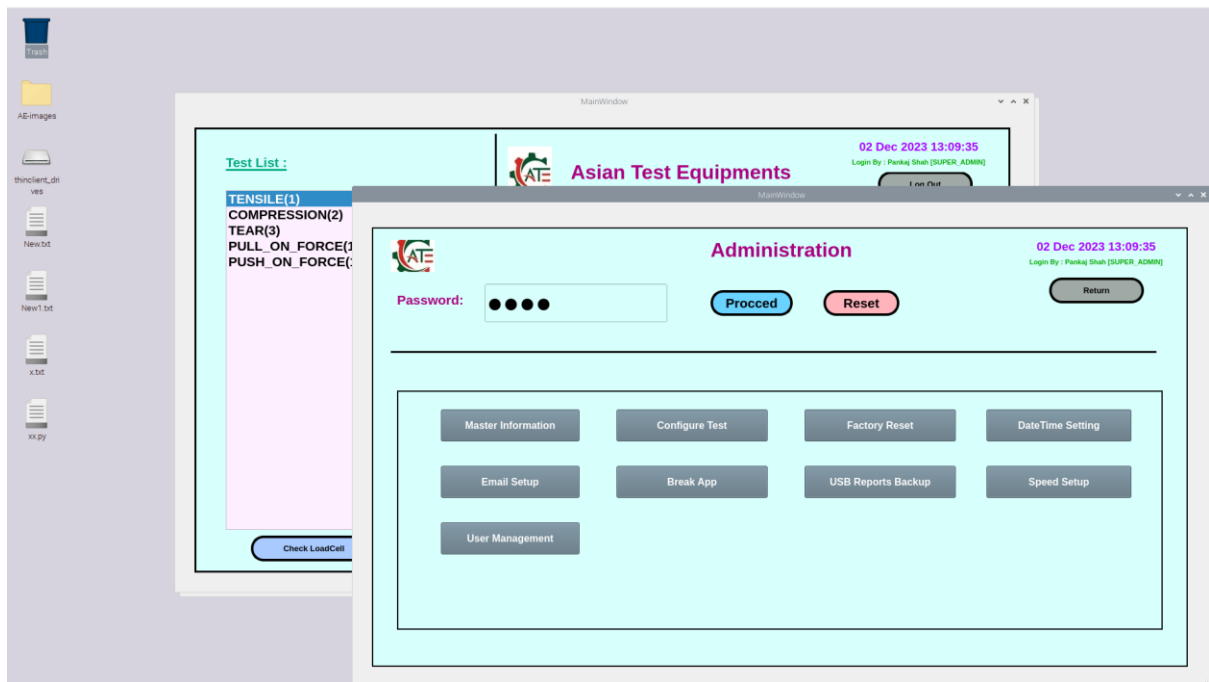


9. Report List Page:

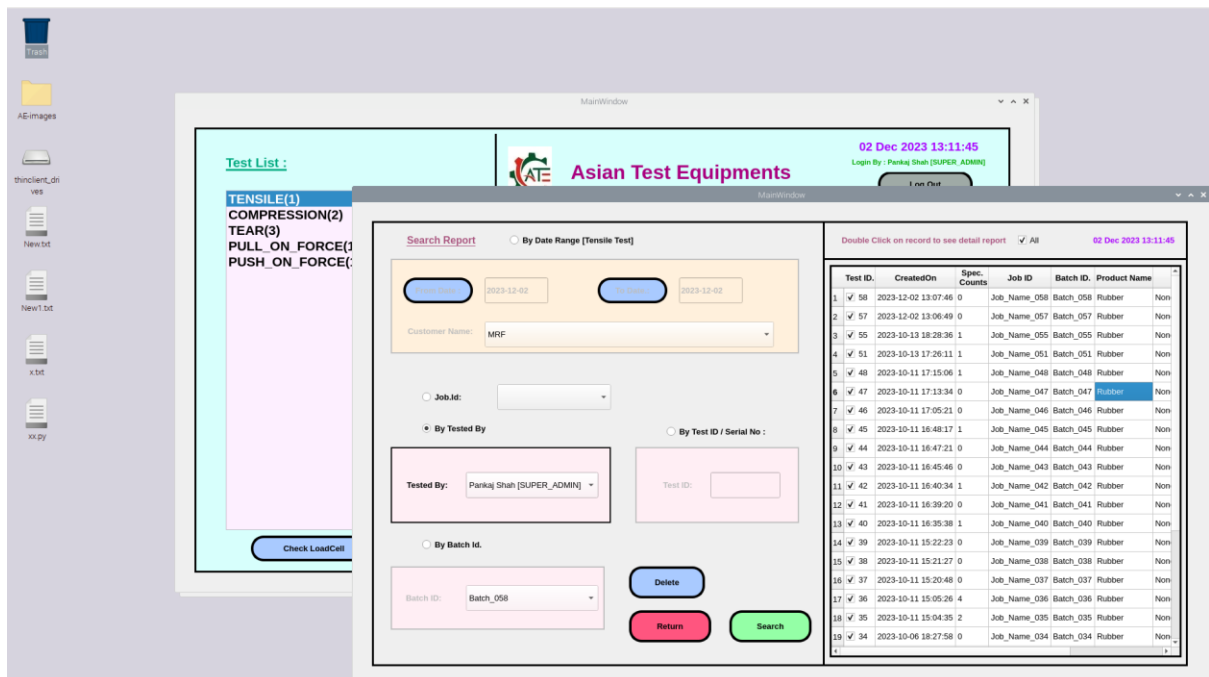

10. Report Details:

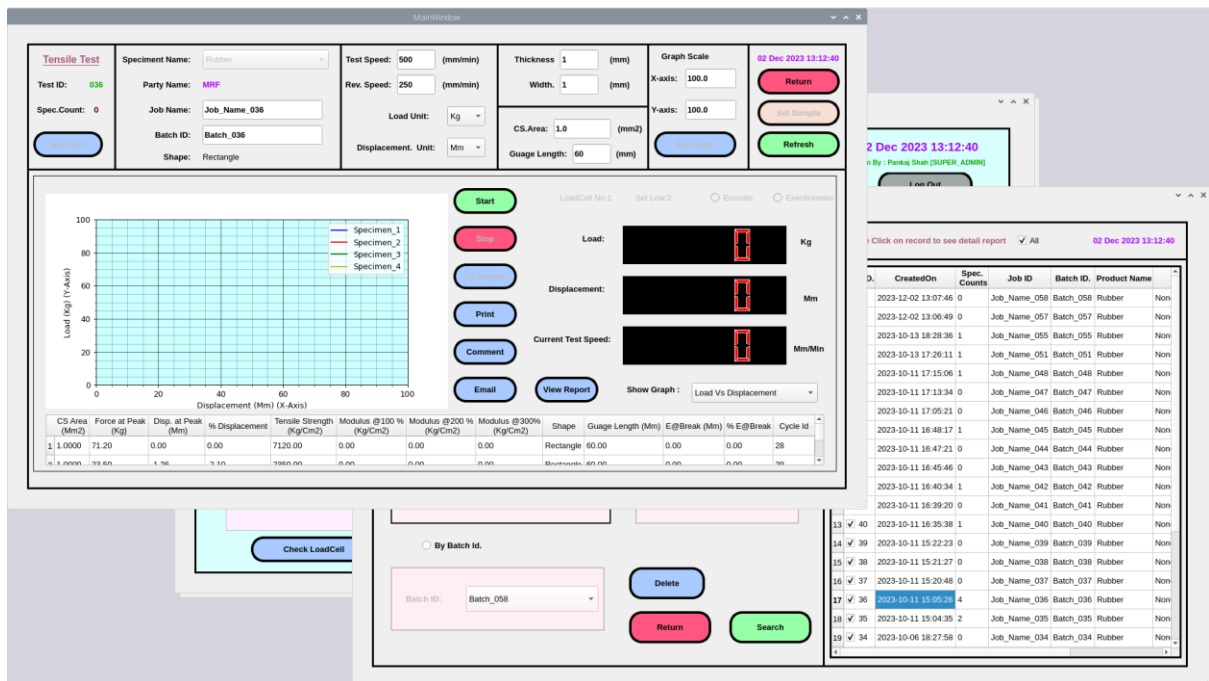

11. Report PDF View:

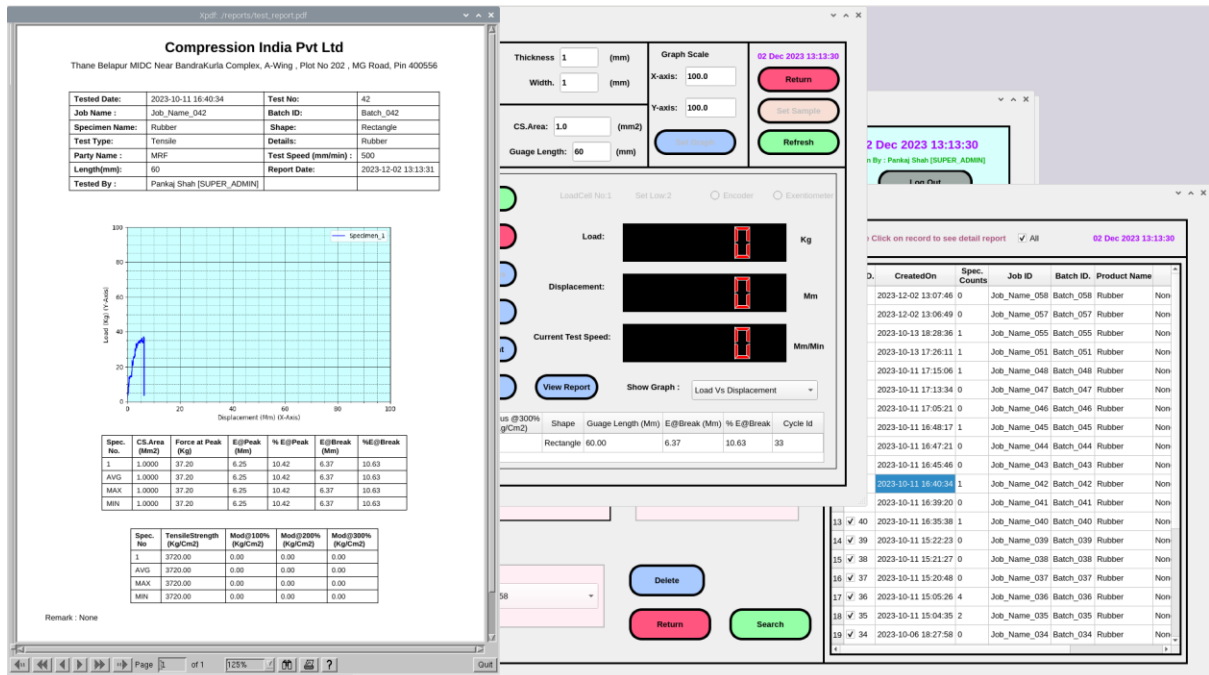

12. Specimen List:

