


7. External Interface

The following ports are configured:

- COM1B (USB-B), 1 port : for PC connection
- USB (USB-A), 2 ports : for sample barcode reader and printer connection

<NOTE>

- The sample barcode reader or the printer can be connected to either the top or the bottom USB connector.
- Do not connect a USB HUB to the USB connector on this machine.

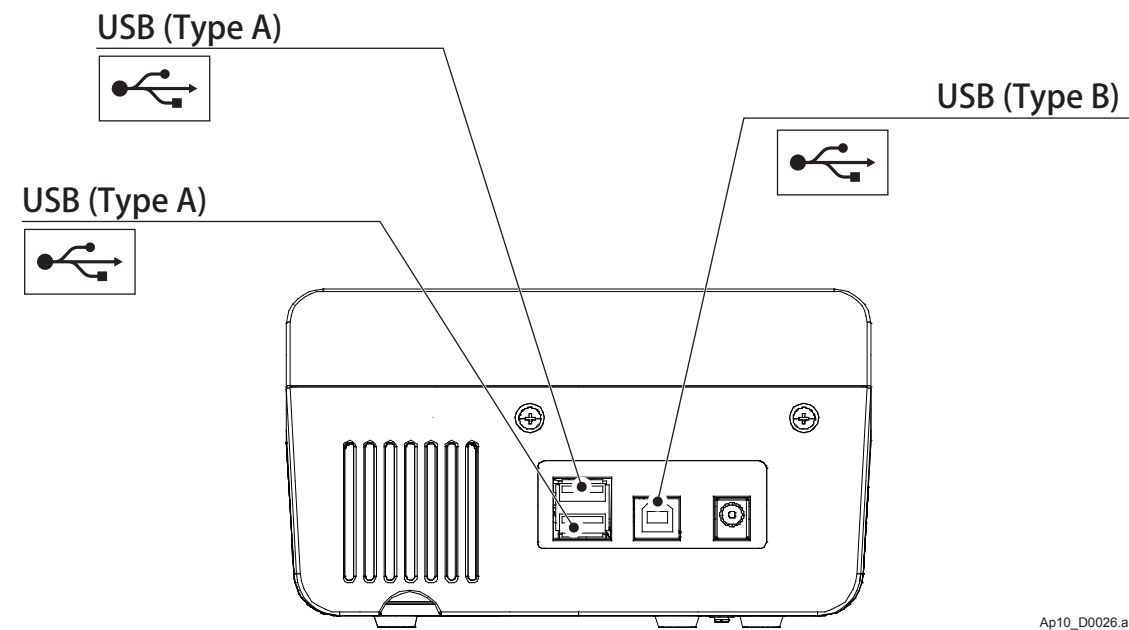

8. Media

This equipment supports USB memory. (For service/maintenance only)
USB memory is used to update software or parameter files, or to save data such as measurement results.

<NOTE>

Ensure that the USB memory to be used is not locked by password or other means.