


# Quick Start Guide


1

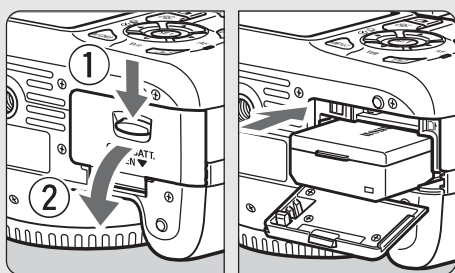

**Insert the battery.** (p.22)

- To charge the battery, see page 20.


2

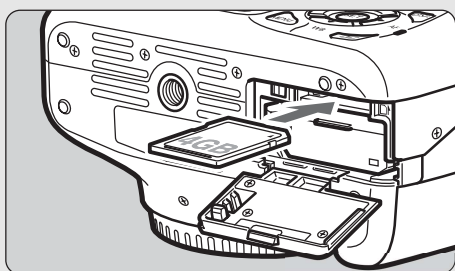

**Insert the card.** (p.22)

- With the card's label facing toward the camera back, insert it into the slot.


3

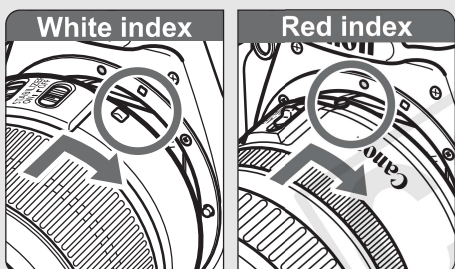

**Attach the lens.** (p.29)


- Align the lens' white or red index with the camera's index in the matching color.

4

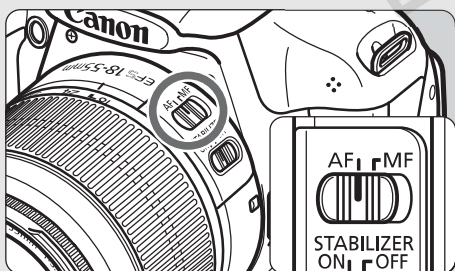

**Set the lens focus mode switch to <AF>.** (p.29)


5

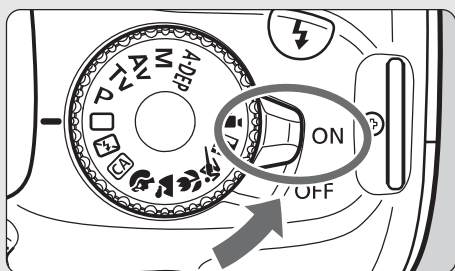

**Set the power switch to <ON>.** (p.25)

- When the LCD monitor displays the Date/Time setting screen, see page 27.

6

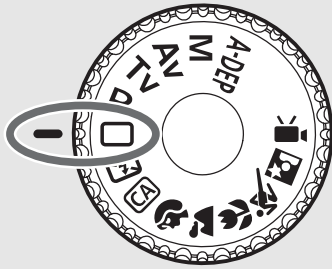

## Set the Mode Dial to **<□>** (Full Auto). (p.42)

- All the necessary camera settings will be set automatically.


7



## Focus the subject. (p.33)

- Look through the viewfinder and aim the viewfinder center over the subject.
- Press the shutter button halfway, and the camera will focus the subject.
- If necessary, the built-in flash will pop-up automatically.

8

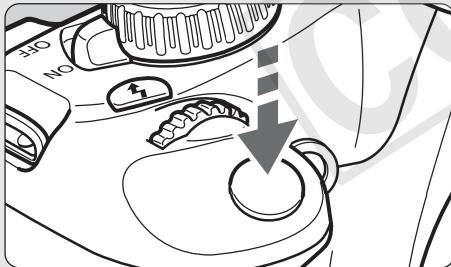

## Take the picture. (p.33)

- Press the shutter button completely to take the picture.

9



## Review the picture. (→ )

- The captured image will be displayed for approx. 2 sec. on the LCD monitor.
- To display the image again, press the **<▶>** button (p.70).

- To shoot while looking at the LCD monitor, see “Live View Shooting” (p.55).
- To view the images captured so far, see “Image Playback” (p.70).