


7. INFORMATION SIGNS AND MARKINGS

This chapter describes the labels and the location of signs are described on the aircraft.

7.1. PANEL


All designations for switches, controls and fuses are printed directly on the panel. The printing depends on the cockpit configuration.

Example of an analog configuration:

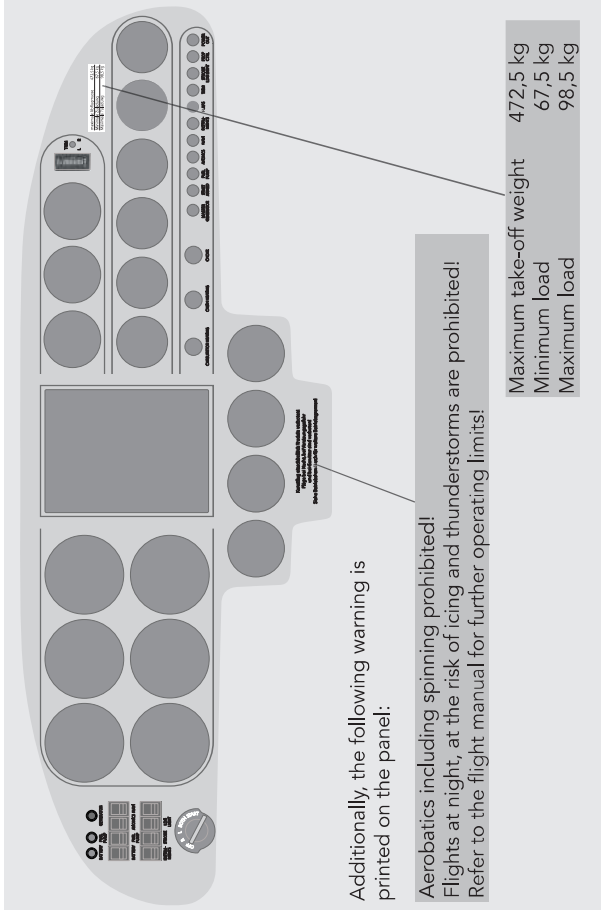

The warnings may vary according to configuration are also available at other locations of the panel, however, are always clearly visible to the pilot and may not be removed.

7.2. FURTHER MARKINGS

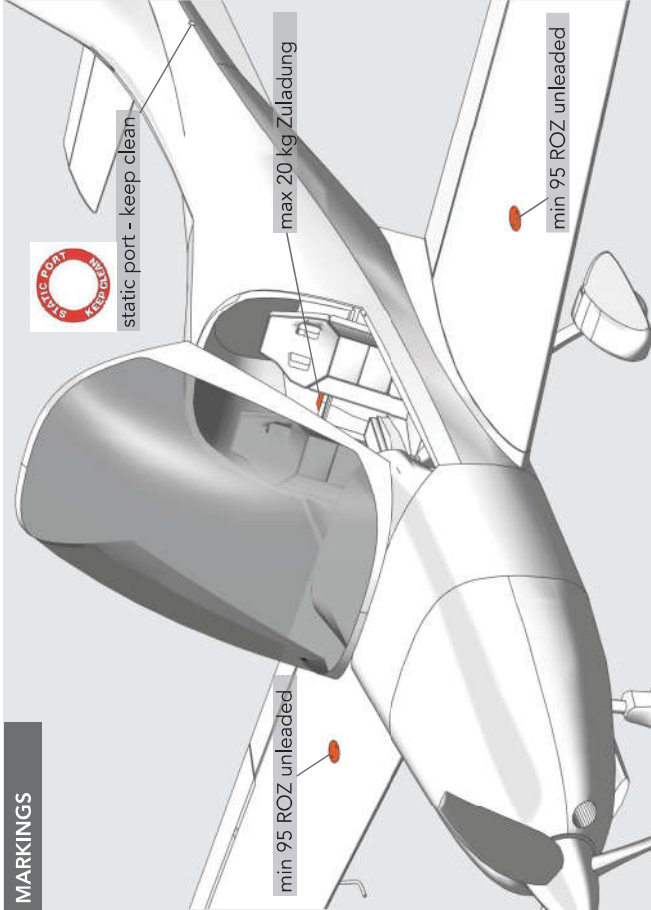

Tankcover: min 95 ROZ unleaded
Baggage compartment: max 20 kg load
Static port - keep clean

7.3. AIRSPEED INDICATOR MARKS

Marking	IAS (km/h)	Remark
White arc	69 – 119	Operating range with full flaps extended
Green arc	94 – 200	Normal operating range
Yellow arc	200 - 274	Caution range, only in good weather condition
Yellow line	170	Max. maneuver speed
Red line	274	Never exceed speed

