


A0: Start button
A6: LED Strip Next Tile (Left)
A7: LED Strip Next Tile (Right)

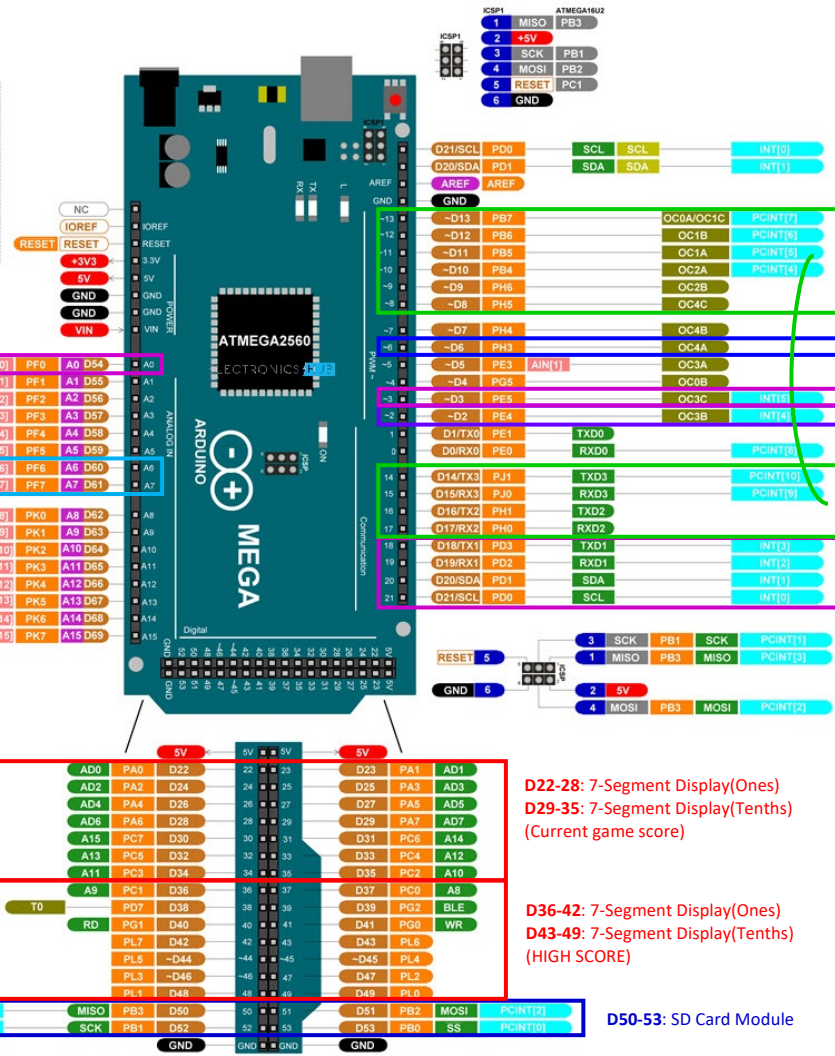

D8-13: LED Strips 5 - 10
D6: Speaker (Sound)
D3: Instant place button
D2: Speaker (Music)
D14-17: LED Strips 1 - 4
D18: Speed up block button (down)
D19: Move block button (left)
D20: Move block button (right)
D21: Rotate button (up)

D22-28: 7-Segment Display(Ones)
D29-35: 7-Segment Display(Tenths)
(Current game score)
D36-42: 7-Segment Display(Ones)
D43-49: 7-Segment Display(Tenths)
(HIGH SCORE)

D50-53: SD Card Module