



13 Keypad User Guide

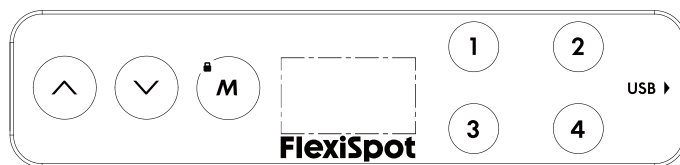

• Child lock function:

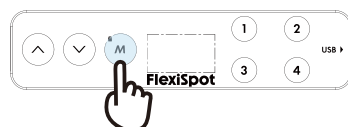


- When the child lock is turned on, the child lock blue indicator light (V and M directly above) lights up.
- Press the button indicator to flash once.
- To unlock or start the child lock, you need to press and hold the M button for about 5 seconds.
- Only when the child lock is unlocked, all the buttons can work normally.

• Height Adjustable Function:




Press the " ^ " or " v " button to adjust the height. The LED display shows the current height.

• Height Memory Function:

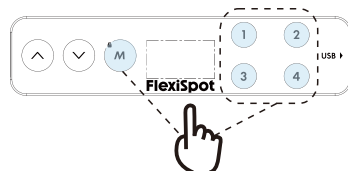


- Press UP or DOWN button and adjust the height to the desired height. Press "M" to save the height, and the screen will display "5- 1"; Press "1", "2", or "3", "4" then, that is, save the height to the corresponding position 1 or 2 3, or 4, which will show in the display screen as "5- 1", "5-2", or "5-3", or "5-4";
- Press "1", "2" and "3", "4" button directly to automatically adjust the memory height you saved.

• Collision prevention sensitivity adjustment - optional features:

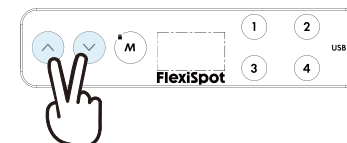

- Press and hold the " ^ " " v " button for 5 seconds at the same time to switch the sensitivity. There are four levels of sensitivity (A-3, A-2, A-1, A-0). Each operation will switch the sensitivity into the next level.
- The display shows "A-0", the anti-collision function is off; the display shows "A-1", low sensitivity; Display shows "A-2", medium sensitivity; display shows "A-3", high sensitivity;
- During height adjustment, when tabletop comes in contact with another object, it instantly stops and reverses to avoid damage.
- Press and hold the " ^ " " v " button for 5 seconds at the same time. If the display does not display the above code, there is no anti-collision function.

• Troubleshooting:

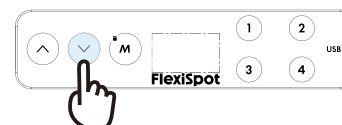

- Reset: When the LED shows " RST ", press " v " button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
- When it doesn't work and the LED shows "E01" or "E02", please retry 18 mins later.
- If the " v " button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press " v " button to start the reset process when it shows the " RST ".
- If all these above process are inefficient, plz contact our customer service.