
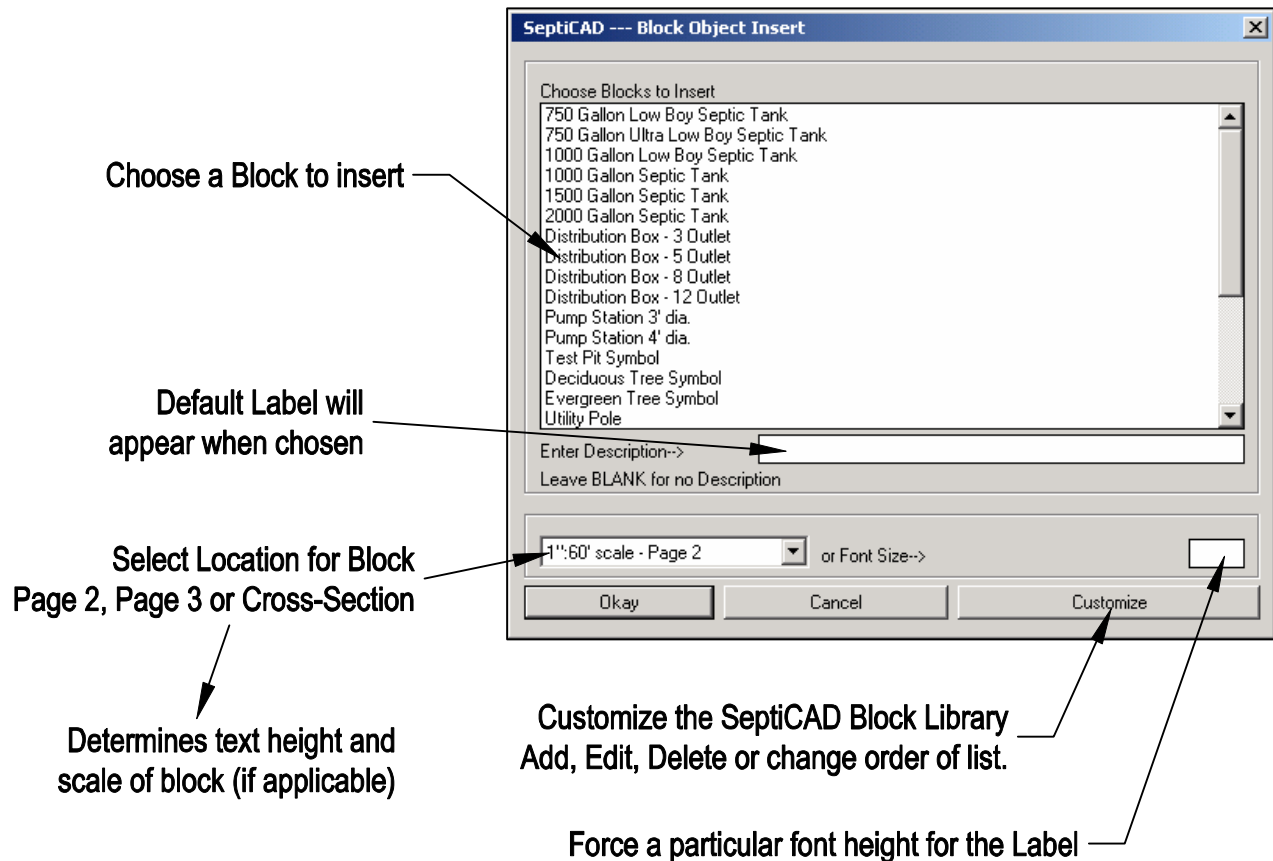



SeptiCAD Block Library

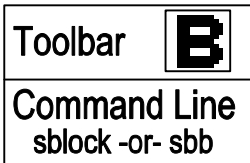

Each SeptiCAD Block Library Item is inserted is dependent on the type of object (e.g. test pit symbol -vs- septic tank). To use the tool follow the steps below:

- (1) Select an item and where you want to insert the block.
- (2) Press OKAY button
- (3) The program automatically changes to MODEL space and asks for a point to insert the block.
- (4) For some items, such as a septic tank or D-box, the user will be prompted to rotate the object.

Customize the SeptiCAD Block Library

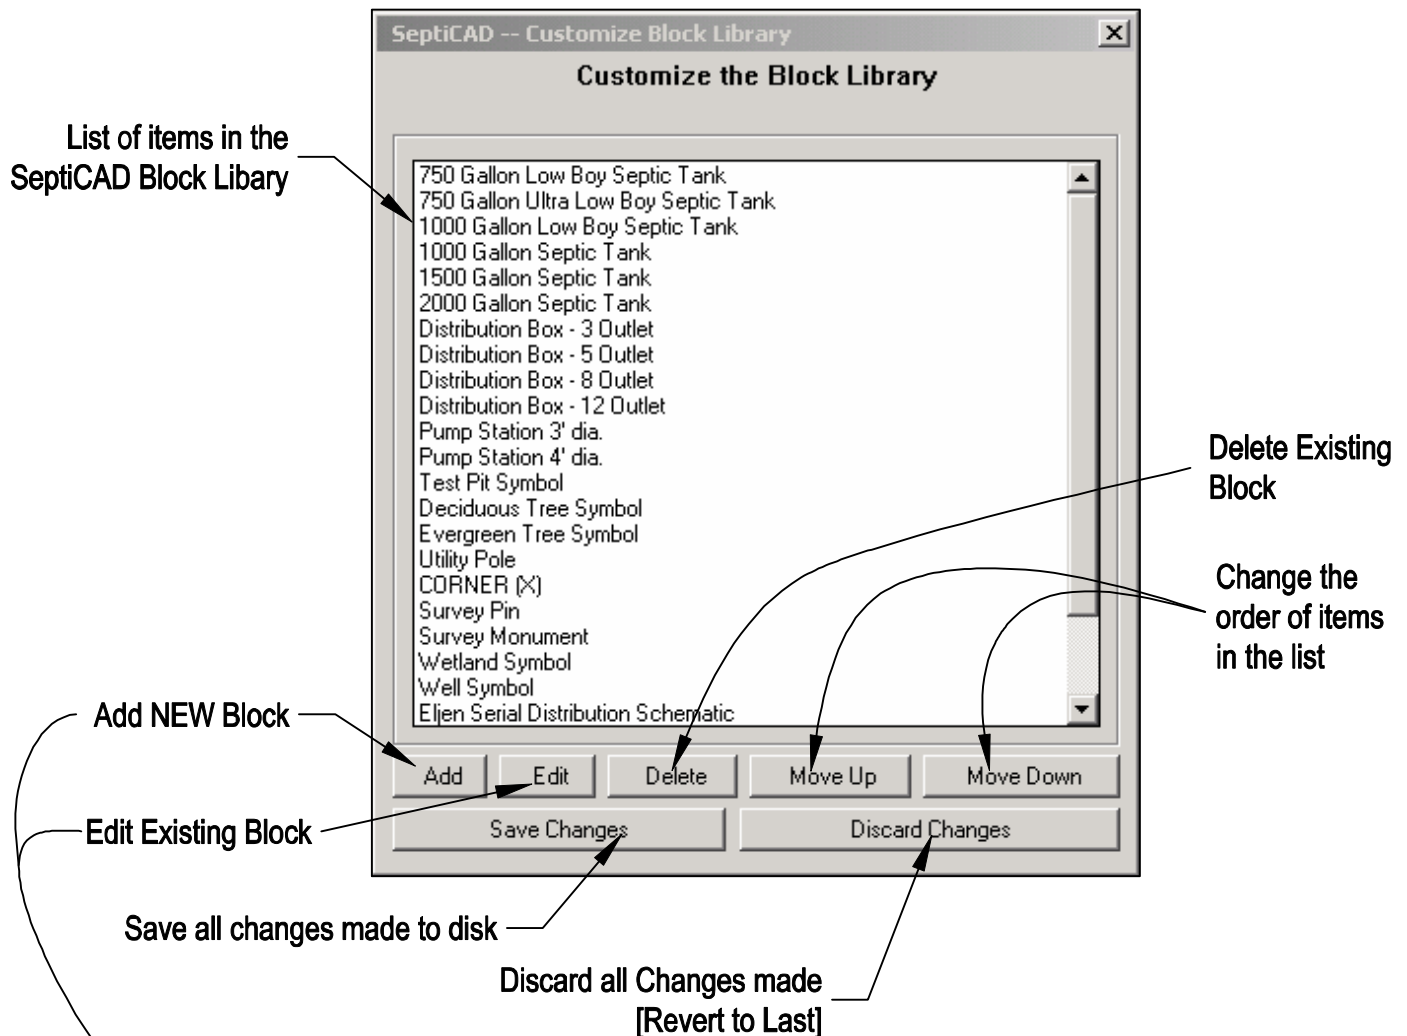

Add/Edit SeptiCAD Block Item

