
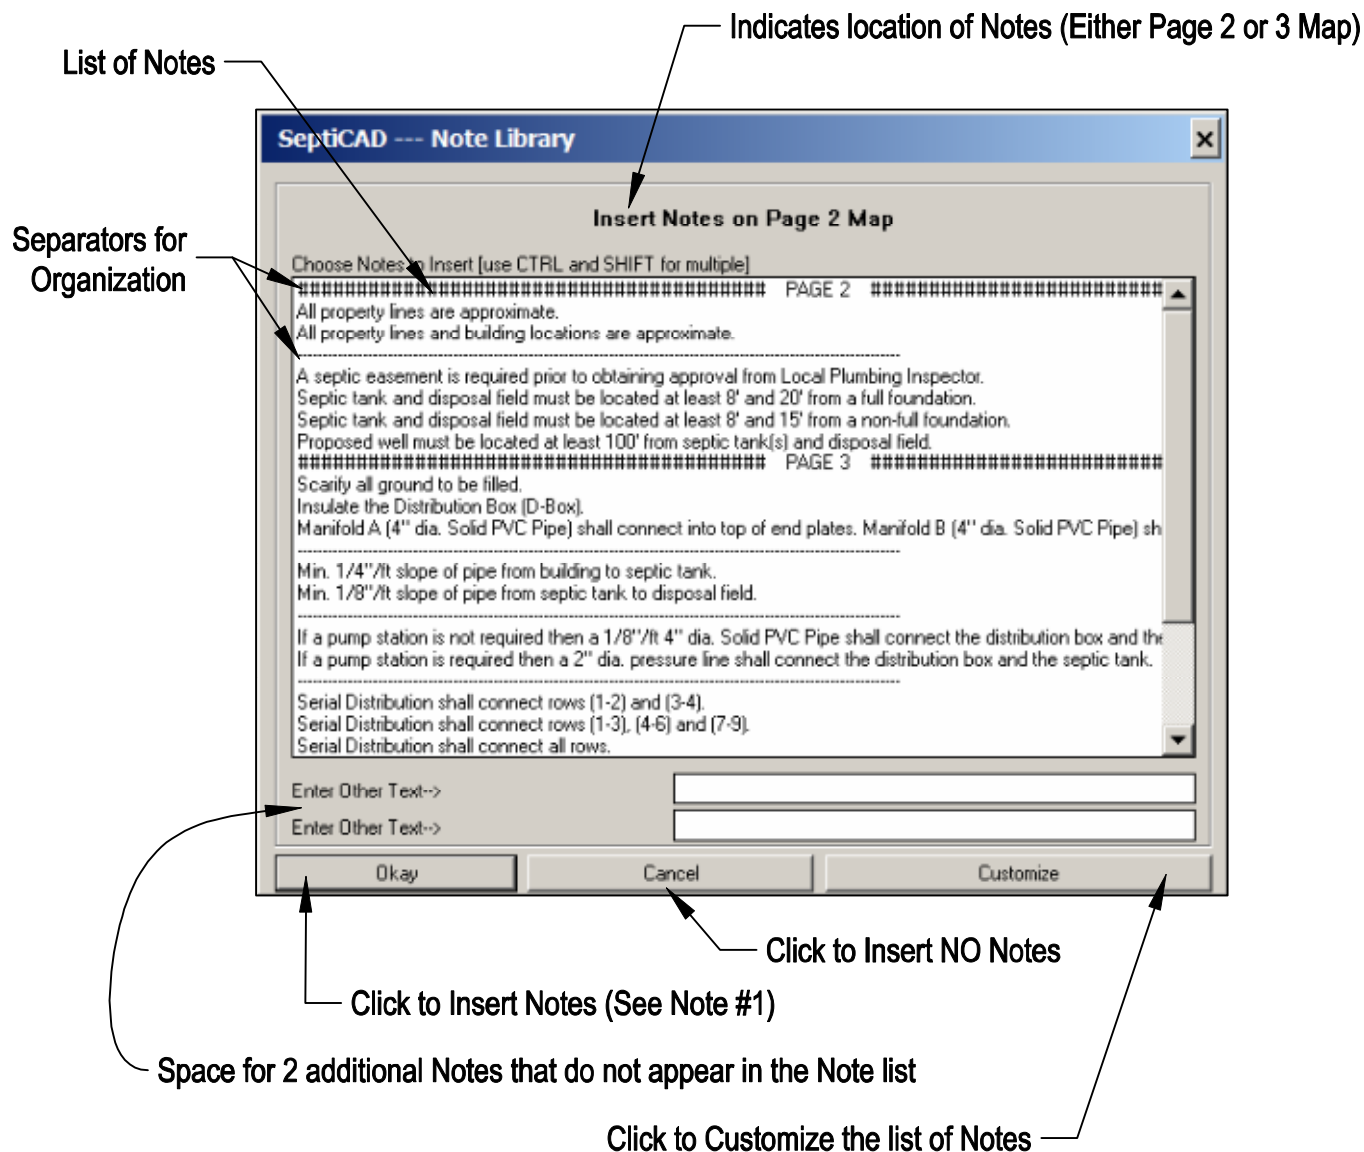



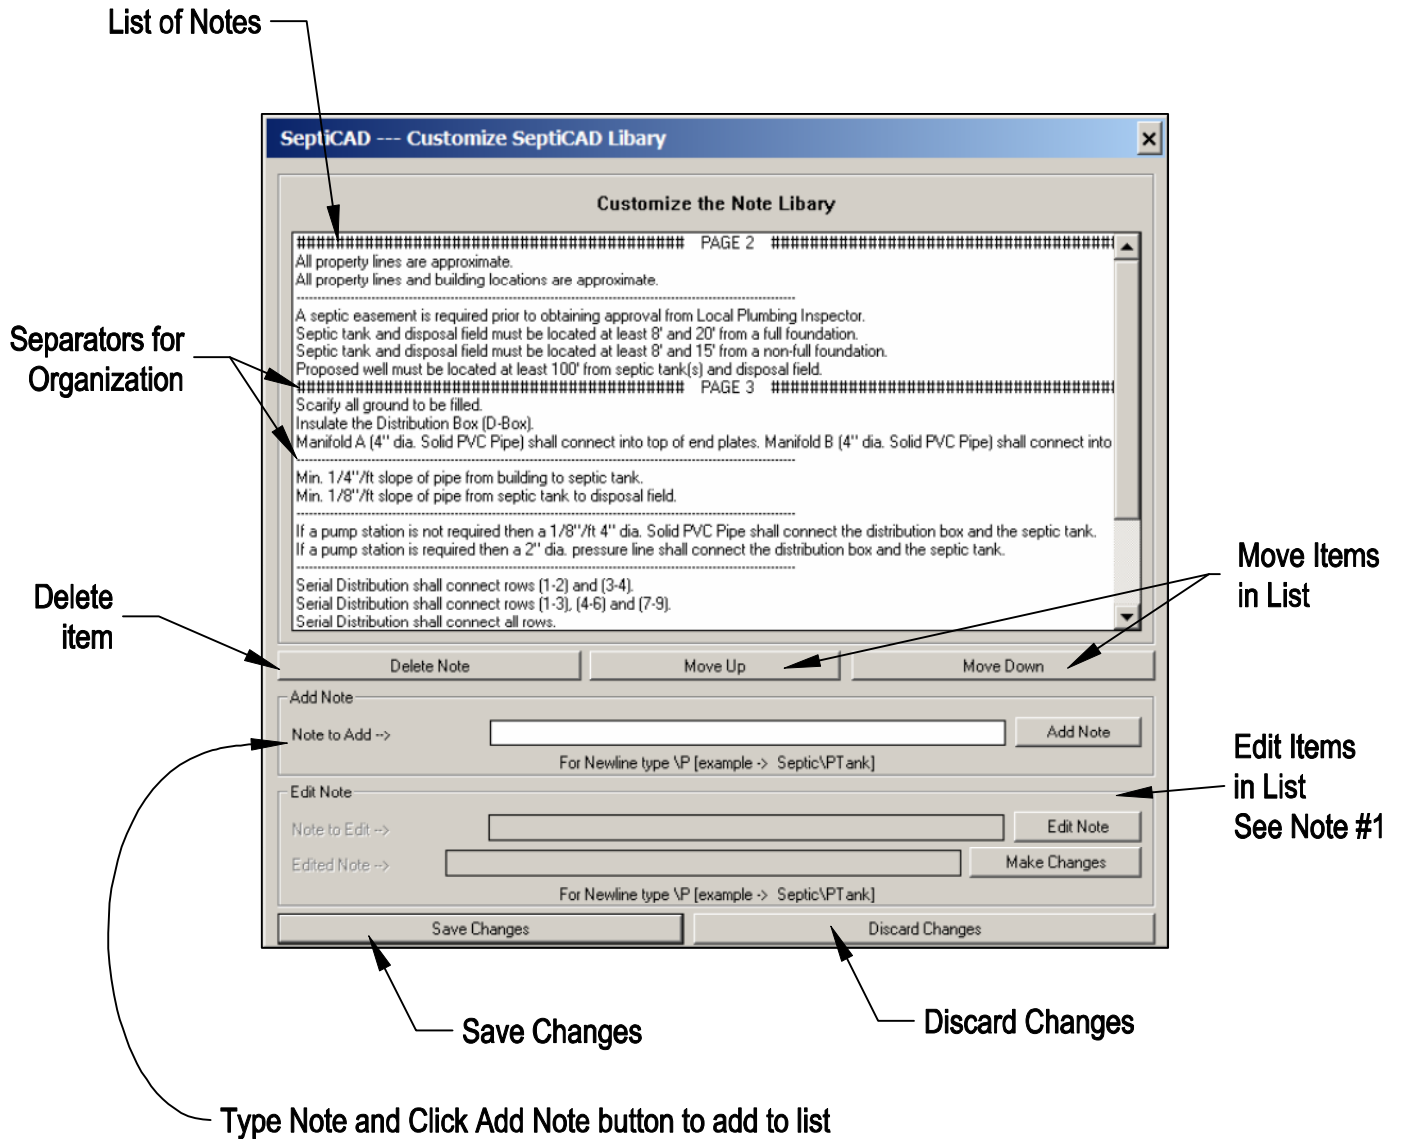
# SeptiCAD Note Library

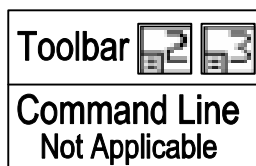

## NOTES:

- (1) The default location and text size of Notes on Page 2 & 3 Maps is set in the SeptiCAD Preferences  .  
If the design information is not in memory, then designer will be prompted for two points that will define the bounds of the Notes.

# Customize the SeptiCAD Note Library



## NOTES:

(1) To edit a Note, select the note and click Edit Note button. Edit the Note, then click Make Changes Button.