
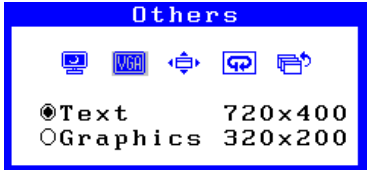




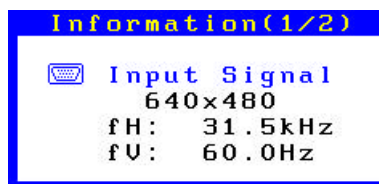


| | Function | | | | | | | | | | |
|---|--|--------|--|-------|---|--------------|---|--------|--|----------|---|
|  VGA Selection  | <p>Selecting Appropriate VGA Mode</p> <p>The two display modes, VGA 720 x 400 (70 Hz) and 320 x 200 (70 Hz), have the same signal timings. Using this adjustment selects the appropriate display mode.</p> <ol style="list-style-type: none"> 1) Select the “VGA Selection” icon and push the Enter button to show the resolution select menu. 2) Select “Text 720 x 400” or “Graphics 320 x 200”, and push the Enter button. <ul style="list-style-type: none"> • This function effects only when the resolution is VGA 720 x 400 (70 Hz) or 320 x 200 (70 Hz). | | | | | | | | | | |
|  Menu Position  | <p>Adjusting Menu's Position</p> <ol style="list-style-type: none"> 1) Select the “Menu Position” icon and push the Enter button to show the menu position menu. 2) Set the position using the control buttons. Then, push the Enter button to return to the Others menu. | | | | | | | | | | |
|  Reset  | <p>Selecting Appropriate VGA Mode</p> <p>Default setting are as follows:</p> <table border="1"> <tbody> <tr> <td>Screen</td><td> <ul style="list-style-type: none"> • Contrast 80% • Brightness 100% • Smoothing 3 </td></tr> <tr> <td>Color</td><td> <ul style="list-style-type: none"> • Mode 1 / Normal white </td></tr> <tr> <td>PowerManager</td><td> <ul style="list-style-type: none"> • VESA DPMS </td></tr> <tr> <td>Others</td><td> <ul style="list-style-type: none"> • Off Timer: Disable </td></tr> <tr> <td>Language</td><td> <ul style="list-style-type: none"> • English </td></tr> </tbody> </table> | Screen | <ul style="list-style-type: none"> • Contrast 80% • Brightness 100% • Smoothing 3 | Color | <ul style="list-style-type: none"> • Mode 1 / Normal white | PowerManager | <ul style="list-style-type: none"> • VESA DPMS | Others | <ul style="list-style-type: none"> • Off Timer: Disable | Language | <ul style="list-style-type: none"> • English |
| Screen | <ul style="list-style-type: none"> • Contrast 80% • Brightness 100% • Smoothing 3 | | | | | | | | | | |
| Color | <ul style="list-style-type: none"> • Mode 1 / Normal white | | | | | | | | | | |
| PowerManager | <ul style="list-style-type: none"> • VESA DPMS | | | | | | | | | | |
| Others | <ul style="list-style-type: none"> • Off Timer: Disable | | | | | | | | | | |
| Language | <ul style="list-style-type: none"> • English | | | | | | | | | | |

• Information



This menu shows the current ScreenManager settings. The menu contains two pages.

Pressing the Enter key displays the following information:

- Page 1: Input Signal
- Page 2: “Color” adjustment settings, “PowerManager” settings, “Others” menu settings

• Language



First select the preferred language to use.

The ScreenManager’s messages will appear in the selected language. This will become the default language when you use the ScreenManager: