

SAFETY


which can cause vehicle body to touch the ground.

- During activation of Traction Pro Mode, service brake may not deliver normal braking performance at very low speed. In case vehicle rolls back on slope please be ready to use hand brake.
- Do not press brake and accelerator pedal together except where Traction Pro Mode is activated


If vehicle is stuck with one wheel continuously spinning, you will receive the notification pop up (in below image) to activate the Traction Pro Mode.



In case you select “yes”, Traction Pro Mode will be activated and you can follow the instructions to take the vehicle out of stuck situation

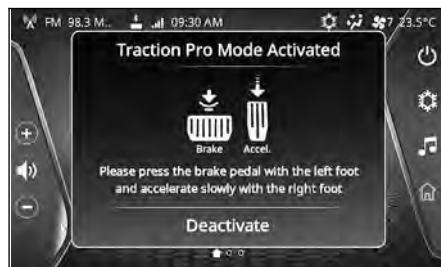


If vehicle comes out of stuck situation, notification pop up as seen in below image.

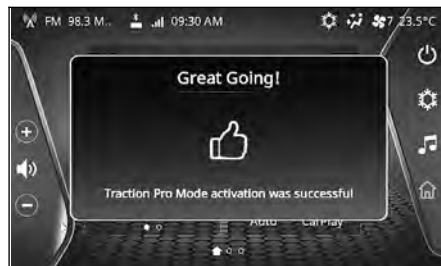

Also, you can deactivate Traction Pro


Mode at any point of time of activation by pressing deactivate button which results in notification pop up as seen in the below image.

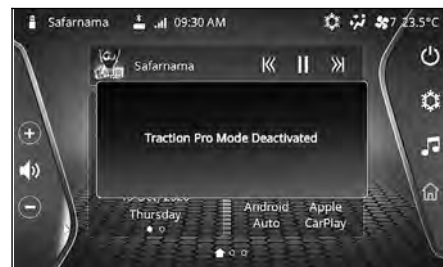

In case there is any system temperature high is identified during the operation of Traction Pro Mode, Traction Pro Mode will be disabled temporarily for around 2 minutes.



If the terrain is beyond physical limit of the Traction Pro Mode, notification pop up as described in below image will be displayed on the infotainment system. Please take external aid to tow the car in this situation.

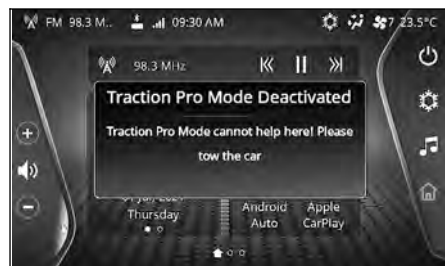

KEYS

A key is an electronic access and authorization system available as a standard feature with your vehicle.

Unlocking Principle

The transponder in the ignition key carries a Unique Identification Code (UID). The vehicle unlocks when the code on the key matches with the code on the Engine Management System (EMS). In case of PEPS variant, Immobilizer function is provided by PEPS ECU.

Engine Starting

When the key is inserted and the ignition is switched to 'ON', all codes are communicated within key, Immobilizer and EMS. The engine will start only if all the codes match.

Loss Of Keys




If one of the keys is lost, Contact the TATA MOTORS Authorized Dealer/Service Center immediately.

WARNING


- Do not turn 'ON' ignition switch by using key with any type of metal wound around its grip or in contact with it. This may be detected as abnormal condition by immobilizer and prevent engine from starting.
- Do not leave the key in high temperature areas. The transponder in it will behave abnormally when reused.
- Do not try to start the vehicle when the Immobilizer indicator lamp on the instrument cluster is glowing. In this condition the vehicle will not start and the vehicle's battery will also be drained due to frequent cranking.

OPENING AND CLOSING

Types Of Key

Sn	Name	Remote Key	Description
1	Mechanical key		<ol style="list-style-type: none">1. Locking all doors2. Unlocking all doors
2	Smart Key (PEPS)		<ol style="list-style-type: none">1. Locking all doors2. Approach light3. Tail gate opening4. Unlocking all doors
3	Flip Key		<ol style="list-style-type: none">1. Unlock2. Approach Light /follow me3. Lock4. Key blade in / out button

SMART KEY (if available)

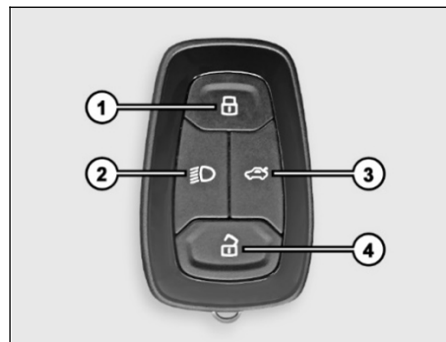

Keep the smart key with user to perform the passive access. It is used for locking, unlocking and starting the vehicle.

1. Locking all doors
2. Approach Light
3. Tail gate opening
4. Unlocking all doors

Locking All Doors

Press the lock button once (1) to lock all the doors of the vehicle.

Successful lock will be indicated by two flashes of turn signal indicators.

Approach Light

This feature helps to find and reach the parked vehicle.

When you press approach light button (2) once, position lamps or low beam and position lamps will turn 'ON'.

To switch 'OFF' the approach lights, press and release the same button or it automatically turns 'OFF' after certain time.

Tail Gate Opening

Press the tail gate opening button once (3) to unlock the tailgate.

Unlocking All Doors

Press the unlock button once (4) to unlock all the doors.

Successful unlock will be indicated by one flashes of turn signal indicators.

NOTE

If smart key battery is low/drained or vehicle battery is low/drained, user can unlock and enter into vehicle by using mechanical key blade, which is present inside the smart key.

OPENING AND CLOSING

Key Blade In/out



Slide the knob (1) to release the key. Pull the key blade (2) out.

SMART KEY FEATURES

Force Panic ON Operation

When vehicle is in OFF condition, if we press lock button and unlock button simultaneously, Force panic operation gets activated. In this case, turn indicators of vehicle start flashing and horn will blow automatically.

Force Panic OFF Operation

By pressing any button of smart key, Force panic operation gets deactivated.

Vehicle Search

In vehicle locked condition, if lock button on smart key is pressed, the turn indicators of vehicle flashes 4 times.

Automatic Activation Of Immobilizer

If smart key is not found within the passenger compartment, engine will be immobilized and vehicle cannot start.

Auto Locking / Unlocking Of Doors / Auto Relock

In PEPS variants, door will get unlocked when ignition is OFF by pressing Start Stop switch.

Anti-grab / Anti-scan Coding

The remote control set of this security system is protected against the use of devices called 'scanners' and 'grabbers' which can record and reproduce some types of remote codes.

Important

- Don't operate Unlock button of remote in the vicinity of your vehicle, as it could lead to an unintentional unlocking your vehicle.
- For battery, replacement procedure refer 'MAINTENANCE' section.
- Do not remove the battery connection of the vehicle while the vehicle has been locked by remote.

Smart Key Precautions


1. If smart key is close to radio transmitter such as radio station or an airport which can interfere with normal operation of the transmitter.
2. If smart key is near a mobile two way radio system or a cellular phone, then it will not work properly.
3. If another vehicle's smart key is being

operated close to your vehicle, signal will fluctuate.

WARNING

Keep smart key away from electromagnetic materials that blocks electromagnetic waves to the key surface.

FLIP KEY

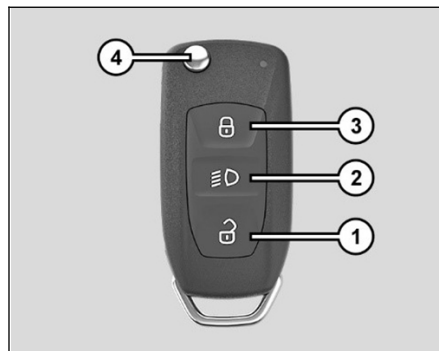

1. Unlock
2. Approach Light /follow me/trunk lid
3. Lock
4. Key blade in / out button

1. Unlocking All Doors

To unlock all doors, press unlock push-button (1) once. Unlocking will be confirmed by single flash of turn indicators.

2. Approach Light / Follow Me

Press approach light button (2) once, low beam, park and roof lamp will turn 'ON' for

OPENING AND CLOSING

60 seconds (default setting). This feature helps to find and reach the parked vehicle or to reach home in dark/ cloudy condition after parking. Red LED will be flashed on the remote. To switch 'OFF' the approach lights, press and release the same button or it automatically turns 'OFF' after 60 seconds.

Tail Gate Opening (if equipped)

Electric Tail gate opening can be done through long press (4 sec) approach light button on remote key.

3. Locking All Doors

To lock all doors, press lock push-button (3) once. Locking will be confirmed by two flashes of turn indicators.

If lock button is pressed on the remote key with the driver door open, locking-unlocking takes place with audible warning sound. If any other door is open, the vehicle gets locked but indicators do not flash.

4. Folding Key Blade In / Out

Press button (4) to flip out the key blade. For folding, press the button (4) and fold the key blade inside.

OPENING AND CLOSING



i NOTE

Key Blade should not be folded without pressing the button. Also, it should not be forced in any direction apart from folding direction to avoid damage to Flip Mechanism.

Manual Operation Of Central Door Locking / Unlocking

All doors can be locked / unlocked operating driver door using either key blade from outside or knob from inside.

FLIP KEY FEATURES

Vehicle Search

In vehicle locked condition if lock button on remote key is pressed the turn indicators of vehicle flashes 4 times.

Force Panic ON Operation

Force Panic ON operation When vehicle is in OFF condition, if we press lock button and unlock button simultaneously, Force panic operation gets activated. In this case, turn indicators of vehicle start flashing and horn will blow automatically. **Force Panic OFF operation.**

Force Panic OFF Operation

By pressing any button of flip key, Force panic operation gets deactivated

Automatic Activation Of Immobilizer

If key is removed from ignition, the engine will be immobilized automatically even if you forget to lock the vehicle.

Auto Locking / Unlocking Of Doors / Auto Relock

Vehicle doors get automatically locked when all doors are closed and the vehicle

speed crosses 10 kmph.

When ignition key is taken out all the doors get automatically unlocked.

Also, when unlocked with remote key and if no door is opened within 30 seconds, vehicle doors get automatically locked.

Anti-grab / Anti-scan Coding

The remote control set of this security system is protected against the use of devices called 'scanners' and 'grabbers' which can record and reproduce some types of remote codes.

Important

Don't operate Unlock push-button of remote while in the vicinity of your vehicle, as it could lead to an unintentional unlocking your vehicle.

Don't use discharged batteries in remote, as it could damage the remote.

For battery replacement procedure refer maintenance section.

Don't remove the battery connection of the vehicle while the vehicle has been locked by remote.

DOORS

Door Lock And Unlock With Key (if available)


The front doors can be locked or unlocked from outside using the key blade.



Insert the key in the slot and turn it clockwise to lock and anticlockwise to unlock the door.

Door Locking And Unlocking Using Door Handle Switch (DHS)

To lock/unlock all the doors without operating smart key button/ key blade. Press the door handle switch (DHS) provided on the driver door to lock/unlock all the four doors including Tail gate.

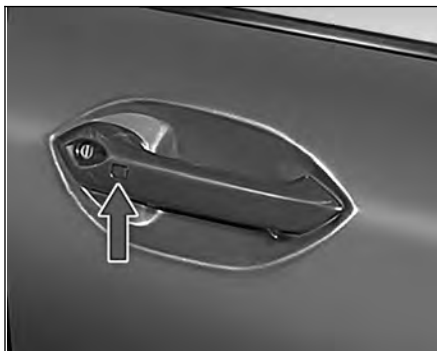

i NOTE

- *Authentication range for smart key ranges from 1 to 1.5 meters from outside the respective door or tail gate.*

- *Passive entry works only when ignition is off.*

Rear Door Opening

Door opening handle is provided on the side of the window.



To open the door, press the lever provided inside the handle and pull.

OPENING AND CLOSING

Locking Without A Key From Inside

All the doors can also be locked from inside by pressing lever on driver door and independently on other doors respectively.




Opening The Doors From Inside

All doors can be opened from inside. To open, pull the door opening lever. All doors can be unlocked by pulling the inside release lever to the intermediate position. When it is further articulated will unlatch the door and can be opened.



WINDOWS

Power Windows (if available)

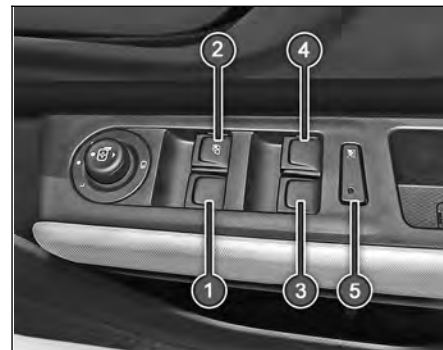

1. Front Window Winding Switch (Left)
2. Front Window Winding Switch (Right)
3. Rear Window Winding Switch (Left)
4. Rear Window Winding Switch (Right)
5. Inhibit Switch

Window glasses on all four doors can be operated by switches provided on the main control panel located on the driver's arm rest. They work only when the key is in the 'IGN ON' position.