



3D GUIDANCE trakSTAR MUS USER GUIDE

DOC-10006825



Revision Number	Date	Description
R01	April, 2021	First release

Copyright 2021, Northern Digital Inc. All Rights Reserved. Manufacture, use and/or sale covered by one or more US and other registered patents. Our patented technological innovations can be found at: www.ndigital.com/about/patents

Published by:

Northern Digital Inc.
103 Randall Dr.
Waterloo, Ontario, Canada N2V 1C5

Telephone: + (519) 884-5142
Toll Free: + (877) 634-6340
Global: + (800) 634 634 00
Facsimile: + (519) 884-5184
Website: www.ndigital.com

Copyright 2021, Northern Digital Inc.

All rights reserved. No part of this document may be reproduced, transcribed, transmitted, distributed, modified, merged or translated into any language in any form by any means - graphic, electronic, or mechanical, including but not limited to photocopying, recording, taping or information storage and retrieval systems - without the prior written consent of Northern Digital Inc. Certain copying of the software included herein is unlawful. Refer to your software license agreement for information respecting permitted copying.

DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITIES

Northern Digital Inc. has taken due care in preparing this document and the programs and data on the electronic media accompanying this document including research, development, and testing.

This document describes the state of Northern Digital Inc.'s knowledge respecting the subject matter herein at the time of its publication, and may not reflect its state of knowledge at all times in the future. Northern Digital Inc. has carefully reviewed this document for technical accuracy. If errors are suspected, the user should consult with Northern Digital Inc. prior to proceeding. Northern Digital Inc. makes no expressed or implied warranty of any kind with regard to this document or the programs and data on the electronic media accompanying this document.

Northern Digital Inc. makes no representation, condition or warranty to the user or any other party with respect to the adequacy of this document or accompanying media for any particular purpose or with respect to its adequacy to produce a particular result. The user's right to recover damages caused by fault or negligence on the part of Northern Digital Inc. shall be limited to the amount paid by the user to Northern Digital Inc. for the provision of this document. In no event shall Northern Digital Inc. be liable for special, collateral, incidental, direct, indirect or consequential damages, losses, costs, charges, claims, demands, or claim for lost profits, data, fees or expenses of any nature or kind.

Product names listed are trademarks of their respective manufacturers. Company names listed are trademarks or trade names of their respective companies.

CONTENTS

Overview..... 1

Software Installation 1

Component Connection..... 1

Driver Installation 5

Configuring the Multi-Unit ID Number 7

Testing for Successful Setup..... 11

Note:
Multi-Unit
Sync
operation
via RS232
connection
IS NOT
supported
at this
time.

Overview

This guide describes the operation of the **MUS (Multi-Unit-Sync)** mode. The MUS mode can be used to obtain data from up to four trakSTAR electronics units (up to 16 sensors) using USB connections (1 per electronics unit), and a single transmitter.

Software Installation

Before working with trakSTAR electronics units in MUS mode, refer to the User Guide for your system and follow the instructions for software installation, setup, and test.

Component Connection

The following cable connection will allow you to operate up to four 3DGuidance trakSTAR systems in the MUS (Multi-Unit Sync) mode. The remainder of the tracker connections are exactly as described in *the trakSTAR User Guide*.

- 1.** Find the connector on the back of the electronics unit labeled **"Unit Sync"**.
- 2.** For MUS operation with 2 trakSTARs:
 - Locate the black BNC to BNC cable provided in the shipment.
 - Connect each end of the BNC to BNC cable to the **Unit Sync** connectors on the two electronics units.



Figure 1 MUS Connection for 2 trakSTAR units

3. For MUS operation with 3 trakSTARs:

- Locate the 2 black BNC to BNC cables, and 1 BNC 'T' Adapter provided in the shipment.
- Connect one end of the first black BNC cable to the **Unit Synch** connector on the first trakSTAR unit.
- Attach the other end of the BNC cable to the BNC 'T' Adapter, and connect the adapter to the **Unit Synch** connector of the second trakSTAR unit.
- Connect one end of the second BNC cable to the open terminal of the BNC 'T' Adapter.
- Connect the other end of the BNC cable to the **Unit Synch** connector of the third trakSTAR unit.



Figure 2 MUS Connection for 3 trakSTAR units

4. For MUS operation with 4 trakSTARs:

- Locate the 3 black BNC to BNC cables and 2 BNC 'T' Adapters provided in the shipment.

- Connect one end of the first black BNC cable to the **Unit Synch** connector on the first trakSTAR unit.
- Attach the other end of the BNC cable to the first BNC 'T' Adapter, and connect the adapter to the **Unit Synch** connector of the second trakSTAR unit.
- Connect one end of the second BNC cable to the remaining open terminal of this first BNC 'T' Adapter.
- Attach the other end of the BNC cable to the second BNC 'T' Adapter, and connect this adapter to the **Unit Synch** connector of the third trakSTAR unit.
- Connect one end of the third BNC cable to the remaining open terminal of this second BNC 'T' Adapter.
- Connect the other end of the BNC cable to the **Unit Synch** connector of the fourth trakSTAR unit.



Figure 3 MUS Connection for 4 trakSTAR units

5. Now connect the transmitter to one of the electronics units (typically to ID=0). This unit will be identified by the system as the 'master' (controls the synchronization).

Transmitter connection

Note:
Multi-Unit Sync
operation with
multiple
transmitters
NOT supported
at this time.



6. Plug in Sensors as shown. Be sure to fully insert the connector - until an audible 'click' is heard.

Note:
The sensor connector
and receptacle are
specifically keyed to
mate. You may need
to rotate the sensor
connector before it
will click into place.



7. Now connect the AC Power Cords and USB cables – **one of each** to all electronics units. Connect the other end of the USB cables to your host PC.

Note:
Multi-Unit Sync
operation via RS232
connections NOT
supported at this time.




8. Power ON the tracker with the transmitter connected (Master), and follow the steps in the **Driver Installation** section below.
9. Once the driver install completes for the Master, power ON the second unit (Slave) and repeat. Repeat this step for any remaining trakSTAR units.

Driver Installation


After plugging in the USB cable, your computer's operating system will indicate it has detected new hardware and start the **New Hardware Wizard**.

1. Follow the *New Hardware Wizard* prompts, allowing Windows to Automatically search for a suitable driver.

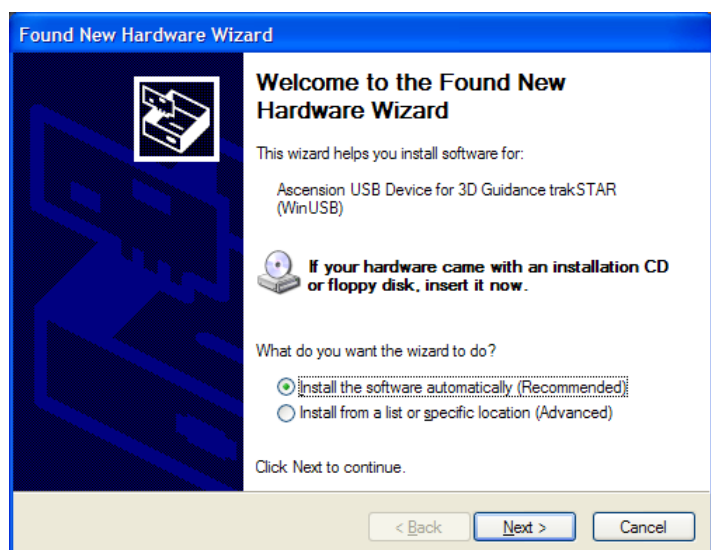

(This is the default option).

2. Follow the steps in the *New Hardware Wizard*, allowing Windows to install the USB driver. When notified that the software has not passed 'Windows Logo' testing, select 'Continue Anyway'.
3. When the Wizard completes installing the appropriate files, close the *New Hardware Wizard* by clicking 'Finish'.

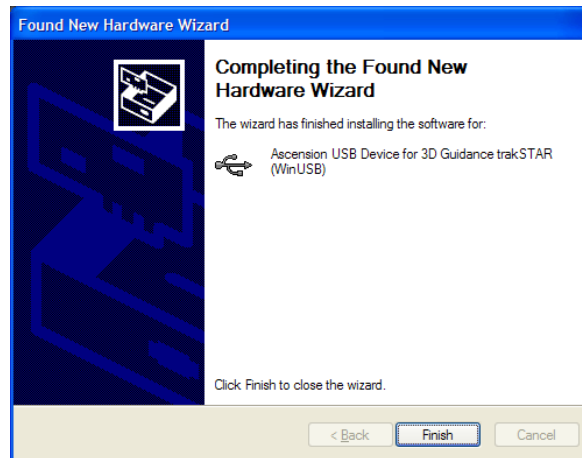

4. Now power on the second Electronics unit (1st Slave) and repeat the driver installation steps.
5. Repeat step 4 for the remaining trakSTAR electronics units.

Configuring the Multi-Unit ID Number

After completing the driver installation, you must run the *trakSTAR Configuration Utility* to check/configure the Multi-Unit ID numbers for proper Multi-Unit Sync operation. The Multi-Unit ID number helps the API (DLL) identify how the units and sensors should be enumerated.

Valid configurations for Proper MUS Operation, include the following Multi-Unit ID settings:

- 2 trakSTARs (8 sensor system)
 - Master: ID = 0
 - Slave: ID = 1
- 3 trakSTARs (12 sensor system)
 - Master: ID = 0
 - Slave#1: ID=1
 - Slave#2: ID=2
- 4 trakSTARs (16 sensor system)
 - Master: ID = 0
 - Slave#1: ID=1
 - Slave#2: ID=2
 - Slave#3: ID=3

Note that units with an ID of 1, 2, or 3 can also be a 'Master', but are listed as above for clarity.


*Note that if you purchased your units together as a multi-unit system, they should already be configured appropriately (i.e. sequentially as: 0,1; 0,1,2; or 0,1,2,3). This will allow you to skip this section, and proceed directly to [TESTING FOR SUCCESSFUL INSTALLATION](#). Checking and identifying (or re-configuring) the settings is recommended.

2,3,or 4 trakSTAR MUS Operation: SET Master: ID=0


- 1.** Begin by turning OFF (set power switch to '0') all units EXCEPT the MASTER unit. Remember that the Master is the unit that has the transmitter connected.
- 2.** Start the **trakSTAR Configuration Utility** by selecting *trakStar Utility* from the Install Directory\3D Guidance XXXXX\Applications\trakSTAR Utility.

3. This will bring up the **Communications Init** window, allowing you to configure the Interface and the Unit (the trakSTAR electronics unit) that you would like to configure. If you have powered down the other units as suggested in Step 1, only a single device (Master) should be shown in the Unit drop down window.

Note:
Only USB can be used for Multi-Unit Sync operation at this time.

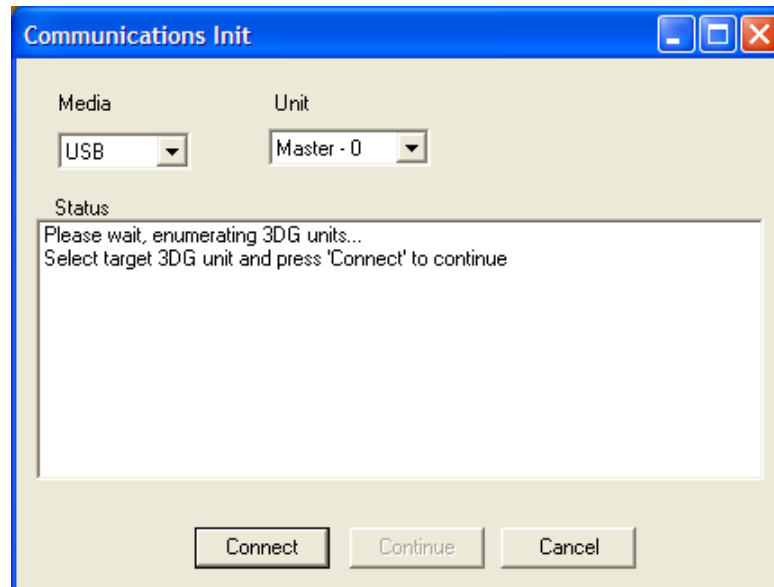

4. Select the Master unit by leaving it selected in the drop down window, and click 'Connect'. This will establish communication with the unit and gather information about its status. Status will be echoed in the display window.

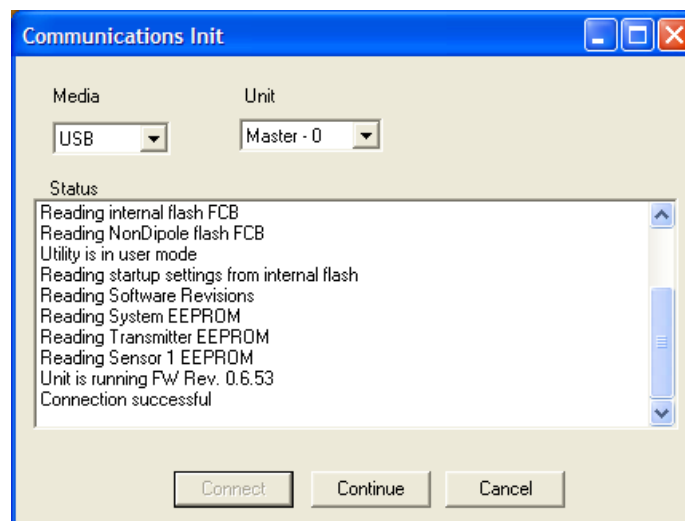

5. When the window indicates 'Connection successful', click 'Continue'. This will bring up the main Settings window of the Utility.

Note:

For a full description of the Configurable Default settings, refer to the User Guide.

Note:

Note that the *Sync Mode* setting should be left at **Internal** for proper MUS operation.

6. Click on the drop down menu next to the MultiUnit ID field, and **set the ID for the Master unit to '0'** (click on number 0 to select it).

Set the Master unit's ID to '0'

Note:

You must click 'Apply' after changing any of the settings.

- 7.** Click 'Apply' to write this setting into memory, exit the Utility, and power OFF the 'Master' unit.

2,3,or 4 trakSTAR MUS Operation: SET Slave#1: ID=1

- 8.** Turn on the first 'Slave' unit (this will be configured to report sensors 4-7) and repeat Steps 2-5 above, ensuring that you select the 'Slave' device from the Unit drop down window (Step 4).
- 9.** Click on the drop down menu next to the MultiUnit ID field, and **set the ID for this first Slave unit to '1'** (click on number 1 to select it).
- 10.** Click 'Apply' to write this setting into memory, exit the Utility, and power OFF the 'Slave' unit.

3 or 4 trakSTAR MUS Operation: SET Slave#2: ID=2

- 11.** If you have additional Slave units, power ON the next one, and repeat Steps 3-6 above. In Step 7, set the MultiUnit ID field for this unit to **2**.
- 12.** Click 'Apply' to write this setting into memory, exit the Utility, and power OFF this second 'Slave' unit.

4 trakSTAR MUS Operation: SET Slave#3: ID=3

- 13.** If you have an additional Slave unit, power it ON and repeat Steps 3-6 above. In Step 7, set the MultiUnit ID field for this unit to **3**.
- 14.** Click 'Apply' to write this setting into memory, exit the Utility, and power OFF this third 'Slave' unit.

NOTE: You must cycle power to the tracker for the new setting to be used.


Note:

The Windows Hardware Wizard may come up again after powering ON the Master unit. Follow the prompts once more to confirm the installation for this first unit.


Testing for Successful Setup

After configuring the ID numbers for the Slave units, power ON all units (Master and Slaves) and run the CUBES demo utility to confirm that the system is operating correctly. Note that this utility is installed to your PC, during the software installation.

1. With all units powered ON, start the demo utility by selecting the *CUBES* from the Install Directory\3D Guidance XXXXX\Applications\trakSTAR Utility
2. If you have installed the hardware and drivers and set the Multi-Unit ID correctly, there will be a pause (~20-25sec) while the application establishes communication with the trackers. Then the main window of the utility will be displayed.

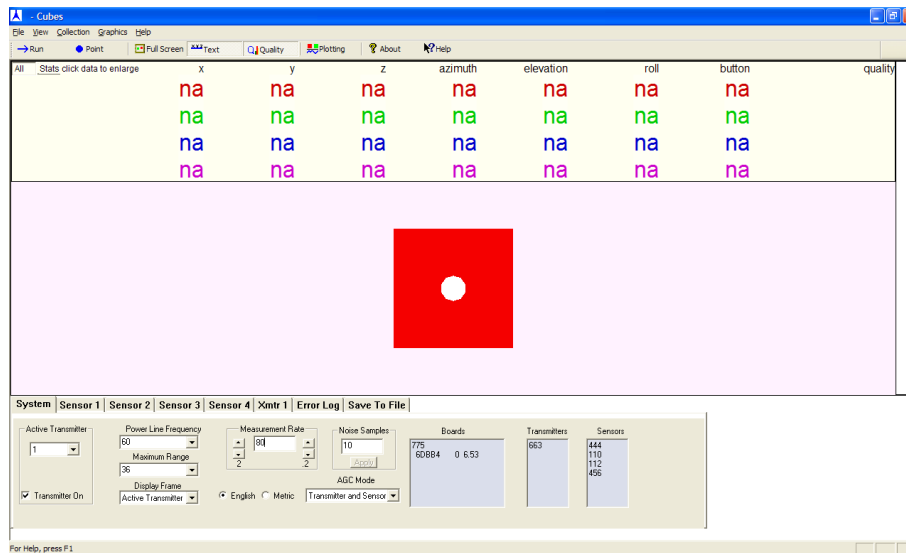

3. To start collecting data from the tracker, press the 'Run' button in the toolbar.

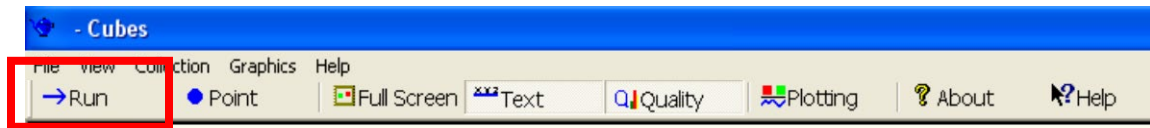


Press this to Start


If the *CUBES* utility does not run, please consult the troubleshooting table for assistance.

Invalid Multi-Unit ID setup

If the utility runs, but the title bar indicates "Could not initialize", check the Error Log tab at the bottom of the Window. If the Log shows the following error, go back to the [CONFIGURING THE MULTI-UNIT ID NUMBER](#) section of this guide and check for proper setup

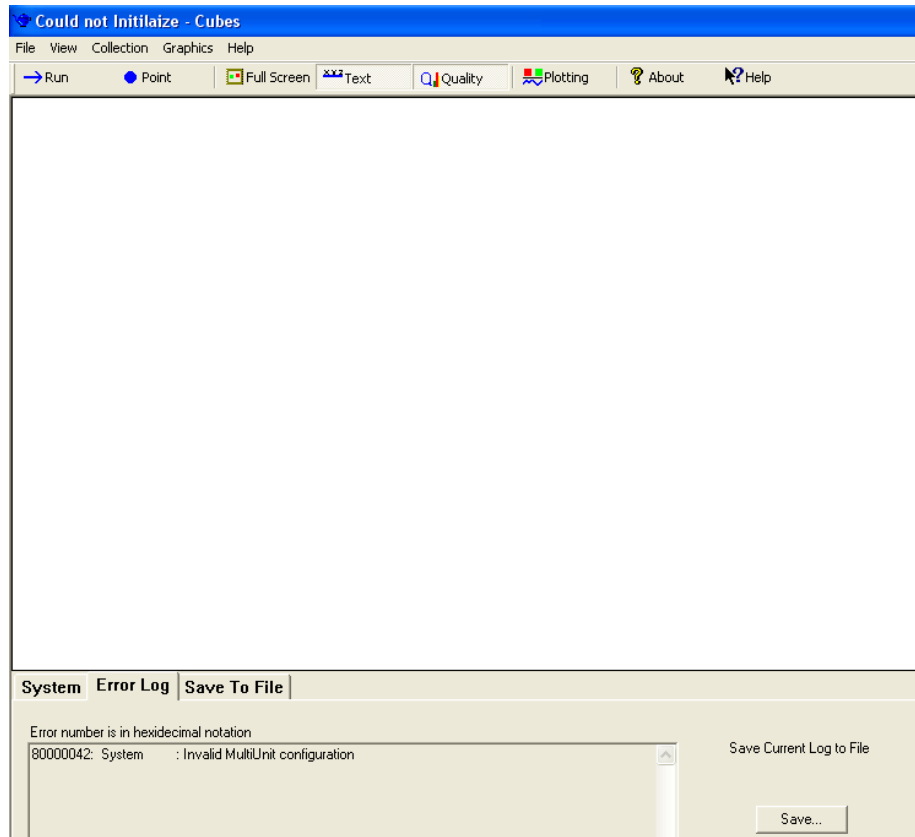

4. The following is what you will see when the demo is working.

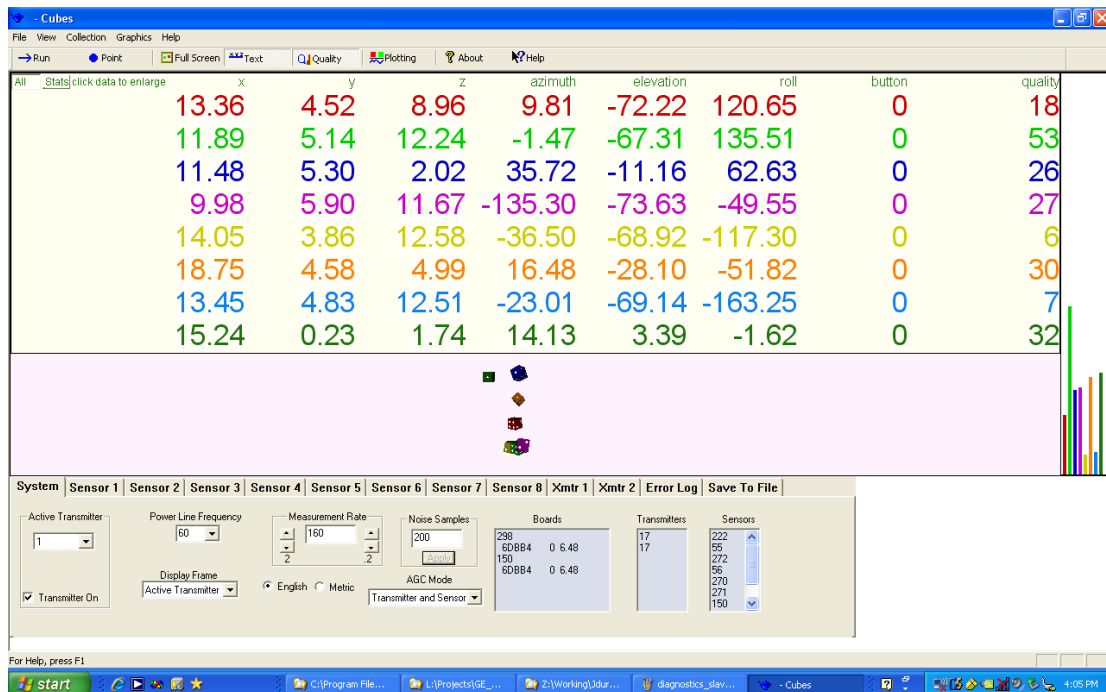

Tip: For additional information and assistance on using the QUALITY number, refer to the 3D Guidance API Guide.

The top of the window displays reported position and orientation data for each sensor attached to the tracker electronics unit. Each color-coded row contains tracking data for a single sensor. The first three values in a row represent sensor position in inches, relative to the transmitter. The next three values in the row represent sensor orientation in degrees.

The last column in each row presents reported QUALITY number. It gives you an indication of the degree to which position and angle measurements are in error. Errors may often be attributed to metal in the environment. See the trakSTAR User Guide.

The center of the window displays a colored cube for each sensor attached to the electronics unit. Note that colors correspond with the preceding rows of text values

Note that when 12-16 sensors are connected, the graphical display of the Cubes (dice) will only be visible if the 'Text' is toggled off in the toolbar.

The bottom of the window allows you to configure and adjust most tracker parameters.

Use the demo utility to acquaint yourself with the sensor's motion volume (i.e., motion box) and the tracker's measurement capabilities. If the utility does not run or the tracker does not operate as described, please consult the troubleshooting table for assistance.