

IC Compiler™ II

Timing Analysis

User Guide

Version O-2018.06, June 2018

SYNOPSYS®

Copyright Notice and Proprietary Information

©2018 Synopsys, Inc. All rights reserved. This Synopsys software and all associated documentation are proprietary to Synopsys, Inc. and may only be used pursuant to the terms and conditions of a written license agreement with Synopsys, Inc. All other use, reproduction, modification, or distribution of the Synopsys software or the associated documentation is strictly prohibited.

Destination Control Statement

All technical data contained in this publication is subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader's responsibility to determine the applicable regulations and to comply with them.

Disclaimer

SYNOPSYS, INC., AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Trademarks

Synopsys and certain Synopsys product names are trademarks of Synopsys, as set forth at <http://www.synopsys.com/Company/Pages/Trademarks.aspx>.

All other product or company names may be trademarks of their respective owners.

Free and Open-Source Software Licensing Notices

If applicable, Free and Open-Source Software (FOSS) licensing notices are available in the product installation.

Third-Party Links

Any links to third-party websites included in this document are for your convenience only. Synopsys does not endorse and is not responsible for such websites and their practices, including privacy practices, availability, and content.

Synopsys, Inc.
690 E. Middlefield Road
Mountain View, CA 94043
www.synopsys.com

Synopsys® Free and Open-Source Licensing Notices for IC Compiler™ II Products

Contents

Document Overview	iii
FOSS Package Notices	iii
GNU Bison 3.0.4	iii
Flex 2.5.37	xi
LEF/DEF Reader 5.8-p008	xi
mcpp 2.7.2	xi
Oasis Wrapper 1.0.0	xiv
Threading Building Blocks 4.4.0	xv
TCL/TK 8.5.12	xix
zlib 12.5.3	xix
libedit	xix

Document Overview

This document includes licensing information relating to free and open-source software (“FOSS”) included with Synopsys’s® IC Compiler II™ products (the “SOFTWARE”). The terms of the applicable FOSS license(s) govern Synopsys’s® distribution and your use of the SOFTWARE. Synopsys® and the third-party authors, licensors, and distributors of the SOFTWARE disclaim all warranties and all liability arising from any and all use and distribution of the SOFTWARE. To the extent the FOSS is provided under an agreement with Synopsys® that differs from the applicable FOSS license(s), those terms are offered by Synopsys® alone.

Synopsys® has reproduced below copyright and other licensing notices appearing within the FOSS packages. While Synopsys® seeks to provide complete and accurate copyright and licensing information for each FOSS package, Synopsys® does not represent or warrant that the following information is complete, correct, or error-free. SOFTWARE recipients are encouraged to (a) investigate the identified FOSS packages to confirm the accuracy of the licensing information provided herein and (b) notify Synopsys® of any inaccuracies or errors found in this document so that Synopsys® may update this document accordingly.

Certain FOSS licenses (such as the GNU General Public License, GNU Lesser General Public License, and Eclipse Public License) require that Synopsys® make the source code corresponding to the distributed FOSS binaries available under the terms of the same FOSS license. Recipients who would like to receive a copy of such corresponding source code should submit a request to Synopsys® by post at:

Synopsys
Attn: Open Source Requests
690 East Middlefield Road
Mountain View, CA 94043

Please provide the following information in all submitted FOSS requests:

- the FOSS packages for which you are requesting source code;
- the Synopsys® product (and any available version information) with which the requested FOSS packages are distributed;
- an email address at which Synopsys® may contact you regarding the request (if available); and
- the postal address for delivery of the requested source code.

FOSS Package Notices

GNU Bison 3.0.4

Project homepage: <https://www.gnu.org/software/bison/>

Project license:

Copyright © 1998-2013 Free Software Foundation, Inc. This file is part of Bison, the GNU Compiler Compiler.

This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see <<http://www.gnu.org/licenses/>>.

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program—to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you".

"Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source. The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a) The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a

particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An "entity transaction" is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version".

A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available,

or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively state the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

```
<one line to give the program's name and a brief idea of what it does.>
Copyright (C) <year> <name of author>
```

```
This program is free software: you can redistribute it and/or modify it under the terms of the
GNU General Public License as published by the Free Software Foundation, either version 3 of
the License, or (at your option) any later version.
```

```
This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without
even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
General Public License for more details.
You should have received a copy of the GNU General Public License along with this program. If
not, see <http://www.gnu.org/licenses/>.
```

Also add information on how to contact you by electronic and paper mail.

If the program does terminal interaction, make it output a short notice like this when it starts in an interactive mode:

```
<program> Copyright (C) <year> <name of author>
This program comes with ABSOLUTELY NO WARRANTY; for details type `show w'. This is free software,
and you are welcome to redistribute it under certain conditions; type `show c' for details.
```

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, your program's commands might be different; for a GUI interface, you would use an "about box".

You should also get your employer (if you work as a programmer) or school, if any, to sign a "copyright disclaimer" for the program, if necessary. For more information on this, and how to apply and follow the GNU GPL, see <<http://www.gnu.org/licenses/>>.

The GNU General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License. But first, please read <<http://www.gnu.org/philosophy/why-not-lgpl.html>>.

Synopsys® license note: certain source files included with GNU Bison include the exception to the GPL-3.0 license copied below.

As a special exception, you may create a larger work that contains part or all of the Bison parser skeleton and distribute that work under terms of your choice, so long as that work isn't itself a parser generator using the skeleton or a modified version thereof as a parser skeleton. Alternatively, if you modify or redistribute the parser skeleton itself, you may (at your option) remove this special exception, which will cause the skeleton and the resulting Bison output files to be licensed under the GNU General Public License without this special exception.

This special exception was added by the Free Software Foundation in version 2.2 of Bison.

Flex 2.5.37

Project homepage: <http://flex.sourceforge.net/>

Project license:

Flex carries the copyright used for BSD software, slightly modified because it originated at the Lawrence Berkeley (not Livermore!) Laboratory, which operates under a contract with the Department of Energy:

Copyright © 2001, 2002, 2003, 2004, 2005, 2006, 2007 The Flex Project.

Copyright © 1990, 1997 The Regents of the University of California.

All rights reserved. This code is derived from software contributed to Berkeley by Vern Paxson.

The United States Government has rights in this work pursuant to contract no. DE-AC03-76SF00098 between the United States Department of Energy and the University of California.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3.Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

This basically says "do whatever you please with this software except remove this notice or take advantage of the University's (or the flex authors') name".

Note that the "flex.skl" scanner skeleton carries no copyright notice.

You are free to do whatever you please with scanners generated using flex; for them, you are not even bound by the above copyright.

LEF/DEF Reader 5.8-p008

Project homepage: <http://projects.si2.org/openeda.si2.org/projects/lefdef>

Project license:

Cadence LEF/DEF Agreement Version 2.1 January 17,2003

THE ACCOMPANYING SOFTWARE PROGRAM IS PROVIDED UNDER THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT ("AGREEMENT"). PLEASE REVIEW THIS AGREEMENT CAREFULLY. ANY USE, REPRODUCTION, MODIFICATION OR DISTRIBUTION OF THE PROGRAM CONSTITUTES ACCEPTANCE OF THIS AGREEMENT. IF YOU ARE AGREEING TO THIS LICENSE ON BEHALF OF A COMPANY, YOU REPRESENT THAT YOU ARE AUTHORIZED TO BIND THE COMPANY TO THIS AGREEMENT.

Cadence Design Systems, Inc. ("Cadence") is licensing the software program ("Program") provided hereunder under an open source arrangement. The licensee hereunder may use, copy and modify the Program only pursuant to this Agreement. While Cadence encourages any and all improvements or other modifications made to the Program to be contributed to the community source and thereby made available to others under the same terms and conditions as included in this Agreement, this is not required. However, any error corrections made to the Program must be contributed to the community source.

1. DEFINITIONS

- 1.1 "Contribution" means the submission of the Original Program by Cadence and the submission of any modifications, improvements, additions, corrections or other changes to the Program, including source code, object code, application program interface definitions and formats, and documentation, made by any Contributor where such changes and/or additions to the Program originate from and are distributed by that particular Contributor. Each Contributor acknowledges and agrees that no guarantee is provided that a Contribution shall be included within the Program as distributed by any Recipient. A Contribution must be made by a Contributor if: (1) such Contribution is an error correction to the Program, or (2) the Contributor commercially distributes the Program with such Contribution, in which case the Contribution must be made within thirty (30) days of the commercial distribution of the Program. "Commercially distributes" as used herein shall mean distribution of the Program by a Contributor in consideration for revenue received. A Contribution 'originates' from a Contributor if it was added to the Program by such Contributor itself or anyone acting on such Contributor's behalf. Contributions do not include additions to the Program which: (i) are separate modules of software or data distributed in conjunction with the Program under their own license agreement, and (ii) are not derivative works of the Program.
- 1.2 "Contributor" means Cadence and any other entity that distributes the Program.
- 1.3 "Licensed Patents" mean patent claims licensable by any Contributor which are necessarily infringed by the use or sale of its Contribution alone or when combined with the Program.
- 1.4 "Original Program" means the original version of the software accompanying this Agreement as released by Cadence, including source code, object code, application program interface definitions and formats, and documentation, if any.
- 1.5 "Program" means the Original Program and Contributions.
- 1.6 "Recipient" means anyone who receives the Program under this Agreement, including all Contributors.

2. GRANT OF RIGHTS

- 2.1 Subject to the terms and conditions of this Agreement, each Contributor hereby grants each Recipient a non-exclusive, worldwide, royalty-free copyright license to reproduce, prepare derivative works of, publicly display, publicly perform, distribute and sublicense the Contribution of such Contributor, in source code and object code format.
- 2.2 Subject to the terms and conditions of this Agreement, each Contributor hereby grants each Recipient a non-exclusive, worldwide, royalty-free patent license under Licensed Patents to make, use, sell, offer to sell, import and otherwise transfer the Contribution of such Contributor, if any, in source code and object code format along with any documentation. This patent license shall apply to the combination of the Contribution and the Program if, at the time the Contribution is added by the Contributor, such addition of the Contribution causes such combination to be covered by the Licensed Patents. The patent license shall not apply to any other combinations which include the Contribution.
- 2.3 Subject to the terms and conditions of this Agreement, Cadence hereby grants each Recipient a non-exclusive, worldwide, royalty-free trademark license, to use the Cadence trademarks "LEF", or "DEF", in accordance with Cadence's marking policies, in connection with the license grants hereunder provided, however, that use of the Cadence trademarks in connection with Recipient's distribution of the Program is only permitted for the unmodified Program.
- 2.4 Recipient understands that although each Contributor grants the licenses to its Contributions set forth herein, no assurances are provided by any Contributor that the Program does not infringe the patent or other intellectual property rights of any other entity. Each Contributor disclaims any liability to Recipient for claims brought by any other entity based on infringement of intellectual property rights or otherwise. As a condition to exercising the rights and licenses granted hereunder, each Recipient hereby assumes sole responsibility to secure any other intellectual property rights needed, if any. For example, if a third party patent license is required to allow Recipient to distribute the Program, it is Recipient's responsibility to acquire that license before distributing the Program.
- 2.5 Each Contributor represents that to its knowledge it has sufficient copyright rights in its Contribution, if any, to grant the copyright license set forth in this Agreement. Except as expressly stated in Sections 2.1, 2.2 and 2.3 above, Recipient receives no rights or licenses to the intellectual property of any Contributor under this Agreement, whether expressly, by implication, estoppel or otherwise. All rights in the Program not expressly granted under this Agreement are reserved.

3. DISTRIBUTION REQUIREMENTS

- 3.1 A Contributor may choose to distribute the Program in object code form under its own license agreement, provided that: (a) it complies with the terms and conditions of this Agreement; and (b) the terms and conditions of its license agreement: (i) effectively disclaims on behalf of all Contributors all warranties and conditions, express and implied, including warranties or conditions of title and non-infringement, and implied warranties or conditions of merchantability and fitness for a particular purpose; (ii) effectively excludes on behalf of all Contributors all liability for damages, including, but not limited to, direct, indirect, special, incidental and consequential damages; (iii) states that any provisions which differ from this Agreement are offered by that Contributor alone and not by any other party; and (iv) states that source code for the Program is available from such Contributor, and informs licensees how to obtain it in a reasonable manner on or through a medium customarily used for software exchange.
- 3.2 When the Program is made available in source code form it must be made available under the terms and conditions of this Agreement. A copy of this Agreement must be included with each copy of such Program. A Contributor may not charge a fee for the distribution of the source code of the Program.
- 3.3 Each Contributor must preserve all copyright and other notices that appear in the Program. In addition, each Contributor must identify itself as the originator of its Contribution, if any, in a manner that reasonably allows subsequent Recipients to identify the originator of the Contribution.
- 3.4 While this license is intended to facilitate the commercial use of the Program, the Contributor who includes the Program in a commercial product offering should do so in a manner which does not create potential liability for other Contributors. Therefore, if a Contributor includes the Program in a commercial product offering, such Contributor ("Commercial Contributor") hereby agrees to defend and indemnify every other Contributor ("Indemnified Contributor") against any losses, damages and costs (collectively "Losses") arising from claims, lawsuits and other legal actions brought by a third party against the Indemnified Contributor to the extent caused by the acts or omissions of such Commercial Contributor in connection with its distribution of the Program in a commercial product offering. The obligations in this section do not apply to any claims or Losses relating to any actual or alleged intellectual property infringement. In order to qualify, an Indemnified Contributor must: a) promptly notify the Commercial Contributor in writing of such claim, and b) allow the Commercial Contributor to control, and cooperate with the Commercial Contributor in, the defense and any related settlement negotiations. The Indemnified Contributor may participate in any such claim at its own expense.

4. NO WARRANTY

EXCEPT AS EXPRESSLY SET FORTH IN THIS AGREEMENT, THE PROGRAM IS PROVIDED ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OR CONDITIONS OF TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Each Recipient is solely responsible for determining the appropriateness of using and distributing the Program and assumes all risks associated with its exercise of rights under this Agreement, including but not limited to the risks and costs of program errors, compliance with applicable laws, damage to or loss of data, programs or equipment, and unavailability or interruption of operations.

5. DISCLAIMER OF LIABILITY

EXCEPT AS EXPRESSLY SET FORTH IN THIS AGREEMENT, NEITHER RECIPIENT NOR ANY CONTRIBUTORS SHALL HAVE ANY LIABILITY FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST PROFITS), HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OR DISTRIBUTION OF THE PROGRAM OR THE EXERCISE OF ANY RIGHTS GRANTED HEREUNDER, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

6. GENERAL

- 6.1 If any provision of this Agreement is invalid or unenforceable under applicable law, it shall not affect the validity or enforceability of the remainder of the terms of this Agreement, and without further action by the parties hereto, such provision shall be reformed to the minimum extent necessary to make such provision valid and enforceable.
- 6.2 If Recipient institutes patent litigation against a Contributor with respect to a patent applicable to software (including a cross-claim or counterclaim in a lawsuit), then any patent licenses granted by that Contributor to such Recipient under this Agreement shall terminate as of the date such litigation is filed. If Recipient institutes patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Program (excluding combinations of the Program with other software or hardware) infringes such Recipient's patent(s), then such Recipient's rights granted under Section 2.2 shall terminate as of the date such litigation is filed.

- 6.3 If a Commercial Contributor distributes any Program, which includes such Contributors modifications, improvements, additions, corrections or other changes, and has not made a Contribution of such Program, any licenses granted to such Commercial Contributor under this Agreement shall terminate as of the date of such Program is distributed.
- 6.4 All Recipient's rights under this Agreement shall terminate if it fails to comply with any of the material terms or conditions of this Agreement and does not cure such failure in a reasonable period of time after becoming aware of such noncompliance. If all Recipient's rights under this Agreement terminate, Recipient agrees to cease use and distribution of the Program as soon as reasonably practicable. However, Recipient's obligations under this Agreement and any licenses granted by Recipient relating to the Program shall continue and survive.
- 6.5 Cadence may publish new versions (including revisions) of this Agreement from time to time. Each new version of the Agreement will be given a distinguishing version number. The Program (including Contributions) may always be distributed subject to the version of the Agreement under which it was received. In addition, after a new version of the Agreement is published, Contributor may elect to distribute the Program (including its Contributions) under the new version. No one other than Cadence has the right to modify this Agreement.
- 6.6 This Agreement is governed by the laws of the State of California and the intellectual property laws of the United States of America. No party to this Agreement will bring a legal action under this Agreement more than one year after the cause of action arose. Each party waives its rights to a jury trial in any resulting litigation.

END OF TERMS AND CONDITIONS

IN WITNESS WHEREOF, THE PARTIES HERETO HAVE ENTERED INTO THIS AGREEMENT AS OF THE EFFECTIVE DATE.

RECIPIENT NAME:

Company Name if Corporate License
Signed by: _____
Name: _____
Title: _____
Mailing Address: _____

Phone Number: _____
e-mail address: _____

mcpp 2.7.2

Project homepage: <http://sourceforge.net/projects/mcpp/>

Project license:

Copyright © 1998, 2002-2008 Kiyoshi Matsui <kmatsui@t3.rim.or.jp> All rights reserved.

This software including the files in this directory is provided under the following license.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Oasis Wrapper 1.0.0

Project homepage:

Project license:

The MIT License (MIT)

Copyright © 2015 Minhao Zhang

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Threading Building Blocks 4.4.0

Project homepage: <https://www.threadingbuildingblocks.org/>

Project license: <https://www.threadingbuildingblocks.org/licensing>

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface

definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11.BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12.IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

```
<one line to give the program's name and a brief idea of what it does.>
Copyright (C) <year> <name of author>
```

```
This program is free software; you can redistribute it and/or modify it under the terms of the
GNU General Public License as published by the Free Software Foundation; either version 2 of
the License, or (at your option) any later version.
```

```
This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without
even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
General Public License for more details.
```

```
You should have received a copy of the GNU General Public License along with this program; if
not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA
02110-1301 USA.
```

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.
This is free software, and you are welcome to redistribute it under certain conditions; type
`show c' for details.
```

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

```
Yoyodyne, Inc., hereby disclaims all copyright interest in the program Gnomovision' (which makes
passes at compilers) written by James Hacker.
<signature of Ty Coon>, 1 April 1989
Ty Coon, President of Vice
```

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

Runtime Exception:

As a special exception, you may use this file as part of a free software library without restriction. Specifically, if other files instantiate templates or use macros or inline functions from this file, or you compile this file and link it with other files to produce an executable, this file does not by itself cause the resulting executable to be covered by the GNU General Public License. This exception does not however invalidate any other reasons why the executable file might be covered by the GNU General Public License.

TCL/Tk 8.5.12

Project homepage: <https://www.tcl.tk/>

Project license: <https://www.tcl.tk/software/tcltk/license.html>

This software is copyrighted by the Regents of the University of California, Sun Microsystems, Inc., Scriptics Corporation, ActiveState Corporation and other parties.

The following terms apply to all files associated with the software unless explicitly disclaimed in individual files.

The authors hereby grant permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

IN NO EVENT SHALL THE AUTHORS OR DISTRIBUTORS BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS SOFTWARE, ITS DOCUMENTATION, OR ANY DERIVATIVES THEREOF, EVEN IF THE AUTHORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

THE AUTHORS AND DISTRIBUTORS SPECIFICALLY DISCLAIM ANY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. THIS SOFTWARE IS PROVIDED ON AN "AS IS" BASIS, AND THE AUTHORS AND DISTRIBUTORS HAVE NO OBLIGATION TO PROVIDE MAINTENANCE, SUPPORT, UPDATES, ENHANCEMENTS, OR MODIFICATIONS.

GOVERNMENT USE: If you are acquiring this software on behalf of the U.S. government, the Government shall have only "Restricted Rights" in the software and related documentation as defined in the Federal Acquisition Regulations (FARs) in Clause 52.227.19 (c) (2). If you are acquiring the software on behalf of the Department of Defense, the software shall be classified as "Commercial Computer Software" and the Government shall have only "Restricted Rights" as defined in Clause 252.227-7013 (b) (3) of DFARs. Notwithstanding the foregoing, the authors grant the U.S. Government and others acting in its behalf permission to use and distribute the software in accordance with the terms specified in this license.

zlib 12.5.3

Project homepage: <http://www.zlib.net/>

Project license: http://www.zlib.net/zlib_license.html

Copyright © 1995-2013 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly
jloup@gzip.org

Mark Adler
madler@alumni.caltech.edu

libedit

Project homepage: <http://netbsd.org/>

Project license:

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved. This code is derived from software contributed to Berkeley by Christos Zoulas of Cornell University.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3.All advertising materials mentioning features or use of this software must display the following acknowledgment:

This product includes software developed by the University of California, Berkeley and its contributors.

- 4.Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Contents

About This User Guide	xxviii
Customer Support	xxxi
1. Defining Modes, Corners, and Scenarios	
Creating and Removing Modes	1-3
Querying Modes	1-3
Creating and Removing Corners	1-4
Querying Corners	1-4
Creating a Scenario	1-5
Setting the Active Analysis Types for a Scenario	1-6
Querying Scenarios	1-7
Removing Duplicate Scenarios, Modes, and Corners	1-7
IC Compiler II Timing Constraints	1-8
Setting Timing Constraints	1-9
Converting an SDC File for IC Compiler II Timing Analysis	1-11
Importing Timing Constraints From the Design Compiler or IC Compiler Tool	1-12
Removing SDC Constraints	1-13
2. Defining Clocks	
Creating Real Clocks	2-3

Creating Virtual Clocks	2-3
Creating Generated Clocks	2-4
Generated Clock Examples	2-5
Clock Network Effects	2-8
Specifying Clock Source Latency	2-10
Specifying Ideal Network Latency	2-11
Specifying Clock Uncertainty	2-12
Specifying Ideal Clock Transition	2-14
Controlling the Clock Marking Behavior	2-14
Enabling Clock-to-Data Analysis for Ideal Clocks	2-15
Unateness of Clocks	2-15
Propagating a Specific Clock Sense	2-17
Creating Pulse Clocks	2-18
Creating a Pulse Clock With the create_generated_clock Command	2-18
Defining a Pulse Clock With the set_sense Command	2-20
Specifying the Nominal Width of a Pulse Clock	2-20
Setting and Reporting Minimum Pulse Width Constraints	2-21
Defining the Relationship Between Clock Groups	2-21
Reporting Clock Related Information	2-23
Removing Clocks	2-24
3. Constraining Timing Paths	
Timing Paths and Path Groups	3-3
Creating Path Groups	3-4
Path Delay Analysis for the Same Launch and Capture Clock	3-5
Path Delay Analysis for Different Launch and Capture Clocks	3-7
Setup Analysis for Different Launch and Capture Clocks	3-7
Hold Analysis for Different Launch and Capture Clocks	3-8
Introduction to Input and Output Delays	3-10
Setting Input and Output Delays for Ports	3-11

Considering the Effect of Delays Through Driving Cells	3-14
Effect of Input Delay on Clock Ports	3-14
Specifying Timing Exceptions	3-15
Specifying False Path Exceptions	3-15
Specifying Maximum and Minimum Path Delay Exceptions	3-17
Specifying Multicycle Path Exceptions	3-19
Specifying the Correct Number of Multicycles for Hold Analysis	3-21
Specifying Path Timing Margin Exceptions	3-23
Specifying Exceptions Efficiently	3-24
Order of Precedence for Exceptions	3-26
Precedence Based on Exception Type	3-27
Precedence Based on Path Specification	3-27
Example on the Order of Precedence of Exceptions	3-28
Disabling Timing Paths Within Lower-Level Blocks	3-29
Using Case Analysis	3-29
Disabling Timing Arcs	3-31
Enabling Preset and Clear Timing	3-32
Introduction to Data-to-Data Checks	3-32
Specifying Data-to-Data Checks	3-34
Examples of Data Checks	3-34
Enabling Library-Based Data Checks	3-35
Introduction to Clock-Gating Checks	3-36
Specifying Clock-Gating Checks	3-38
4. Specifying Operating Conditions	
Specifying the Operating Conditions	4-3
Creating and Using Scaling Groups	4-4
Creating Scaling Groups	4-4
Using Scaling Groups	4-5
Using Process Labels for PVT Matching	4-6

Reporting PVT Information	4-6
On-Chip Variation Delay Analysis	4-7
Specifying the Timing Derating Factors	4-9
Introduction to AOCV	4-10
Setting Up for AOCV Analysis	4-11
Applying AOCV Data	4-12
File-Based AOCV Data	4-13
Verifying AOCV Data	4-15
Introduction to Parametric On-Chip Variation Analysis	4-15
POCV Data Formats	4-17
File-Based POCV Data	4-17
Precedence of File- and Library-POCV Data	4-19
Performing Parametric On-Chip Variation Analysis	4-20
Introduction to Clock Reconvergence Pessimism Removal	4-24
Enabling Clock Reconvergence Pessimism Removal	4-25
Reporting Clock Reconvergence Pessimism Removal Calculations	4-25
5. Constraining Ports and Nets	
Specifying Drive Characteristics at Input and Inout Ports	5-2
Setting a Drive Driving Cell for Ports	5-2
Setting Drive Resistance	5-4
Setting an Input Transition Time	5-5
Removing Drive Characteristics From Ports	5-6
Specifying Port Load Capacitance	5-6
Introduction to Ideal Networks	5-7
Propagation of the Ideal Network Property	5-7
Creating and Removing Ideal Networks	5-9
Retrieving Ideal Objects	5-10
Setting Ideal Latency and Ideal Transition Time	5-10

Ignoring Net Delays During Timing Analysis	5-11
6. Performing Parasitic Extraction	
Specifying the Parasitic Technology Information	6-2
TLUPlus Layer Mapping File	6-4
Specifying the Parasitic Scaling Factors for Extraction	6-4
Enabling Coupling Capacitance Extraction for Detailed Routed Nets	6-5
Disabling the Breaking of a Loop Structures in a Resistance Networks	6-6
Performing Extraction and Generating Parasitics	6-6
Performing In-Design Signoff Extraction	6-7
Back-Annotating Parasitics	6-8
7. Performing Analysis	
Controlling Delay Calculation	7-3
Using the PrimeTime Delay Calculation Engine	7-3
Enabling Multiple-Input Switching Analysis	7-4
Enabling Waveform Propagation Using CCS Models	7-4
Reporting Timing Paths	7-5
Controlling the Column Order in a Timing Report	7-8
Reporting Unconstrained Timing Paths	7-8
Performing Path-Based Analysis	7-9
Reporting the Logical DRC Violations	7-10
Generating a Global Summary of Timing Violations	7-11
Reporting the QoR	7-12
Generating and Analyzing a QoR Snapshot	7-14
Reporting the Delay of a Timing Arc	7-16
Reporting the Clock or Data Arrival Time at Pins or Ports	7-17
Checking the Timing Constraints and Settings	7-18
Checking for Consistency in Timing Analysis or Extraction Settings	7-20
Analyzing Timing Correlation Between the IC Compiler II and PrimeTime Tools	7-22

Preface

This preface includes the following sections:

- [About This User Guide](#)
- [Customer Support](#)

About This User Guide

The Synopsys IC Compiler II tool provides a complete netlist-to-GDSII design solution, which combines proprietary design planning, physical synthesis, clock tree synthesis, and routing for logical and physical design implementations throughout the design flow.

This guide describes the IC Compiler II implementation and integration flow. For more information about the IC Compiler II tool, see the following companion volumes:

- *IC Compiler II Library Preparation User Guide*
- *IC Compiler II Design Planning User Guide*
- *IC Compiler II Data Model User Guide*
- *IC Compiler II Implementation User Guide*
- *IC Compiler II Graphical User Interface User Guide*

Audience

This user guide is for design engineers who use the IC Compiler II tool to implement designs.

To use the IC Compiler II tool, you need to be skilled in physical design and synthesis and be familiar with the following:

- Physical design principles
- The Linux or UNIX operating system
- The tool command language (Tcl)

Related Publications

For additional information about the IC Compiler II tool, see the documentation on the Synopsys SolvNet® online support site at the following address:

<https://solvnet.synopsys.com/DocsOnWeb>

You might also want to see the documentation for the following related Synopsys products:

- Design Compiler®
- IC Validator
- PrimeTime® Suite

Release Notes

Information about new features, enhancements, changes, known limitations, and resolved Synopsys Technical Action Requests (STARs) is available in the *IC Compiler II Release Notes* on the SolvNet site.

To see the *IC Compiler II Release Notes*,

1. Go to the SolvNet Download Center located at the following address:
<https://solvnet.synopsys.com/DownloadCenter>
2. Select IC Compiler II, and then select a release in the list that appears.

Conventions

The following conventions are used in Synopsys documentation.

Convention	Description
Courier	Indicates syntax, such as <code>write_file</code> .
<i>Courier italic</i>	Indicates a user-defined value in syntax, such as <code>write_file design_list</code> .
Courier bold	Indicates user input—text you type verbatim—in examples, such as <code>prompt> write_file top</code>
[]	Denotes optional arguments in syntax, such as <code>write_file [-format fmt]</code>
...	Indicates that arguments can be repeated as many times as needed, such as <code>pin1 pin2 ... pinN</code> .
	Indicates a choice among alternatives, such as <code>low medium high</code>
Ctrl+C	Indicates a keyboard combination, such as holding down the Ctrl key and pressing C.
\	Indicates a continuation of a command line.
/	Indicates levels of directory structure.
Edit > Copy	Indicates a path to a menu command, such as opening the Edit menu and choosing Copy.

Customer Support

Customer support is available through SolvNet online customer support and through contacting the Synopsys Technical Support Center.

Accessing SolvNet

The SolvNet site includes a knowledge base of technical articles and answers to frequently asked questions about Synopsys tools. The SolvNet site also gives you access to a wide range of Synopsys online services including software downloads, documentation, and technical support.

To access the SolvNet site, go to the following address:

<https://solvnet.synopsys.com>

If prompted, enter your user name and password. If you do not have a Synopsys user name and password, follow the instructions to sign up for an account.

If you need help using the SolvNet site, click HELP in the top-right menu bar.

Contacting the Synopsys Technical Support Center

If you have problems, questions, or suggestions, you can contact the Synopsys Technical Support Center in the following ways:

- Open a support case to your local support center online by signing in to the SolvNet site at <https://solvnet.synopsys.com>, clicking Support, and then clicking “Open A Support Case.”
- Send an e-mail message to your local support center.
 - E-mail support_center@synopsys.com from within North America.
 - Find other local support center e-mail addresses at <https://www.synopsys.com/support/global-support-centers.html>
- Telephone your local support center.
 - Call (800) 245-8005 from within North America.
 - Find other local support center telephone numbers at <https://www.synopsys.com/support/global-support-centers.html>

1

Defining Modes, Corners, and Scenarios

A block might operate under several different conditions, such as different temperatures and voltages, and might operate in several different functional modes. For timing analysis, each set of conditions is represented by a *corner* and each functional mode is represented by a *mode*. A *scenario* is a combination of a corner and mode used to perform timing analysis and optimization.

Before you start working with a block, you must define the modes, corners, and scenarios that are used for the block, and define the constraints associated with these modes, corners, and scenarios. These tasks are described in the following topics:

- [Creating and Removing Modes](#)
- [Querying Modes](#)
- [Creating and Removing Corners](#)
- [Querying Corners](#)
- [Creating a Scenario](#)
- [Setting the Active Analysis Types for a Scenario](#)
- [Querying Scenarios](#)
- [Removing Duplicate Scenarios, Modes, and Corners](#)
- [IC Compiler II Timing Constraints](#)
- [Setting Timing Constraints](#)

- [Converting an SDC File for IC Compiler II Timing Analysis](#)
- [Importing Timing Constraints From the Design Compiler or IC Compiler Tool](#)
- [Removing SDC Constraints](#)

Creating and Removing Modes

To create a functional mode, use the `create_mode` command. Each mode must have a unique name.

For example, to create a mode named `mode1`, use the following command:

```
icc2_shell> create_mode mode1
```

To change the current mode to a specific mode, use the `current_mode` command, as shown in the following example:

```
icc2_shell> current_mode mode1
```

To remove modes for the current block, use the `remove_modes` command. To remove all modes, use the `-all` option. To remove specific modes, specify the modes using a Tcl list or collection. When you remove a mode, all scenarios associated with that mode are also removed.

For example, to remove the modes named `mode1` and `mode2`, use the following command:

```
icc2_shell> remove_modes {mode1 mode2}
```

Querying Modes

To obtain

- The current mode, use the `current_mode` command without any arguments.

For example,

```
icc2_shell> current_mode  
{"mode1"}
```

- A list of modes defined for a block, use the `get_modes` command.

By default, the command returns a collection that contains all modes defined for the current block (similar to the `all_modes` command). To get the modes for another block, use the `-design` option.

You can restrict the set of modes returned by the command by filtering the modes based on attribute values (`-filter` option), associated corners (`-of_objects` option), or name patterns.

- Detailed information about one or more modes of the current block, use the `report_modes` command.

The report includes the associated scenarios and their active analysis types, for each mode.

The following example reports the detailed information for all modes for the current block:

```
icc2_shell> report_modes
```

The following example reports the detailed information of the modes named mode1 and mode2:

```
icc2_shell> report_modes {mode1 mode2}
```

See Also

- [Setting the Active Analysis Types for a Scenario](#)

Creating and Removing Corners

To create a timing corner, use the `create_corner` command. Each corner must have a unique name.

For example, to create a corner named corner1, use the following command:

```
icc2_shell> create_corner corner1
```

To change the current corner to a specific corner, use the `current_corner` command, as shown in the following example:

```
icc2_shell> current_corner corner1
```

To remove corners for the current block, use the `remove_corners` command. To remove all corners, use the `-all` option. To remove specific corners, specify the corners using a Tcl list or collection. When you remove a corner, all scenarios associated with that corner are also removed.

For example, to remove the corners named corner1 and corner2, use the following command:

```
icc2_shell> remove_corners {corner1 corner2}
```

Querying Corners

To obtain

- The current corner, use the `current_corner` command without any arguments.

For example,

```
icc2_shell> current_corner  
{"corner1"}
```

- The list of corners defined for a block, use the `get_corners` command.

By default, the command returns a collection that contains all corners defined for the current block (similar to the `all_corners` command). To get the corners for another block, use the `-design` option.

You can restrict the set of corners returned by the command by filtering the corners based on attribute values (`-filter` option), associated corners (`-of_objects` option), or name patterns.

- Detailed information about one or more corners of the current block, use the `report_corners` command.

The report includes the associated scenarios and their active analysis types, for each corner.

The following example reports the detailed information for all corners of the current block:

```
icc2_shell> report_corners
```

The following example reports the detailed information for the corners named `corner1` and `corner2`:

```
icc2_shell> report_corners {corner1 corner2}
```

Creating a Scenario

To create a timing scenario, use the `create_scenario` command. Each scenario must have a unique name. By default, when you create a scenario, it combines the current mode with the current corner. To specify the mode, use the `-mode` option. To specify the corner, use the `-corner` option.

For example, to create a scenario named `scenario1` that combines `mode1` with `corner1`, use the following command:

```
icc2_shell> create_scenario -mode mode1 -corner corner1 -name scenario1
```

When you create a scenario, by default, it is active and it becomes the current scenario. In addition, its mode becomes the current mode and its corner becomes the current corner.

To change the active status of a scenario, use the `set_scenario_status -active true|false` command. To modify the active analysis types for the scenario, use the `set_scenario_status` command.

To remove scenarios for the current block, use the `remove_scenarios` command. To remove all scenarios, use the `-all` option. To remove specific scenarios, specify the corners using a Tcl list or collection.

For example, to remove the scenarios named `scenario1` and `scenario2`, use the following command:

```
icc2_shell> remove_scenarios {scenario1 scenario2}
```

See Also

- [Setting the Active Analysis Types for a Scenario](#)

Setting the Active Analysis Types for a Scenario

By default, a scenario is active. To modify the active analysis types for one or more scenarios, use the `set_scenario_status` command as shown in the following table.

Table 1-1 Analysis Options of the `set_scenario_status` Command

Analysis type	Command option
All	<code>-all</code>
None	<code>-none</code>
Setup time	<code>-setup true false</code>
Hold time	<code>-hold true false</code>
Leakage Power	<code>-leakage_power true false</code>
Dynamic Power	<code>-dynamic_power true false</code>
Maximum transition time	<code>-max_transition true false</code>
Maximum capacitance	<code>-max_capacitance true false</code>
Minimum capacitance	<code>-min_capacitance true false</code>
Cell electromigration	<code>-cell_em true false</code>
Signal electromigration	<code>-signal_em true false</code>

You can temporarily disable the individual analysis settings by using the `-active false` option. When you use this option, all analysis is disabled for the specified scenarios; however, the individual settings are retained in the design library. When you use the `-active true` option, the individual settings take effect.

Querying Scenarios

To obtain

- The current scenario, use the `current_scenario` command without any arguments.

For example:

```
icc2_shell> current_scenario
{"scenario1"}
```

- The scenarios defined for a block, use the `get_scenarios` command.

By default, the command returns a collection that contains all scenarios defined for the current block (similar to the `all_scenarios` command).

You can restrict the set of scenarios returned by the command by filtering the scenarios based on attribute values (`-filter` option), associated corners (`-corners` option), associated modes (`-modes` option), or name patterns.

- Detailed information about one or more scenarios of the current block, use the `report_scenarios` command.

The report includes the scenario name, its associated mode, its associated corner, and its active analysis types, for each scenario.

By default, the command reports all scenarios for the current block.

To report

- Specific scenarios, use the `-scenarios` option.
- Scenarios associated with specific modes, use the `-modes` option.
- Scenarios associated with specific corners, use the `-corners` option.

The following example reports the detailed information for all scenarios of the current block:

```
icc2_shell> report_scenarios
```

The following example reports the detailed information for the scenarios named `scenario1` and `scenario2`:

```
icc2_shell> report_scenarios -scenarios {scenario1 scenario2}
```

Removing Duplicate Scenarios, Modes, and Corners

To improve runtime and capacity, you can remove duplicate scenarios, corners and modes by using the `remove_duplicate_timing_contexts` command. This command

- Removes scenarios that are duplicate and have the same scenario status.
- Reassigns the scenarios of the duplicate modes to a common mode and removes the duplicate modes.

When reassigning scenarios, the tool creates new corners, if necessary.

- Reassigns the scenarios of the duplicate corners to a common scenario and removes the duplicate corners.

When determining duplicate modes, the tool does not consider the annotated switching activity. Therefore, reapply the switching activity after you run this command.

If you use of the `set_block_to_top_map` command to map modes, corners, and scenarios at the block level to those at the top level, you must manually update this mapping after you run the `remove_duplicate_timing_contexts` command. To determine the relationship between the modes, corners, and scenarios at the top level and those at the block level, use the `report_block_to_top_map` command.

IC Compiler II Timing Constraints

IC Compiler II uses the following classifications for timing constraints:

- Mode-specific constraints

Constraints that define or modify the timing graph, which is a weighted graph that represents the timing of a circuit, are mode-specific constraints. Mode-specific constraints include

- Clock definitions
- Maximum and minimum delay constraints

At a minimum, the mode-specific constraints must contain a clock definition for each clock signal.

- Corner-specific constraints

Constraints that modify the calculated delay on an object are corner-specific constraints. Corner-specific constraints include

- Operating conditions
- Port load capacitances
- Parasitic information and scaling factors
- Timing derating factors

- Scenario-specific constraints

Constraints that have a delay value and refer to a modal object, such as a clock, are scenario-specific. Scenario-specific constraints include

- Input and output delays
- Clock characteristics, such as clock latency, uncertainty, and transition

At a minimum, the scenario-specific constraints should contain an input delay or output delay for each I/O port.

- Netlist-specific constraints

Constraints that apply to all corners, modes, and scenarios are netlist-specific constraints. Netlist-specific constraints include ideal network settings.

They can apply globally to all designs or locally to a specific design. For example, the constraints set by the `set_ideal_network` command are netlist-specific.

Setting Timing Constraints

You can specify the timing constraints by loading Synopsys Design Constraints (SDC) files or by using individual SDC commands. For details about the SDC commands, see the *Using the Synopsys Design Constraints Format Application Note*.

To load an SDC file, use the `read_sdc` command.

```
icc2_shell> read_sdc block.sdc
```

Important:

If the SDC file does not contain unit settings, they are derived from the main logic library.
If the SDC file does contain unit settings, they must be consistent with those in the main logic library.

To ensure efficiency and accuracy during block setup, use the following steps:

1. Split the block constraints into separate files as follows:
 - Mode-specific file for each mode
 - Corner-specific file for each corner
 - Scenario-specific file for each scenario
 - Global constraint file for the blocks
2. Define all modes, corners, and scenarios for the block.

3. Set the current mode, corner, or scenario appropriately, before you apply the corresponding constraints.

When you load an SDC file or run an SDC command, depending on the constraint type, the constraints only apply to the current scenario or its associated mode or corner.

For example, assume a block that has the following:

- Two modes named M1 and M2
- A corner named C
- Two scenarios as follows:
 - A scenario named M1@C, which is the combination of mode M1 and corner C
 - A scenario named M2@C, which is the combination of mode M2 and corner C

The following example script shows how to create modes, corner, and scenarios and apply the corresponding constraint and settings:

```
#Create all modes, corners, and scenarios

create_mode M1
create_mode M2

create_corner C

create_scenario -mode M1 -corner C -name M1@C
create_scenario -mode M2 -corner C -name M2@C

#Apply all modes, corners, and scenarios specific constraints and
settings

current_mode M1
read_sdc M1_mode.sdc

current_mode M2
read_sdc M2_mode.sdc

current_corner C
read_sdc C_corner.sdc;
## Apply TLU Plus settings, extraction options, and other settings

current_scenario M1@C
read_sdc M1@C_scenario.sdc

current_scenario M2@C
read_sdc M2@C_scenario.sdc
```

Converting an SDC File for IC Compiler II Timing Analysis

The IC Compiler II tool supports only OCV timing analysis. If your SDC file is written for best-case/worst-case (BCWC) timing analysis, you must convert the SDC file into two OCV SDC files.

To convert your BCWC SDC files into two OCV SDC files,

1. Create a mode for your design using the `create_mode` command, as described in [Creating and Removing Modes](#).

For example,

```
icc2_shell> create_mode my_mode
```

2. Create the following for the best-case constraints:

- A corner by using the `create_corner` command, as described in [Creating and Removing Corners](#).
- A scenario by using the `create_scenario` command, as described in [Creating a Scenario](#).

The best-case scenario is not used for setup analysis. Therefore, disable setup analysis for this scenario by using the `set_scenario_status -setup false` command, as described in [Setting the Active Analysis Types for a Scenario](#).

For example,

```
icc2_shell> create_corner bc_corner
icc2_shell> create_scenario -mode my_mode -corner bc_corner \
    -name bc_scenario
icc2_shell> set_scenario_status -setup false bc_scenario
```

3. Read the best-case constraints from the BCWC SDC file by using the `read_sdc` command.

By default, the IC Compiler II tool reads all constraints in the SDC file. To limit the constraints to only the best-case constraints, set the `time.convert_constraint_from_bc_wc` application option to `bc_only` before reading the SDC file.

For example,

```
icc2_shell> set_app_options \
    -name time.convert_constraint_from_bc_wc -value bc_only
icc2_shell> read_sdc bc_wc.sdc
```

4. Create a corner and scenario for the worst-case constraints.

The worst-case scenario is not used for hold analysis. Therefore, disable hold analysis for this scenario by using the `set_scenario_status -hold false` command

For example,

```
icc2_shell> create_corner wc_corner
icc2_shell> create_scenario -mode my_mode -corner wc_corner \
    -name wc_scenario
icc2_shell> set_scenario_status -hold false wc_scenario
```

5. Read the worst-case constraints from the BCWC SDC file by using the `read_sdc` command.

To limit the constraints to only the worst-case constraints, set the `time.convert_constraint_from_bc_wc` application option to `wc_only` before reading the SDC file.

For example,

```
icc2_shell> set_app_options \
    -name time.convert_constraint_from_bc_wc -value wc_only
icc2_shell> read_sdc bc_wc.sdc
```

6. Reset the `time.convert_constraint_from_bc_wc` application option to `none`.

For example,

```
icc2_shell> set_app_options \
    -name time.convert_constraint_from_bc_wc -value none
```

Importing Timing Constraints From the Design Compiler or IC Compiler Tool

To import timing constraints from the Design Compiler or IC Compiler tool to the IC Compiler II tool, use the following steps:

1. Generate the constraints from the Design Compiler or IC Compiler tool by using the `write_timing_context -format icc2` command.

By default, this command generates the timing constraints for all scenarios, both active and inactive, and the scenario-independent timing constraints for the block. To generate the timing constraints for specific scenarios, use the `-scenarios` option. You must

specify a name for the output by using the `-output` option. The output is a directory that contains the Tcl scripts shown in the following table:

Table 1-2 Output of the `write_timing_context -format icc2` Command

Tcl script name	Content
top.tcl	Commands for <ul style="list-style-type: none"> • Creating the modes, corners, and scenarios • Populating the modes, corners, scenarios, and the design with constraints
scenario_<scenario_name>.tcl	Constraints for the specific scenario
design.tcl	Constraints for the design that are scenario independent

2. Create the corresponding modes, corners, and scenarios and apply the constraints in the IC Compiler II tool by sourcing the top.tcl script.

The following example generates the timing constraints for all active scenarios and the scenario-independent timing constraints from the Design Compiler tool:

```
dc_shell> write_timing_context -scenarios [get_scenarios -active true] \
      -output BLK1_const
```

The following example imports the constraints generated by the Design Compiler tool into the IC Compiler II tool:

```
icc2_shell> open_block BLK1
icc2_shell> source BLK1_const/top.tcl
```

Removing SDC Constraints

To remove SDC constraints from a block, use the `remove_sdc` command.

By default, the command removes all SDC constraints in the current block. However, you can control the SDC constraints that are removed as follows:

- To remove the constraints from specific modes, corners, or scenarios, use the `-modes`, `-corners`, or `-scenarios` option.

For example, to remove the mode-specific constraints from mode M1, corner-specific constraints from the C1 and C2 corners, and the scenario-specific constraints from the M1C1 and M1C2 scenarios, use the following command:

```
icc2_shell> remove_sdc -modes M1 -corners {C1 C2} \
      -scenarios {M1C1 M1C2}
```

- To remove the design-specific constraints that are not associated to any mode, corner, or scenario, use the `-design` option.
- To include or exclude specific types of constraints from removal, use the `-include` or `-exclude` option.

For example, to remove only the case analysis settings, use the following command:

```
icc2_shell> remove_sdc -include case_analysis
```

To remove all the SDC constraints except for ideal network settings, use the following command:

```
icc2_shell> remove_sdc -exclude ideal_network
```

For a complete list of valid values for the `-include` and `-exclude` options, see the man page for the `remove_sdc` command.

2

Defining Clocks

An essential part of timing analysis is to accurately specify clocks and clock effects, such as latency and uncertainty. To specify, report, and analyze clocks see the following topics:

- [Creating Real Clocks](#)
- [Creating Virtual Clocks](#)
- [Creating Generated Clocks](#)
- [Clock Network Effects](#)
- [Specifying Clock Source Latency](#)
- [Specifying Ideal Network Latency](#)
- [Specifying Clock Uncertainty](#)
- [Specifying Ideal Clock Transition](#)
- [Controlling the Clock Marking Behavior](#)
- [Enabling Clock-to-Data Analysis for Ideal Clocks](#)
- [Unateness of Clocks](#)
- [Propagating a Specific Clock Sense](#)
- [Creating Pulse Clocks](#)
- [Setting and Reporting Minimum Pulse Width Constraints](#)

- [Defining the Relationship Between Clock Groups](#)
- [Reporting Clock Related Information](#)
- [Removing Clocks](#)

Creating Real Clocks

A real clock is a clock that physically exists and is defined on pin or port objects of a block. To create a real clock, use the `create_clock` command and specify the following information:

- The period of the clock by using `-period` option
 - The source objects, pins or ports, on which to create the clock
- If you do not specify the source objects, the tool creates a virtual clock.

In addition, you can specify the following:

- The waveform of the clock by using the `-waveform` option
- If you do not specify the waveform, by default, the tool uses a 50 percent duty cycle with a rising edge at time zero and a falling edge at one-half the period.
- A name for the clock with the `-name` option
- If you do not specify a name explicitly, the clock gets its name from the source object.
- Additional clocks on the same source object by using the `-add` option
- If you do so, you must specify names for the additional clocks by using the `-name` option.

The following commands create a clock on the port named CLK, and another clock named CLK_1 with a rising edge at 1.0 and a falling edge at 2.0 on the same port:

```
icc2_shell> create_clock -period 5.0 [get_ports CLK]
icc2_shell> create_clock -period 4.0 -waveform {1.0 2.0} \
    -name CLK_1 -add [get_ports CLK]
```

Creating Virtual Clocks

A Virtual clock is a clock that physically does not exist, but it can be used to constrain a block. To create a virtual clock, use the `create_clock` command and specify the following information:

- The period of the clock by using `-period` option
- A name for the clock with the `-name` option

In addition, you can specify the following:

- The waveform of the clock by using the `-waveform` option
- If you do not specify the waveform, by default, the tool uses a 50 percent duty cycle with a rising edge at time zero and a falling edge at one-half the period.

The following command create a clock named CLK_VIR that has a default waveform.


```
icc2_shell> create_clock -period 5.0 -name CLK_VIR
```

Creating Generated Clocks

A clock that is generated based on another clock is called a generated clock.

The following figure shows an example of the clock generation logic for a divide-by-two generated clock, and the ideal waveforms of the original (master) clock and the generated clock.

Figure 2-1 Divide-by-two Clock Generator

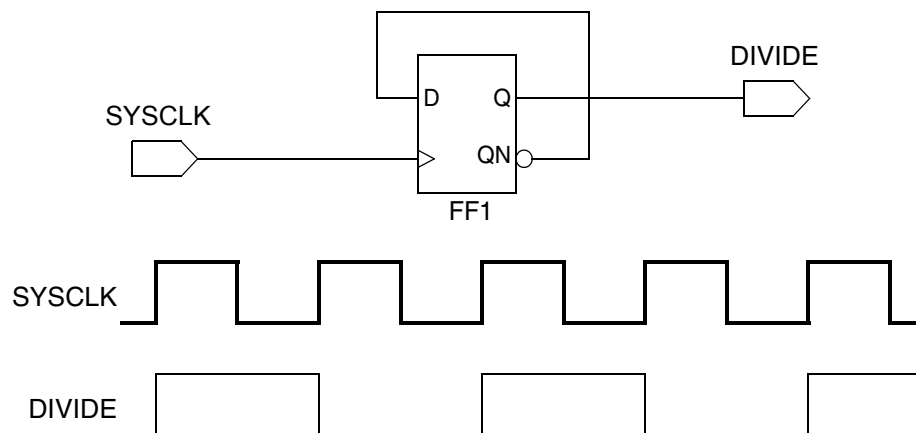

The tool does not derive the behavior of the generated clock from the logic. You must specify the behavior of the generated clock, in terms of the master clock, by using the `create_generated_clock` command. When you do so, you must specify the following information:

- The source objects, ports, pins, or nets, on which to create the generated clock
- The source of the master clock by using the `-source` option
- How the frequency or the waveform of the generated clock is derived, by using one of the following three methods:
 - To derive the generated clock frequency by dividing the master clock frequency, use the `-divide_by` option and specify the division factor.
 - To derive the generated clock frequency by multiplying the master clock frequency, use the `-multiply_by` option and specify the multiplication factor.

- To derive the generated clock waveform based on specific edges of the master clock, use the `-edges` option and specify the list of edges of the master clock to use.

Optionally, you can do the following:

- Specify a name for the generated clock by using the `-name` option.

If you do not specify a name for the generated clock, the tool uses the name of the first object in the list of source objects you specified.

- Add multiple generated clocks on the same generated clock source object by using the `-add` option.

When you do so, you must specify the master clocks for the additional generated clocks by using the `-master_clock` option.

- Consider only the combinational paths between the generated clock source and the master clock source, when calculating the source latency of the generated clock, by using the `-combinational` option.

During timing analysis, by default, the tool considers both the combinational and sequential paths between the generated clock source and the master clock source.


- For divide-by or multiply-by generated clocks created with the `-divide_by` or `-multiply_by` option, invert the generated clock waveform by using the `-invert` option.
- For multiply-by generated clocks created with the `-multiply_by` option, change the duty cycle of the generated clock by using the `-duty_cycle` option.
- For generated clocks derived from specific edges of the master clock with the `-edges` option, delay or shift the selected master clock edges by using the `-edge_shift` option.

Generated Clock Examples

The following example creates two generated clocks named DIV2A and DIV2A_INV that has half the frequency of the master clock named CLKA. In addition, the waveform of the generated clocks named DIV2_INV is inverted from that of the master clock.

```
icc2_shell> create_generated_clock -name DIV2A \
           -source [get_ports CLKA] -divide_by 2 \
           [get_pins U15/Q]
icc2_shell> create_generated_clock -name DIV2A_INV \
           -source [get_ports CLKA] -divide_by 2 -invert \
           [get_pins U15/QN]
```


The following figure shows the waveforms for the master clock and generated clocks of this example.

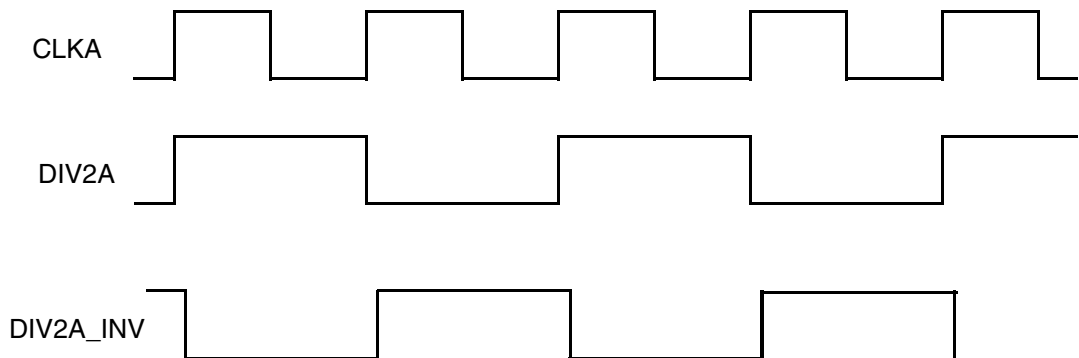Figure 2-2 Waveforms of the Master Clock and Divide-by-Two Generated Clocks

The following example creates a generated clock named MULT2B that has twice the frequency on the master clock named CLKB and a 75% active duty cycle.

```
icc2_shell> create_generated_clock -name MULT2B -duty_cycle 75 \
    -source [get_ports CLKB] -multiply_by 2 \
    [get_pins U29/GC]
```

The following figure shows the waveforms for the master clock and generated clock of this example.

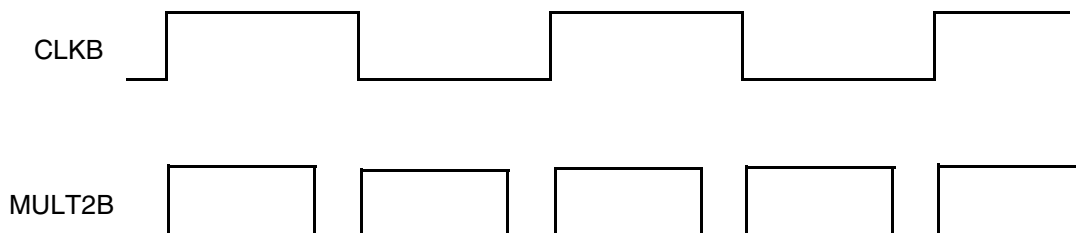Figure 2-3 Waveform of the Master Clock and Multiply-by-Two Generated Clock

The following example creates a master clock named CLKC and a generated clocks named DIV3C that has a waveform based on the third, fifth, and ninth edge of the master clock and each edge shifted by 2.2 time units.

```
icc2_shell> create_clock -period 2.2 -name CLKC [get_ports CLKC]

icc2_shell> create_generated_clock -name DIV3C \
    -edges {3 5 9} -edge_shift {2.2 2.2 2.2} \
    -source [get_ports SYSCLK] [get_pins U41/QN]]
```

The `report_clocks` command reports the specified clocks as follows:


p - propagated_clock
G - Generated clock

Clock	Period	Waveform	Attrs	Sources
CLKC	2.20	{0 1.1}		{CLKC
DIV3C	6.60	{4.4 6.6}	G	{U41/Q}

Generated Clock	Master Source	Generated Source	Waveform Modification
DIV3C	MYCLK	U41/Q	edges (3 5 9) shifts (2.2 2.2 2.2)

The following figure shows the waveforms for the master clock and generated clock of this example.

Figure 2-4 Waveforms of the Master Clock and Divide-by-Three Generated Clock With Shifted Edges

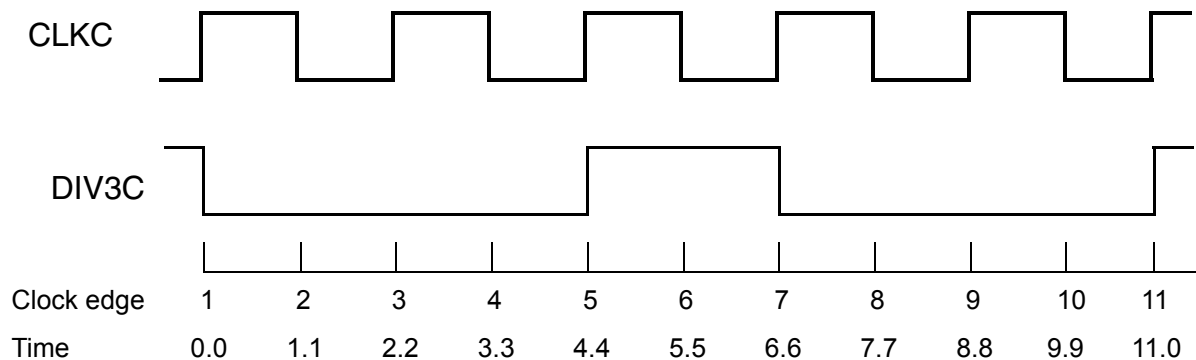


The following example creates a generated clock named CLKD and specifies that the tool uses only combinational paths between the generated clock source and mater clock source, when calculating the source latency for this generated clock:

```
icc2_shell> create_generated_clock -name CLKD_INV -divide_by 1 \
    -combinational -source [get_ports CLKD] [get_pins U52/Y]
```

The following figure shows the all available paths between the generated clock source and mater clock source for this example.

Figure 2-5 Paths in a Generated Clock Source Network

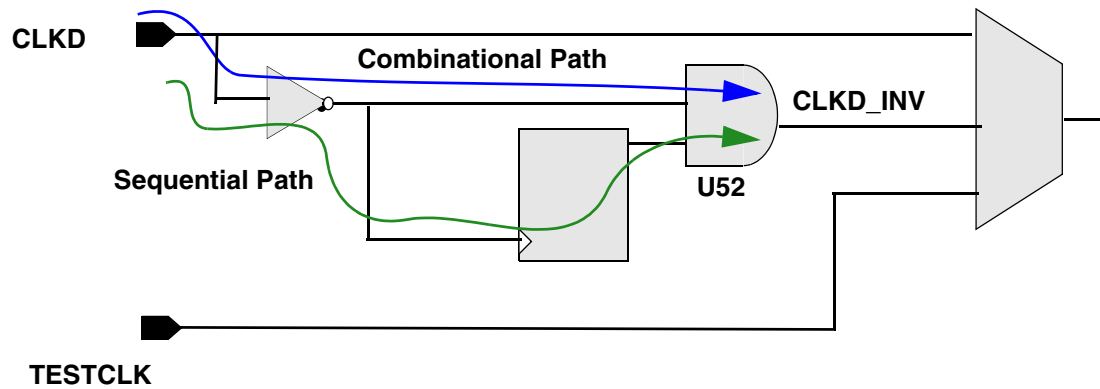

Clock Network Effects

A clock network has the following characteristics:

- Latency

This is the amount of time a clock signal takes to propagate from the original clock source to the sequential elements in the design.

The latency consists of the following two components:

- Source latency.

This is the delay from the clock source to the clock definition pin in the design.

- Network latency

This is the delay from the clock definition point to the register clock pin.

You can represent the network latency by using one of the following methods:

- Estimating and explicitly specifying the latency of each clock

This is referred to as ideal network latency and the corresponding clocks are referred to as ideal clocks. Ideal clocks are usually used before you perform clock tree synthesis.

- Allowing the tool to compute the latency by propagating the delays along the clock network

This is referred to as propagated network latency and the corresponding clocks are referred to as propagated clocks. Propagated clocks should be used only after you perform clock tree synthesis.

- Uncertainty

This is the maximum variation in the clock arrival time at the register clock pins of the same clock or different clocks.

The clock uncertainty has the following two components:

- The clock jitter, which is the variation in the generation of successive edges of clock at the source clock, with respect to an ideal clock waveform
- The clock skew, which is the difference in clock arrival times resulting from different propagation delays from the clock source of the block to the different register clock pins.


This is applicable only before clock tree synthesis. After clock tree synthesis, the clock skew is accounted for by the propagated clock network latency.

- Transition time

This is the amount of time it takes for a signal to change from logic low to logic high (rise time), or from logic high to logic low (fall time).

The following figure shows the timing effects of clock networks.

Figure 2-6 Clock Network Effects

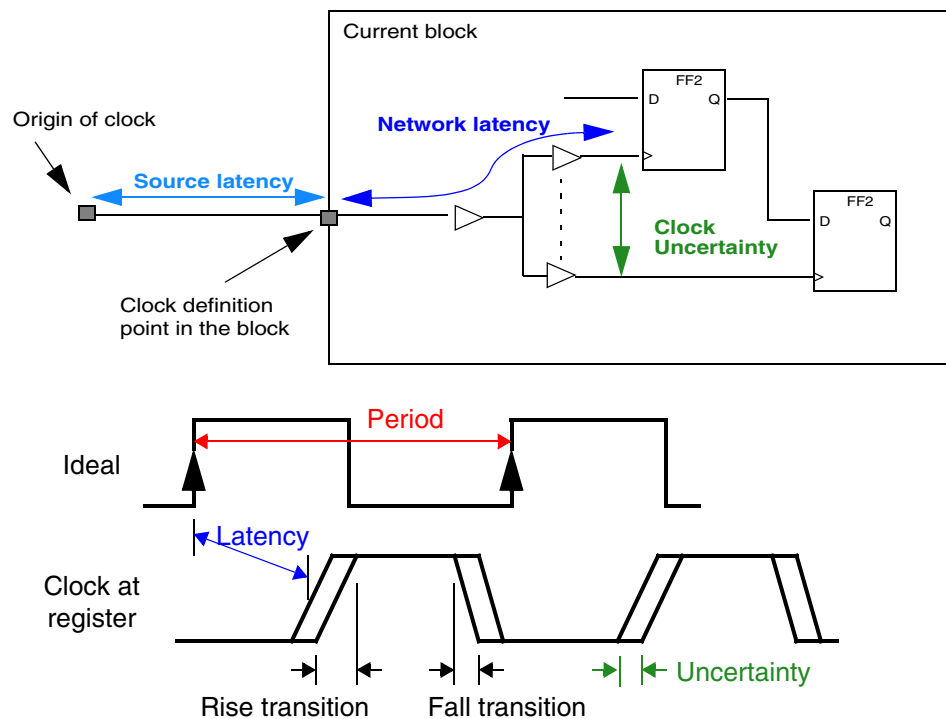

Specifying Clock Source Latency

To set a source latency for both ideal and propagated clocks, use the `set_clock_latency` `-source` command specify the following information:

- The delay value
- The list of objects affected, which can contain one or more clocks, ports, or pins.


If the list of objects specified are pins or ports, you must specify the clock associated with the ideal network latency by using the `-clock` option.

In addition, you can specify

- The early and late variation in the source latency by using the `-early` and `-late` options.

The tool uses the most restrictive source latency value (either early or late) for each startpoint and endpoint clocked by the constraining clock. For a setup check, it uses the late value for each startpoint and the early value for each endpoint. For a hold check, it uses the early value for each startpoint and the late value for each endpoint, as shown in the following figure.

Figure 2-7 Early and Late Source Latency Waveforms

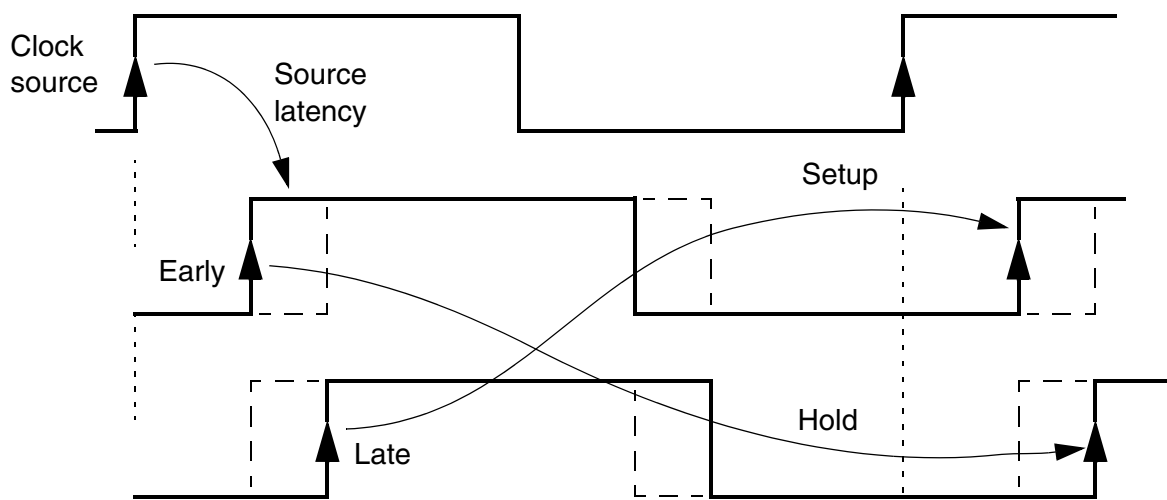

- The dynamic variation component of the source latency, which is the component that differs between successive clock cycles, by using the `-dynamic` option.

For designs with multiple scenarios, by default, the source latency applies only to the current scenario. To specify the source latency for

- All the scenarios of a specific modes, use the `-modes` option.
- All the scenarios of specific corners and the current mode, use the `-corners` option.
- All the scenarios of specific modes and corners, use the `-modes` and `-corners` options
- Specific scenarios, use the `-scenarios` option.

When you use this option, you cannot use the `-modes` or `-corners` options.

The following commands specify the source latency of the clock CLK1 with an external clock network delay varying from 1.5 to 2.5 and having a dynamic component of 0.5:

```
icc2_shell> set_clock_latency 1.5 -source -early -dynamic 0.5 \
[get_clocks CLK1]
icc2_shell> set_clock_latency 2.5 -source -late -dynamic 0.5 \
[get_clocks CLK1]
```

To remove the source latency you specify with the `set_clock_latency` command, use the `remove_clock_latency` command.

Specifying Ideal Network Latency

To specify a clock as an ideal clock, use the `set_ideal_network` command. Until you complete clock tree synthesis, specify all clocks as ideal.

To specify the ideal network latency, use the `set_clock_latency` command and specify the following information:

- The delay value
- The list of objects affected, which can contain one or more clocks, ports, or pins.

If the list of objects specified are pins or ports, you must specify the clock associated with the ideal network latency by using the `-clock` option.

If you specify the ideal latency on a pin or port of a clock network and also the corresponding clock object, the value applied on the pin or port applies to all the register clock pins in the fanout and it overrides latency applied to the clock object.

In addition, you can restrict the ideal network latency setting to only

- The rising or falling edges of the clock by using the `-rise` or `-fall` option. Otherwise, the setting applies to both rising and falling edges.
- The minimum or maximum operating condition by using the `-min` or `-max` option. Otherwise, the setting applies to all operating conditions.

For designs with multiple scenarios, by default, the ideal clock latency applies only to the current scenario. To specify the ideal clock network latency for

- All the scenarios of a specific modes, use the `-modes` option.
- All the scenarios of specific corners and the current mode, use the `-corners` option.
- All the scenarios of specific modes and corners, use the `-modes` and `-corners` options
- Specific scenarios, use the `-scenarios` option.

When you use this option, you cannot use the `-modes` or `-corners` options.

The following example sets the expected rise latency to 1.2 and the fall latency to 0.9 for the clock names CLK1 for the current design:

```
icc2_shell> set_clock_latency -rise 1.2 [get_clocks CLK1]
icc2_shell> set_clock_latency -fall 0.9 [get_clocks CLK1]
```

To remove the ideal network latency you specify with the `set_clock_latency` command, use the `remove_clock_latency` command.

Specifying Clock Uncertainty


To specify the clock uncertainty, use the `set_clock_uncertainty` command and specify the uncertainty value and one of the following:

- A simple uncertainty or jitter, which is the uncertainty between successive edge of the same clock, by specifying an object list consisting of clocks, ports, or pins

The simple uncertainty applies to all the register clock pins in the fanout of the clocks, ports, or pins you specify.

- An interclock uncertainty between two clocks by using one of the following methods:
 - The source clock by using the `-from`, `-rise_from`, or `-fall_from` option
 - The destination clock by using the `-to`, `-rise_to`, or `-fall_to` option

When you specify the interclock uncertainty between two clocks, if you have timing paths from the first clock to the second and from the second clock to the first, you must specify the uncertainty for both directions, even if the value is the same.

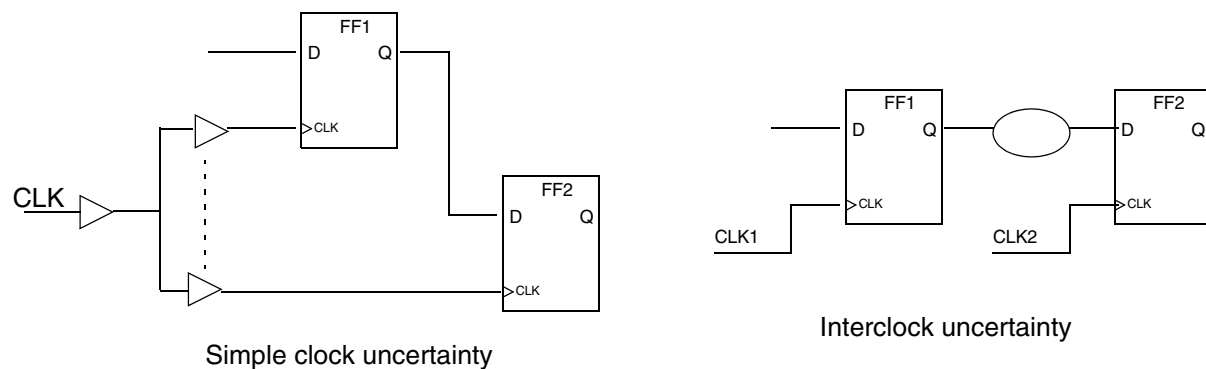Figure 2-8 Simple and Interlock Uncertainty

To specify the simple clock or interlock uncertainty for

- Setup checks, use the `-setup` option.
- Hold checks, use the `-hold` option.

For designs with multiple scenarios, by default, the clock uncertainty applies only to the current scenario. To specify the clock uncertainty for

- All the scenarios of a specific modes, use the `-modes` option.
- All the scenarios of specific corners and the current mode, use the `-corners` option.
- All the scenarios of specific modes and corners, use the `-modes` and `-corners` options
- Specific scenarios, use the `-scenarios` option.

When you use this option, you cannot use the `-modes` or `-corners` options.

For example, to set a simple setup uncertainty of 0.21 and a hold uncertainty of 0.33 for all paths leading to endpoints clocked by the clock named CLK1, use the following commands:

```
icc2_shell> set_clock_uncertainty -setup 0.21 [get_clocks CLK1]
icc2_shell> set_clock_uncertainty -hold 0.33 [get_clocks CLK1]
```

To set an interlock uncertainty of 2 between clocks named CLKA and CLKB, for both setup and hold, use the following commands:

```
icc2_shell> set_clock_uncertainty 2 -from [get_clocks CLKA] \
           -to [get_clocks CLKB]
icc2_shell> set_clock_uncertainty 2 -from [get_clocks CLKB] \
           -to [get_clocks CLKA]
```

To remove clock uncertainty settings, use the `remove_clock_uncertainty` command.

Specifying Ideal Clock Transition

The default transition time of an ideal clock is zero. To specify a nonzero transition time for an ideal clock, use the `set_clock_transition` command and specify the following:

- The ideal transition value
- The list of clocks it applies to

In addition, you can specify that the transition time applies to only

- The rising or falling edges of the clock by using the `-rise` or `-fall` option.
- The minimum conditions or maximum conditions by using the `-min` or `-max` option.

For designs with multiple scenarios, by default, the ideal clock transition applies only to the current scenario. To specify the ideal clock transition for

- All the scenarios of a specific modes, use the `-modes` option.
- All the scenarios of specific corners and the current mode, use the `-corners` option.
- All the scenarios of specific modes and corners, use the `-modes` and `-corners` options
- Specific scenarios, use the `-scenarios` option.

When you use this option, you cannot use the `-modes` or `-corners` options.

The tool uses the transition times you specify for all register clock pins in the transitive fanout of clocks you specify.

For example, for the current scenario, to specify a transition time of 0.64 at the clock pins of all the registers of the clock named CLK1, use the following command:


```
icc2_shell> set_clock_transition 0.64 [get_clocks CLK1]
```

To remove the ideal transition specified by this command, use the `remove_clock_transition` command.

Controlling the Clock Marking Behavior

Starting from the clock root, the tool traverses each clock network and identifies all the clock-network pins by setting the `is_clock_used_as_clock` attribute to `true` for each pin. However, if a clock network reaches a pin beyond which there are no sequential pins, as shown in the following figure, the tool sets the `is_clock_used_as_data` attribute of that pin to `true`. Such a pin, where the clock network crosses over to the data network, is known as a clock-to-data pin.

Figure 2-9 Clock-to-Data Pin

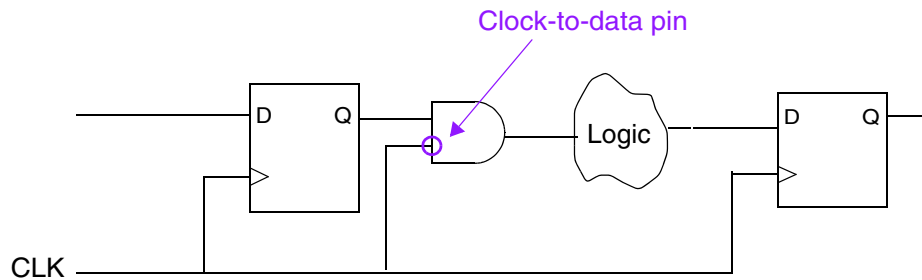

You can use the following command to identify the clock-to-data pins in your block:

```
icc2_shell> get_pins -filter "is_clock_used_as_data==true"
```

The process of identifying clock-network pins and clock-to-data pins is known as clock marking. The IC Compiler II and PrimeTime clock marking behavior has slight differences. You can specify that the IC Compiler II tool uses the same clock marking behavior as the PrimeTime tool by setting the `time.clock_marking` application option to `primitime`. The default is `native`.

For more information about the differences in the IC Compiler II and PrimeTime clock marking behavior, see the man page of the `time.clock_marking` application option.

Enabling Clock-to-Data Analysis for Ideal Clocks

If a propagated clock reaches a clock-to-data pin, the tool uses the propagated clock arrival time as the data arrival time and the propagated clock transition time as the data transition time at the pin.

When an ideal clock reaches a clock-to-data pin, by default, the tool does not use the ideal clock latency as the data arrival time and the ideal clock transition time as the data transition time at the pin. To use the ideal clock latency and transition time at the clock-to-data pin, set the `time.enable_clock_to_data_analysis` application option to `true`.


Unateness of Clocks

A clock signal is

- Positive unate if a rising edge at the clock source can only cause a rising edge at the register clock pin, and a falling edge at the clock source can only cause a falling edge at the register clock pin.

- Negative unate if a rising edge at the clock source can only cause a falling edge at the register clock pin, and a falling edge at the clock source can only cause a rising edge at the register clock pin. In other words, the clock signal is inverted.
- Non-unate if the clock sense is ambiguous as a result of non-unate timing arcs in the clock path. For example, a clock that passes through an XOR gate is not unate. The clock sense could be either positive or negative, depending on the state of the other input to the XOR gate.

The following figure shows examples of clock logic that result in unate and non-unate clock signals.

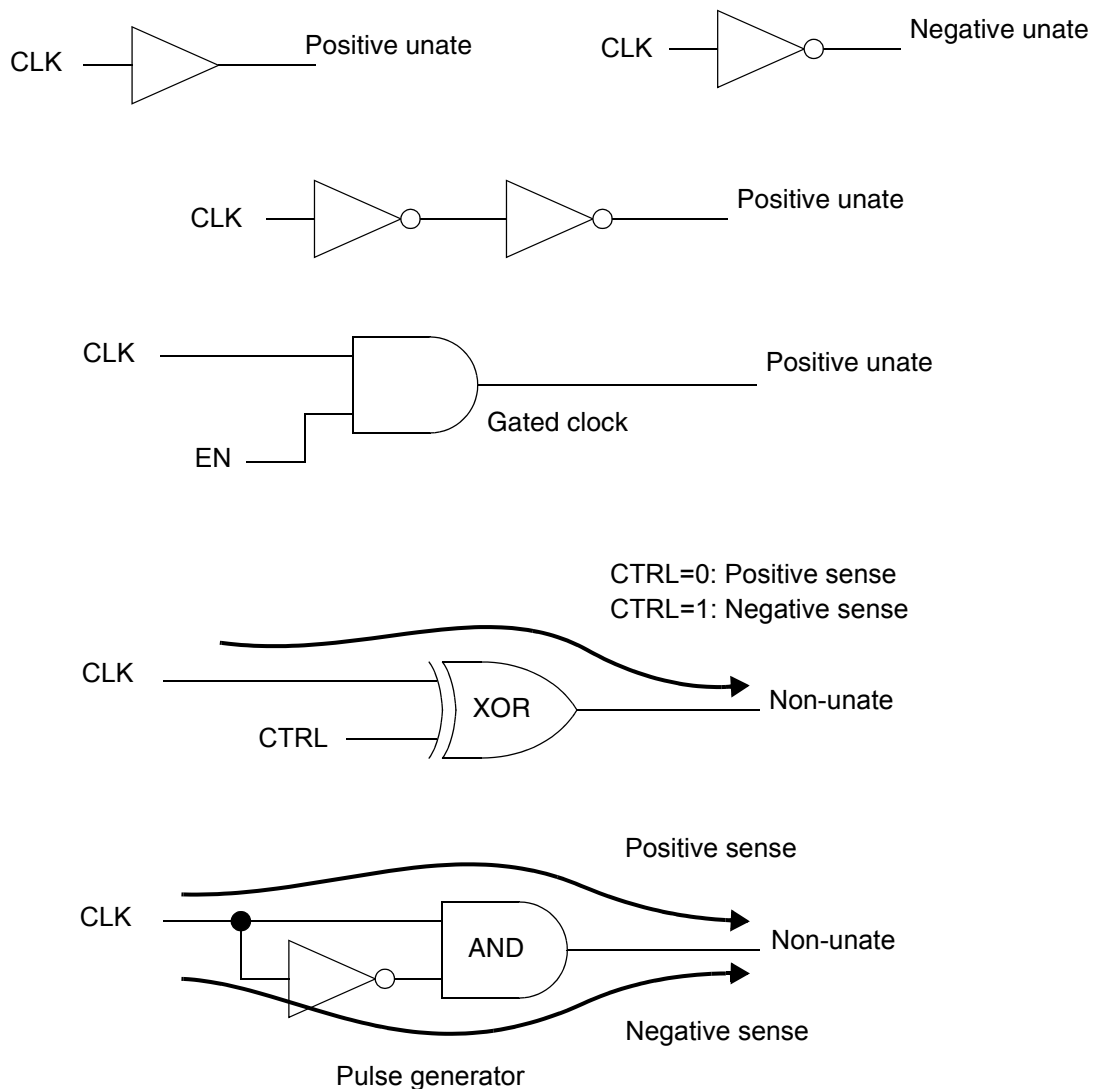Figure 2-10 Unate and Non-Unate Clock Signals

Propagating a Specific Clock Sense

If clock network contains only logic that results in positive or negative unate clock signals, the tool can derive the sense of the clock signal arriving at each register clock pin. If the clock network contains logic that results in a non-unate clock signal, you can resolve this ambiguity by using the `set_sense` command to only propagate a specific sense of a clock.

The following example propagates only the positive sense of the clock named CLK1 and the negative sense of the clock named CLK2 beyond the cell pin named U29/z:

```
icc2_shell> set_sense -positive \  
             -clocks [get_clocks CLK1] [get_pins U29/z]  
icc2_shell> set_sense -negative \  
             -clocks [get_clocks CLK2] [get_pins U29/z]
```

The following example prevents the tool from propagating all clocks, both as clock and data, beyond the pin named U32/z:

```
icc2_shell> set_sense -stop_propagation [get_pins U32/z]
```

Creating Pulse Clocks

A pulse clock, which are often used to improve performance and reduce power consumption, consists of a sequence of short pulses whose rising and falling edges are both triggered by the same edge of another clock.

To analyze the timing of a circuit containing pulse clocks, the tool needs information about the timing characteristics of the clock. To do so, you can use a pulse generator cell that has been characterized in its logic library description. In that case, no additional action is necessary to specify the pulse clock characteristics. For information about specifying the pulse generator characteristics of a library cell, see the Library Compiler documentation.

If characterized pulse generator cells are not available in the cell library, you must specify the pulse clock characteristics at each pulse generation point in the design by using one of the following methods:

- Use the `create_generated_clock` command to describe the pulse timing with respect to the source clock.
This creates a new clock domain at the pulse generation point.
- Use the `set_sense` command to specify the sense of the generated pulses with respect to the source clock.

This does not create a new clock domain, but merely specifies the sense for an existing clock downstream from the specified point.

Creating a Pulse Clock With the `create_generated_clock` Command

You can use the `-edges` option with the `create_generated_clock` command to create a pulse clock. When using the `-edges` option,

- The position of the repeated digit determines whether an active-high or active-low pulse is generated.

- The edge number that is repeated determines the type of edge in the master clock used to trigger the pulse.


For example, if the

- Rising edge of the source triggers a high pulse, use the `-edges {1 1 3}` option setting.
- Falling edge of the source triggers a high pulse, use the `-edges {2 2 4}` option setting.
- Rising edge of the source triggers a low pulse, use the `-edges {1 3 3}` option setting.
- Falling edge of the source triggers a low pulse, use the `-edges {2 4 4}` option setting.

Specifying the generated clock as a pulse clock using repeated edge digits ensures correct checking of delays between the source clock and the pulse clock.

Consider the pulse clock circuit shown in the following figure:

Figure 2-11 Pulse Clock Specified as a Generated Clock

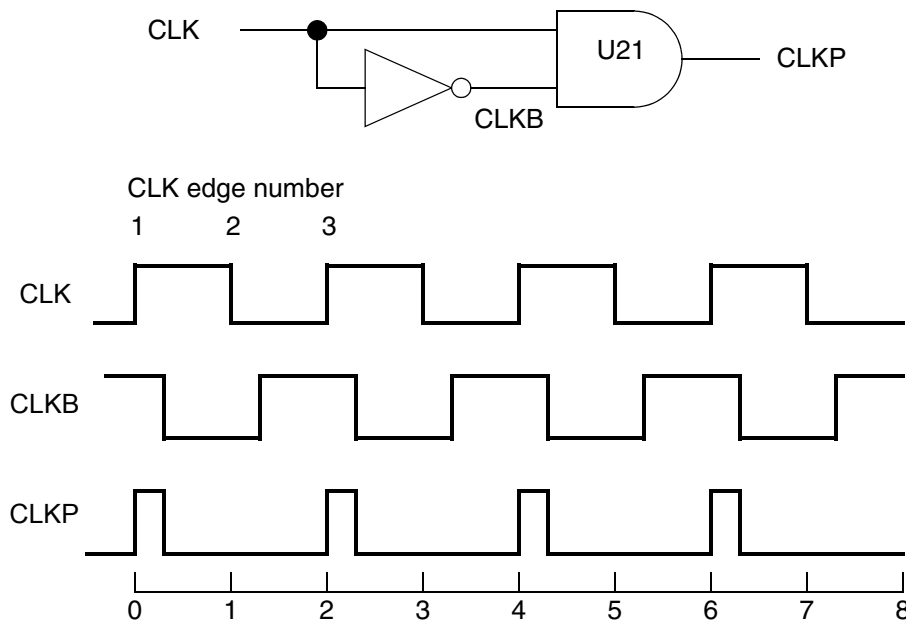

Edge number 1 of the source triggers both the rising and falling edges of the pulse clock. The pulse width is determined by the delay of the inverter.

To specify the generated pulse clock CLKP as a generated clock:

```
icc2_shell> create_generated_clock -name CLKP -source CLK \
            -edges {1 1 3} [get_pins U21/z]
```

Defining a Pulse Clock With the `set_sense` Command

You can use the `-pulse` option with the `set_sense` command to specify an existing clock as a pulse clock.

To define a

- High pulse that is rise triggered, use the `-pulse rise_triggered_high_pulse` option setting.
- Low pulse that is rise triggered, use the `-pulse rise_triggered_low_pulse` option setting.
- High pulse that is fall triggered, use the `-pulse fall_triggered_high_pulse` option setting.
- Low pulse that is fall triggered, use the `-pulse fall_triggered_low_pulse` option setting.

The pulse clock is not defined as a separate clock domain. Instead, only the specified sense of the source clock is propagated downstream beyond the specified point in the clock network.

The following command specified that the clock at the output of the cell named U21 is a pulse that rises and falls on the rising edge of the source clock:

```
prompt> set_sense -pulse rise_triggered_high_pulse \  
           [get_pins U21/z]
```

Specifying the Nominal Width of a Pulse Clock

The nominal width of the generated pulses is zero whether you use a pulse generator cell defined in the cell library, the `create_generated_clock` command, or the `set_sense` command. To determine the actual pulse width, the tool considers the different rise and fall latency values at the pulse generator output pin:

(high pulse width) = (fall network latency) – (rise network latency)

(low pulse width) = (rise network latency) – (fall network latency)

You can use the `set_clock_latency` command to specify the latency values (and therefore the pulse width) explicitly for an ideal clock, or you can allow the tool to calculate the propagated latency from the circuit for a propagated clock.

For example, to set an ideal pulse width to 0.5 for high pulses, for all registers downstream from the output of the cell named U21, and with an overall latency of 0.6, use the following commands:

```
icc2_shell> set_clock_latency -rise 0.6 [get_pins and2.z]
icc2_shell> set_clock_latency -fall 1.1 [get_pins and2.z]
```

Setting and Reporting Minimum Pulse Width Constraints

The width of the clock pulse at the register might be reduced due to the differences in the propagation delays of the rising and falling clock edges. If the clock pulse is too narrow at a register clock pin, the register might not capture data properly. Therefore, ensuring the clock meets a minimum pulse width constraint is necessary for proper operation of sequential circuits.

Library cell pins can have a minimum pulse width defined. In addition, you can explicitly set the pulse width constraints for specific clocks or clock pins by using the `set_min_pulse_width` command.

By default, the constraint is applied to both the high and low pulse of the clock. To specify for only the high or low pulse, use the `-high` or `-low` option.

The following example sets a high and low minimum pulse width constraint of 0.6 and 1.0 for the clock signal at the reg1/CK pin:

```
set_min_pulse_width -high 0.6 reg1/CK
set_min_pulse_width -low 1.0 reg1/CK
```

To check for pulse width violations, use the `report_min_pulse_width` or `report_constraints -min_pulse_width` command.

```
icc2_shell> report_min_pulse_width
...

```

Pin	Required pulse width	Actual pulse width	Slack
reg1/CK (low)	1.00	0.87	-0.13
reg1/CK (high)	0.60	1.13	0.53

To remove these constraints, use the `remove_min_pulse_width` command.

Defining the Relationship Between Clock Groups

For designs with multiple clocks, by default, the tool checks for timing paths between all clocks during timing analysis. However, if there is no interaction between specific clocks, you can specify that information by using `set_clock_groups` command, which can reduce the runtime for timing analysis.

When you use the `set_clock_groups` command, you must specify the following information:

- The relationship between the clock groups as one of the following:
 - Physically exclusive by using the `-physically_exclusive` option

The tool assumes that these clock groups do not coexist in the design. Therefore, it does not check for timing paths between these clock groups and does not perform crosstalk analysis between the nets of the clock groups.
 - Logically exclusive by using the `-logically_exclusive` option

The tool assumes that there is no phase relationship between these clock groups. Therefore, it does not check the timing paths between the clocks. However, it performs crosstalk analysis between the nets of the clock groups.
 - Asynchronous by using the `-asynchronous` option

The tool assumes that there is no phase relationship between these clock groups. Therefore, it does not check the timing paths between the clocks. However, it performs crosstalk analysis between the nets of the clock groups using infinite arrival time windows.
- One or more clock groups by using the `-group` option one or more times

If you specify the `-group` option

 - One time, the tool assumes the specified relationship between the clocks in that group and all other clocks in the design.
 - Two or more times, tool assumes the specified relationship between each pair of clock groups.

Optionally, you can

- Specify a name for the clock grouping by using the `-name` option

If you do not specify a name, the tool derives a unique name for each grouping.
- Enable timing analysis between specific clocks of asynchronous grouping, specified with the `-asynchronous` option, by using `-allow_paths` option.

To remove clock grouping declarations made with the `set_clock_groups` command, use the `remove_clock_groups` command.

For example, to specify that clock CK1 is physically exclusive with respect to all other clocks in the design, use the following command:

```
icc2_shell> set_clock_groups -physically_exclusive -group {CK1}
```

To specify that clocks CK2 and CK3 are logically exclusive with clocks CK4 and CK5, use the following command:

```
icc2_shell> set_clock_groups -logically_exclusive \  
-group {CK2 CK3} -group {CK4 CK5}
```

To specify that clocks CK6, CK7, and CK8 are asynchronous with respect to each other, use the following command:

```
icc2_shell> set_clock_groups -asynchronous \  
-group {CK6} -group {CK7} -group {CK8}
```

Reporting Clock Related Information

To get a report on clocks that have been defined with the `create_clock` and `create_generated_clock` commands, use the `report_clocks` command. By default, this command reports

- The period, waveform, attributes, and source for all clocks.
- The master clock source, master clock name, and waveform modification for all generated clocks.

Optionally, you can also report the following:

- Information for selected clocks by specifying the clock names
- Ideal clock network characteristics, including the source and network latency specified with the `set_clock_latency` command, uncertainty specified with the `set_clock_uncertainty` command, and ideal transition specified with the `set_clock_transition` command by using the `-skew` option
- Clock grouping information specified with the `set_clock_groups` command by using the `-groups` option
- Clock information for selected modes by using the `-modes` option

To create a collection of clocks, use the `get_clocks` or `all_clocks` command. To distinguish between a clock object and port object that share the same name, use the `get_clocks` and `get_ports` commands.

For example, to generate a report on the clocks that have a period less than or equal to 15.0, use the following command:

```
icc2_shell> report_clocks [get_clocks -filter "period <= 15.0" *]
```

```
...
```

Attributes:

```

d - dont_touch_network
f - fix_hold
p - propagated_clock
G - generated_clock

```

Clock	Period	Waveform	Attrs	Sources
PCI_CLK	15.00	{0 7.5}		{pclk}
SDRAM_CLK	7.50	{0 3.75}		{sdram_clk}
SD_DDR_CLK	7.50	{0 3.75}	G	{sd_CK}
SYS_CLK	8.00	{0 4}		{sys_clk}
Generated Clock	Master Source	Generated Source	Master Clock	Waveform Modification
SD_DDR_CLK	sdram_clk	{sd_CK}	SDRAM_CLK	divide_by(1)

Removing Clocks

To remove a

- Real or virtual clock created with the `create_clock` command, use the `remove_clocks` command.
- Generated clock created with the `create_generated_clock` command, use the `remove_generated_clocks` command.

3

Constraining Timing Paths

A timing path is a point-to-point sequence through a design that starts at a register clock pin or an input port, passes through combinational logic elements, and ends at a register data input pin or an output port.

The following topics provide information about timing paths and tasks related to constraining timing paths:

- [Timing Paths and Path Groups](#)
- [Creating Path Groups](#)
- [Path Delay Analysis for the Same Launch and Capture Clock](#)
- [Path Delay Analysis for Different Launch and Capture Clocks](#)
- [Introduction to Input and Output Delays](#)
- [Setting Input and Output Delays for Ports](#)
- [Specifying Timing Exceptions](#)
- [Specifying False Path Exceptions](#)
- [Specifying Maximum and Minimum Path Delay Exceptions](#)
- [Specifying Multicycle Path Exceptions](#)
- [Specifying Path Timing Margin Exceptions](#)
- [Specifying Exceptions Efficiently](#)

- [Order of Precedence for Exceptions](#)
- [Disabling Timing Paths Within Lower-Level Blocks](#)
- [Using Case Analysis](#)
- [Disabling Timing Arcs](#)
- [Enabling Preset and Clear Timing](#)
- [Introduction to Data-to-Data Checks](#)
- [Specifying Data-to-Data Checks](#)
- [Enabling Library-Based Data Checks](#)
- [Introduction to Clock-Gating Checks](#)
- [Specifying Clock-Gating Checks](#)

Timing Paths and Path Groups

The IC Compiler II tool analyzes and optimizes timing paths in the design. Each path has a

- Startpoint, where data is launched.


The startpoint of a path is a clock pin of a sequential element or an input port of the design. The arrival of an active clock edge at a startpoint launches data through the path. An input port can be considered a startpoint due to the arrival of data launched by an external source.

- Endpoint, where the data is captured after it traverses through combinational logic.

The endpoint of a path is a data input pin of a sequential element or an output port of the design. The arrival of an active clock edge at the clock input of the capture device captures data at the end of the path. An output port can be considered an endpoint due to the external capture of the data leaving the output port.

The following figure shows an example of a design and its timing paths.

Figure 3-1 Timing Path Types

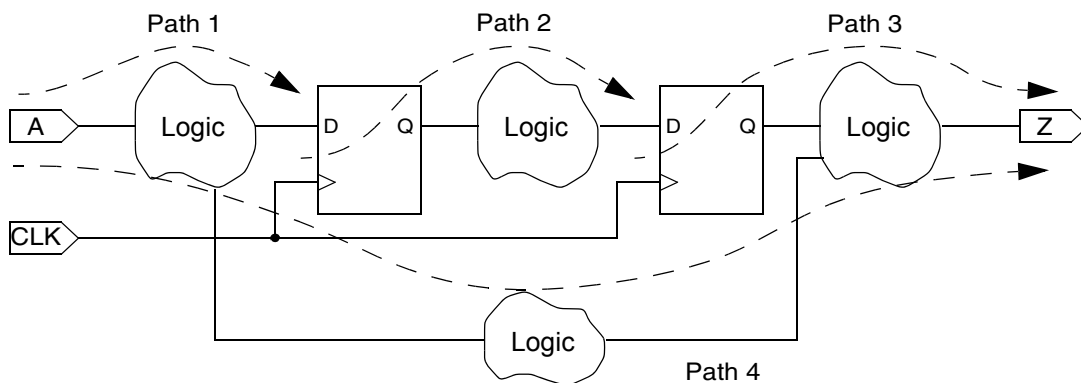

Each path starts at a data launch point, passes through some combinational logic, and ends at a data capture point:

- Path 1 starts at an input port and ends at the data input of a sequential element.
- Path 2 starts at the clock pin of a sequential element and ends at the data input of a sequential element.
- Path 3 starts at the clock pin of a sequential element and ends at an output port.
- Path 4 starts at an input port and ends at an output port.

Each path in the design has an associated timing slack. The slack is a time value that can be positive, zero, or negative. The single path having the worst slack is called the critical path. This is the path that has the most negative slack, or if there are no timing violations, the one with the smallest slack among all paths in the design.

The tool organizes timing paths into groups, and performs timing analysis and optimization separately for each group. By default, there is one path group for each clock in the design. All timing paths clocked by a given clock at the path endpoint belong to the path group for that clock.

The tool also creates a path group called ****default**** (including the asterisks). The ****default**** group contains any paths that cannot be categorized by the clock used at the path endpoint, such as feedthrough and asynchronous paths.

All timing paths within a path group are optimized for timing together, starting with the critical path.

All path groups have the same weight by default, and paths within a group are optimized and reported separately from other path groups. Within each path group, the tool optimizes and improves the timing of the critical path until another paths in the group becomes more critical.

If multiple clocks arrive at the clock pin of a sequential cell, the tool constrains the cell with respect to each clock.

Creating Path Groups

To change the paths in a path groups, you can use the `group_path` command as follows:

- Create a new path group and specify its name by using the `-name` option.
- Assign paths to an existing path group and specify the existing path group name by using the `-name` option.
- Move paths from their current path group to the default path group they belong by using the `-default` option.

To identify the timing paths, use one or more of the following methods:

- Specify the startpoint of the path by using the `-from`, `-rise_from`, or `-fall_from` option
- Specify one or more throughpoints of the path by using the `-through`, `-rise_through`, or `-fall_through` option one or more times
- Specify the endpoint of the path by using the `-to`, `-rise_to`, or `-fall_to` option

You can influence how optimization handles the path group as follows:

- Change the weight of the path group by using the `-weight` option.

- Specify a critical range to identify critical paths for optimization by using the `-critical_range` option.

The tool works on all critical paths within the range specified by the `-critical_range` option, starting from the most critical path.

The following example creates a path group named `slct` that has weight of 2.5, a critical range of 5, and consisting of all the timing paths starting from the register named `slct_reg`. It then adds the timing paths starting from the input port named `slct_nxt` to this path group. However, it removes the paths that start at the input port named `slct_nxt` and go through both the pins named `U29/A` and `U54/Y` from this group and returns these paths to their default path group.

```
icc2_shell> group_path -name slct -weight 2.5 -critical_range 5 \
    -from [get_cells slct_reg]
icc2_shell> group_path -name slct -from [get_ports slct_nxt]
icc2_shell> group_path -default [get_ports slct_nxt] \
    -through [get_pin U29/A] -through [get_pin U54/Y]
```


To report path group information, use the `report_path_groups` command and to remove path groups, use the `remove_path_groups` command.

Path Delay Analysis for the Same Launch and Capture Clock

By default, the tool checks for data arrival at the next capture clock edge following the launch event. For a single-clock design, launch occurs on a clock edge and capture occurs at the next clock edge.

The following figure shows how the tool determines the setup and hold constraints for a path that is launched and captured by the same clock, which has a period of 10.

Figure 3-2 Setup and Hold Analysis for the Same Launch and Capture Clock

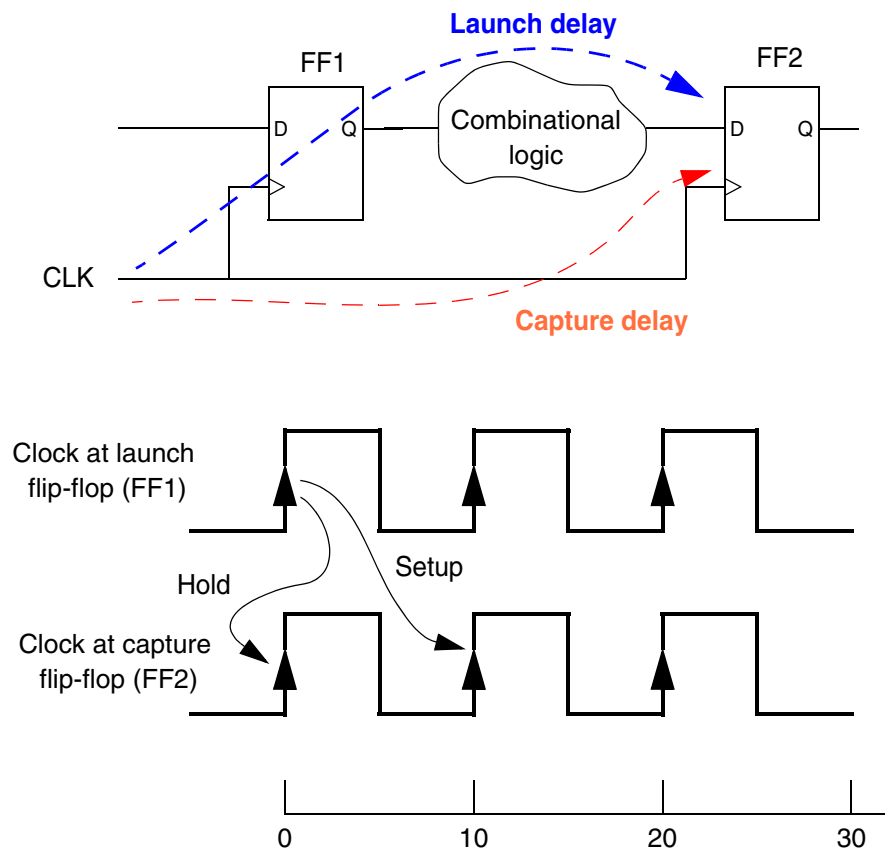

During timing analysis the tool performs

- A setup check to verify that the data launched from FF1 at time 0 arrives at the D input of FF2 in time to meet the setup requirements of the capture edge at time 10.
If the data takes too long to arrive and it does not meet the data setup requirements, the tool reports a setup violation.
- A hold check to verify that the data launched from FF1 at time 0 does not arrive too early at FF2, before the previous data at FF2 has met the hold requirements.
If the data arrives too early, the tool reports a hold violation.


When calculating the delays along the launch and capture paths, the tool includes the delays due to the effects of the clock network, such as clock source latency, network latency, and clock uncertainty.

Path Delay Analysis for Different Launch and Capture Clocks

For a design with multiple clocks, by default, the tool assumes that all clocks are synchronous to each other, with a fixed phase relationship. During timing analysis, for paths where the launch and capture clocks are different, it considers the nearest possible capture clock edge that can occur after the launch clock edge and determines the most restrictive setup and hold requirements for the path.

The following figure shows a path that is launched and captured by two different clocks.

Figure 3-3 Path That is Launched and Captured by Different Clocks

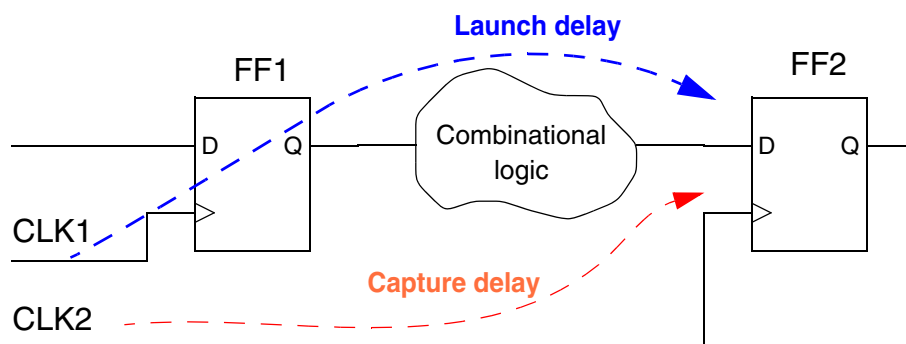

The clocks in this example, CLK1 and CLK2, are created with the following commands:


```
icc2_shell> create_clock -period 10 -waveform {0 5} CLK1
icc2_shell> create_clock -period 25 -waveform {5 12.5} CLK2
```

Setup Analysis for Different Launch and Capture Clocks

When the launch and capture clock are different, the tool looks at the relationship between the active edges of the launch and capture clocks over a number of repeating cycles that is the least common multiple of the two clock periods. For each capture edge at the destination flip-flop, the tool assumes that the corresponding launch edge is the nearest source clock edge occurring before the capture edge.

In the following figure, there are two launch and capture edge combinations that the tool considers. They are

- The capture edge at time=5 and the nearest preceding launch edge is at time=0, which is labeled Setup 1.
- The capture edge at time=30 and the nearest preceding launch edge is at time=20, which is labeled Setup 2.

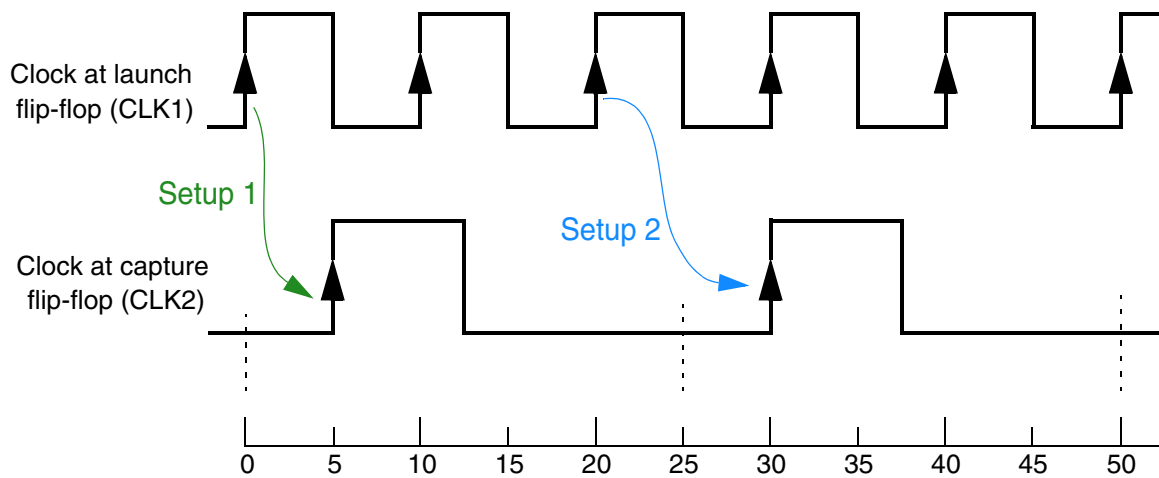Figure 3-4 Setup Analysis for Different Launch and Capture Clock


The source clock edge at time=30 occurs at the same time as the capture edge, not earlier, so it is not considered the corresponding launch edge.

Setup 1 allows less time between launch and capture. Therefore, it is the more restrictive constraint and determines the maximum allowed delay for the path, which is 5 for this example.

Hold Analysis for Different Launch and Capture Clocks

The hold relationships checked by the tool are based on the clock edges adjacent to those used to determine the setup relationships. To determine the most restrictive hold relationship, the tool considers all valid setup relationships, including both Setup 1 and Setup 2 in the following figure.

Figure 3-5 Hold Analysis for Different Launch and Capture Clock

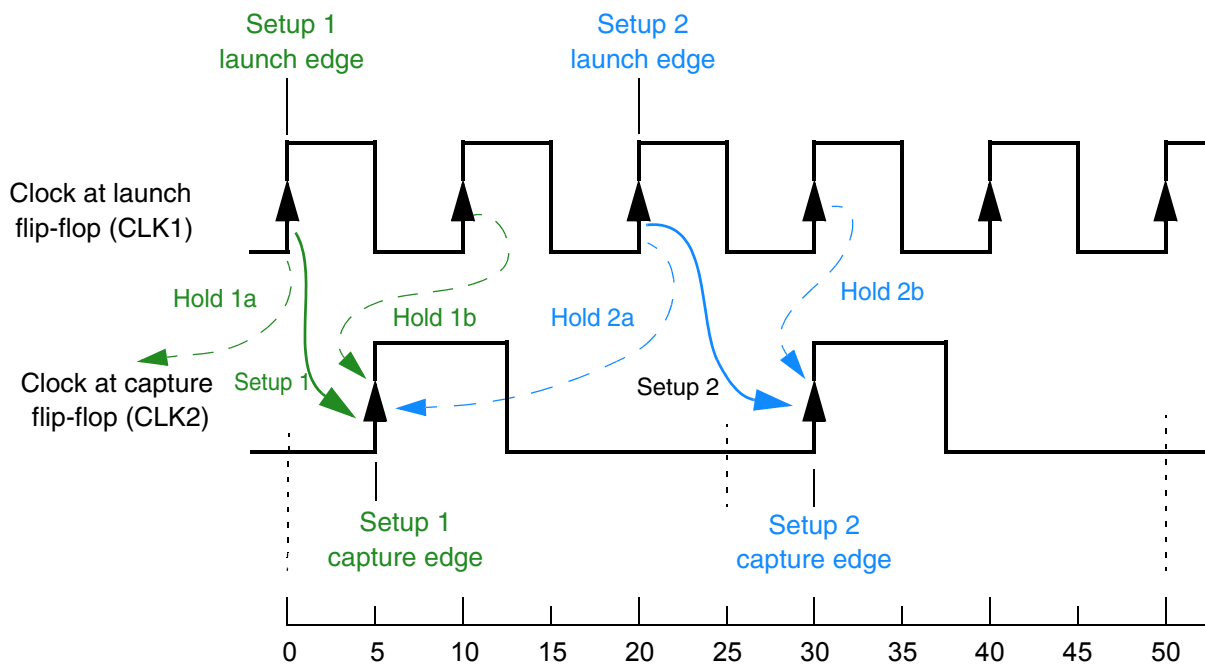

For each setup relationship, the tool performs two different hold checks:

- The data launched by the setup launch edge must not be captured by the *previous* capture edge.
- The data launched by the *next* launch edge must not be captured by the setup capture edge.

For the setup relationship labeled Setup 1, the corresponding two hold checks are labeled Hold1a and Hold1b. Similarly, for the setup relationship labeled Setup 2, the two hold checks are labeled Hold2a and Hold2b.


Of these hold checks, the most restrictive is the one where the capture edge occurs latest relative to the launch edge, which is Hold 2b. Therefore, Hold 2b determines the minimum allowed delay for this path, which is 0.

Introduction to Input and Output Delays

To analyze a timing path, both the startpoint and endpoint of the path must be constrained. However, by default, the tool does not know the data arrival times at input ports and the data required times at output ports. Therefore, to constraint input and output ports, you must specify this information.

In the following figure, the data arriving at the input port named A of the block named BlockA is launched by an external sequential device.

Figure 3-6 External Input Delay

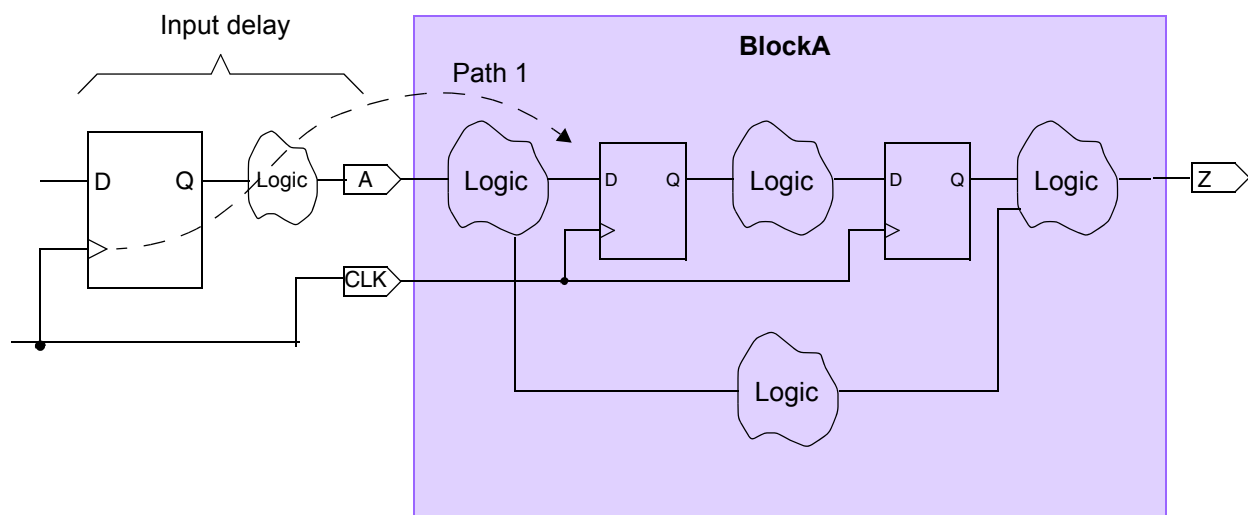


To constrain the input port A, use the `set_input_delay` command and specify

- The clock that launches the data at the external sequential device
- The delay for the data to arrive at the input port after it is launched

In the following figure, the data leaving the output port named Z of the block named BlockA is captured by an external sequential device.

Figure 3-7 External Output Delay

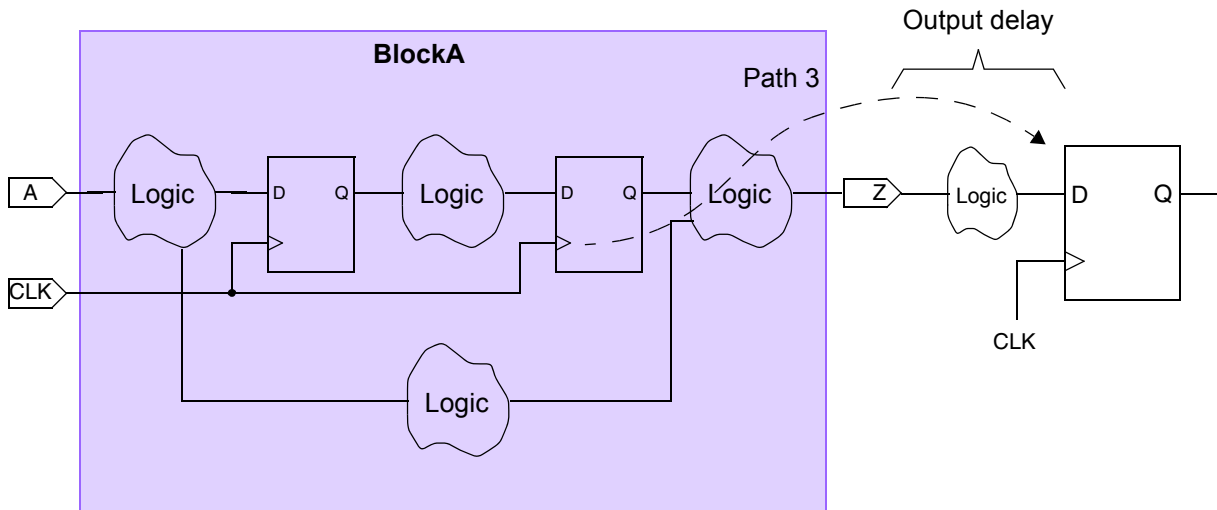

To constrain the output port Z, use the `set_output_delay` command and specify

- The clock that captures the data at the external sequential device
- The delay for the data to arrive at the external sequential device after it leaves port Z

Setting Input and Output Delays for Ports

To constrain an input or output port by specifying the external delay outside the port, use the `set_input_delay` or `set_output_delay` command. You can also use these commands to apply an input or output delay on a pin within the block, thereby making that pin a startpoint or endpoint of a timing path.

When you use the `set_input_delay` or `set_output_delay` command, you must specify the following information:

- The input or output delay value
- The ports or pins that you are constraining

For a more accurate timing analysis, specify a related clock by using one of the following two methods:

- Specify the `-clock` option with the name of the reference clock

When you specify the `-clock` option, by default, the tool

- Assumes the input or output delay is relative to the rising edge of the clock. To specify that the delay is relative to its falling edge, use the `-clock_fall` option with the `-clock` option.
- Adds the source and network latencies specified for the reference clock to the launch or capture path associated with the input or output delay.

To specify that the source and network latencies of the reference clock are already included in the input or output delay, use the `-source_latency_included` and `-network_latency_included` options. If the reference clock is a propagated clock, the `-network_latency_included` option is ignored.

- Specify the `-reference_pin` option with a pin or port on the reference clock network

When you specify the `-reference_pin` option, by default, the tool

- Uses all the clocks that reach the reference pin to constrain the ports. To select a specific clock, use the `-clock` option with the `-reference_pin` option.
- Adds the source and network latencies specified for the for any ideal clocks that reach the reference pin, to the corresponding launch or capture path associated with the input or output delay,

However, for any propagated clocks that reach the reference pin, tool adds the source delay specified for that clock and the propagated clock network delay up to the reference pin to the corresponding launch or capture path associated with the input or output delay.

If you do not specify a relative clock, the tool derives a new clock based on the clocks of the current block.

When you use the `set_input_delay` or `set_output_delay` command, you can specify that the delay:

- Is only for a rise or fall transition by using the `-rise` or `-fall` option.

By default, the tool uses the delay for both the rise and fall transition at the input or output port.

- Is only for the longest or shortest path by using the `-max` or `-min` option.

By default, the tool uses the delay is for both the longest and shortest paths.

- Is with respect to a level-sensitive latch by using the `-level_sensitive` option.

By default, the tool assumes the timing paths associated with the input or output delay are launched or captured by an edge-sensitive flip-flop.

- Should not overwrite any existing input or output delay settings by using the `-add_delay` option.

Use this option to specify different input or output delays with respect to different reference clocks, for the same port.

For designs with multiple scenarios, by default, the input or output delay applies only to the current scenario. To specify the input or output delay for


- All the scenarios of specific modes, use the `-modes` option.
- All the scenarios of specific corners and the current mode, use the `-corners` option.
- All the scenarios of specific modes and corners, use the `-modes` and `-corners` options
- Specific scenarios, use the `-scenarios` option.

When you use this option, you cannot use the `-modes` or `-corners` options.

To remove input or output delays from ports, use the `remove_input_delay` or `remove_output_delay` command.

The following figure shows the external paths for one input and output of a block, and the delays associate with those external paths.

Figure 3-8 External Delays for an Input and Output Port

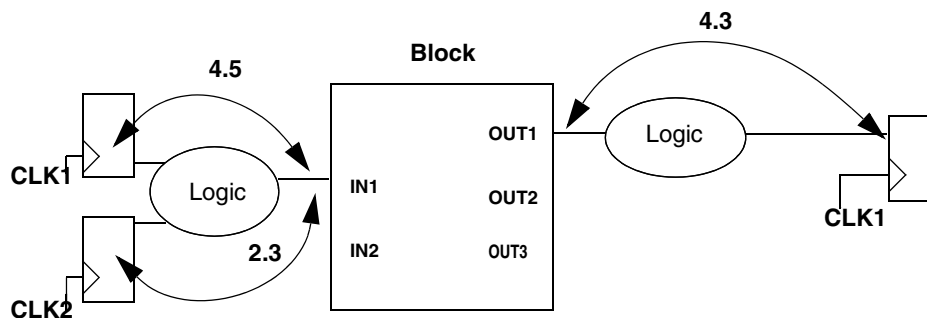

The following commands constrain the input named IN1 by setting an input delay of 4.5 with respect to the clock named CLK1 and an input delay of 2.3 with respect to the clock named CLK2:

```
icc2_shell> set_input_delay 4.5 -clock CLK1 [get_ports IN1]
icc2_shell> set_input_delay 2.3 -clock CLK2 [get_ports IN1] \
-add_delay
```

The following command constrains the output named OUT1 by setting an output delay of 4.3 with respect to the clock named CLK1:


```
icc2_shell> set_input_delay 4.3 -clock CLK1 [get_ports OUT1]
```

Considering the Effect of Delays Through Driving Cells

If you constrain an input or inout port using the `set_driving_cell` command, as shown in the following example, the tool includes the load-dependent value of the external driving-cell delay in the timing paths that begin at the port, as shown in the figure.

```
icc2_shell> set_driving_cell -lib_cell AND2 -from_pin A [get_ports I1]
```

Figure 3-9 Delay Through the Driving Cell

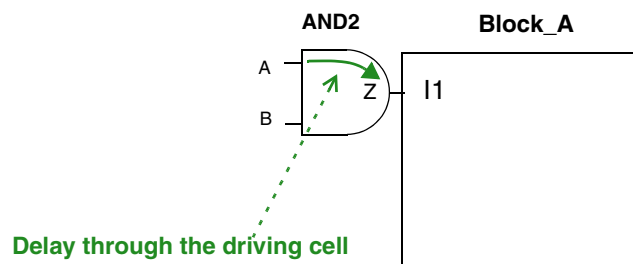

To prevent this delay from being counted twice, estimate the load-dependent delay of the driving cell, then subtract that amount from the input delay you specify on the port.

Effect of Input Delay on Clock Ports

The tool considers the input delay on clock source ports or pins as source latency if the clock is propagated. The input delay can be relative to no clock, or to the clock of that source. The source latency value is added to the clock network delay to determine total latency.

Do not set an input delay on all input ports, as shown in the following example:

```
icc2_shell> set_input_delay 2 -clock CLK [all_inputs]
```

Instead, set in input delay on all inputs excluding the clock ports, as shown in the following example:

```
icc2_shell> set_input_delay 2 -clock CLK \
[remove_from_collection [all_inputs] [get_ports CLK]]
```

Use the `set_clock_latency` command with the `-source` option to define the actual source latency, if any.

Specifying Timing Exceptions

The IC Compiler II tool allows you to set the following types of timing exceptions:

- False paths, which identifies paths that do not need to be analyzed for timing.
To do so, use the `set_false_path` command, as described in [Specifying False Path Exceptions](#).
- Minimum and maximum delay values, which sets minimum and maximum path delay requirements between specified startpoints and endpoints.
To do so, use the `set_max_delay` and `set_min_delay` commands, as described in [Specifying Maximum and Minimum Path Delay Exceptions](#).
- Multicycle paths, which overrides the default single cycle requirement by setting the number of clock cycles required for the specified paths.
To do so, use the `set_multicycle_path` command, as described in [Specifying Multicycle Path Exceptions](#).
- Path timing margins, which tightens or loosens the timing requirement for the specified paths by a specified amount.
To do so, use the `set_path_margin` command, as described in [Specifying Path Timing Margin Exceptions](#).

Each timing exception command can apply to a single path or to a group of related paths, such as all paths from one clock domain to another, or all paths that pass through a specified point in the design.

To report all the timing exceptions that have been applied to a design, use the `report_exceptions` command.

To restore a path to its default before timing exceptions were applied, use the `reset_paths` command or the `-reset_path` option of each timing exception command.

Specifying False Path Exceptions

A false path is a path that does not need to be analyzed for timing. For example, a path can exist between two multiplexed logic blocks that are never selected at the same time, so that path is not valid for timing analysis. Specifying such paths as false paths prevents the tool from spending time analyzing timing paths that would not occur in the real design.

To define timing paths as false paths, use the `set_false_path` command. When you do so, you must specify the paths you want to set as false paths by using one or more of the following methods:

- Specify the startpoint of the path by using the `-from`, `-rise_from`, or `-fall_from` option

Valid startpoints are

- Clocks

If you specify a clock, timing paths starting from all the sequential cells and primary ports constrained by that clock are set as false paths.

- Sequential cells
- Clock pins of a sequential cells
- Data pins of a latches
- Input or inout ports
- Pins with an input delay settings

- Specify one or more throughpoints of the path by using the `-through`, `-rise_through`, or `-fall_through` option one or more times

Valid throughpoints are

- Pins
- Ports
- Cells
- Nets

If all paths going through a pin are false paths, using the `set_disable_timing` to disable a timing arc of that pin is more efficient than using the `set_false_path -through` command.

- Specify the endpoint of the path by using the `-to`, `-rise_to`, or `-fall_to` option

Valid endpoints are

- Clocks

If you specify a clock, timing paths ending at all the sequential cells and primary ports constrained by that clock are set as false paths.

- Sequential cells
- Data pins of a sequential cells
- Output or inout ports

- Pins with an output delay settings

Optionally, you can limit the false-path setting to

- Setup or hold analysis only by using the `-setup` or `-hold` options.
By default, the false-path setting applies to both setup and hold analysis.
- Rise or fall analysis only by using the `-rise` or `-fall` options.
By default, the false-path setting applies to both rise and fall analysis.

To remove a false path setting, use the `set_false_path -reset_path` or `reset_paths` command.

The following example shows how to set a very specific path, which starting from a register clock pin, going through several pins, and ending at a register data pin, as a false path:

```
icc2_shell> set_false_path -from [get_pins reg2/CP] \
    -through [get_pins U31/Z] -through [get_pins U15/Z] \
    -to [get_pins reg7/D]
```

The following example shows how to set all timing paths between two clocks, ck1 and ck2, as false paths:

```
icc2_shell> set_false_path -from [get_clocks ck1] \
    -to [get_clocks ck2]
icc2_shell> set_false_path -from [get_clocks ck2] \
    -to [get_clocks ck1]
```

For this example, an alternative is to use the `set_clock_groups` command to exclude all paths between clocks ck1 and ck2 from timing analysis.

Specifying Maximum and Minimum Path Delay Exceptions

By default, the tool calculates the maximum and minimum allowable path delays by considering the launch and capture clock edge times. To override the default maximum or minimum allowable path delay with your own specific delay constraint, use the `set_max_delay` or `set_min_delay` command. You can also use these commands to constrain a purely combinational timing path that is not constrained by a clock.

When use the `set_max_delay` or `set_min_delay` command, you must specify

- The maximum or minimum delay value
- The path you want to constrain by using one or more of the following methods:
 - Specify the startpoint of the path by using the `-from`, `-rise_from`, or `-fall_from` option.

Valid startpoints are

- Clocks
If you specify a clock, timing paths starting from all the sequential cells and primary ports constrained by that clock are set as false paths.
- Sequential cells
- Clock pins of a sequential cells
- Data pins of a latches
- Input or inout ports
- Pins with an input delay settings
- Specify one or more throughpoints of the path by using the `-through`, `-rise_through`, or `-fall_through` option one or more times.

Valid throughpoints are

- Pins
- Ports
- Cells
- Nets
- Specify the endpoint of the path by using the `-to`, `-rise_to`, or `-fall_to` option.

Valid endpoints are

- Clocks
If you specify a clock, timing paths ending at all the sequential cells and primary ports constrained by that clock are set as false paths.
- Sequential cells
- Data pins of a sequential cells
- Output or inout ports
- Pins with an output delay settings

Optionally, you can limit the maximum or minimum path delay setting to

- Setup or hold analysis only by using the `-setup` or `-hold` options.
By default, it applies to both setup and hold analysis.
- Rise or fall analysis only by using the `-rise` or `-fall` options.
By default, it applies to both rise and fall analysis.

If the startpoint or endpoint of the path for which you applied the `set_max_delay` or `set_min_delay` command is constrained by a clock, the tool uses the clock latencies of the startpoint and endpoint during timing analysis. To ignore the clock latencies of the startpoint and endpoint, use the `-ignore_clock_latency` option.

To remove a maximum or minimum path delay setting, use the `-reset_path` option of the `set_max_delay` or `set_min_delay` command or use the `reset_paths` command.

The following example sets a maximum path delay between registers REGA and REGB to 12 and minimum path delay to 2:

```
icc2_shell> set_max_delay 12.0 \
             -from [get_cells REGA] -to [get_cells REGB]
icc2_shell> set_min_delay 2.0 \
             -from [get_cells REGA] -to [get_cells REGB]
```

Specifying Multicycle Path Exceptions

If the number of clock cycles required to propagate data from the start to the end of a path is more than the single cycle requirement used by the tool, you can specify additional clock cycles for the path by using the `set_multicycle_path` command. Then, the tool calculates the setup or hold constraint according to the specified number of cycles.

When use the `set_multicycle_path` command, you must specify

- The number of clock cycles you want to allocate for the path.

If the launch and capture clocks for the path are different clocks, specify if the number of clock cycles are based on the launch or capture clock by using the `-start` or `-end` options. By default, the tool moves the setup check relative to the capture clock, and the hold check relative to the launch clock.

- The path you want to constrain by using one or more of the following methods:
 - Specify the startpoint of the path by using the `-from`, `-rise_from`, or `-fall_from` option.

Valid startpoints are

- Clocks

If you specify a clock, timing paths starting from all the sequential cells and primary ports constrained by that clock are set as false paths.
- Sequential cells
- Clock pins of a sequential cells
- Data pins of a latches

- Input or inout ports
 - Pins with an input delay settings
 - Specify one or more throughpoints of the path by using the `-through`, `-rise_through`, or `-fall_through` option one or more times.
- Valid throughpoints are
- Pins
 - Ports
 - Cells
 - Nets
- Specify the endpoint of the path by using the `-to`, `-rise_to`, or `-fall_to` option.

Valid endpoints are

- Clocks

If you specify a clock, timing paths ending at all the sequential cells and primary ports constrained by that clock are set as false paths.
- Sequential cells
- Data pins of a sequential cells
- Output or inout ports
- Pins with an output delay settings

Optionally, you can limit the multicycle path setting to

- Setup or hold analysis only by using the `-setup` or `-hold` options.

By default, it applies to both setup and hold analysis.

The tool interprets the `-setup` and `-hold` values in the `set_multicycle_path` command differently. The integer value for the `-setup` argument specifies the number of clock cycles for the multicycle path. In the absence of a timing exception, the default is 1. The integer value for the `-hold` argument specifies the number of clock cycles to move the capture edge backward with respect to the default position, relative to the valid setup relationship. The default is 0.

- Rise or fall analysis only by using the `-rise` or `-fall` options.

By default, it applies to both rise and fall analysis.

To remove a multicycle path setting, use the `set_multicycle_path -reset_path` or `reset_paths` command.

Specifying the Correct Number of Multicycles for Hold Analysis

The following example shows how to determine the correct number of cycles required for hold analysis, when you know the number of cycles required for setup analysis.


In this example, the timing path between registers named Reg4 to Reg5 is designed to take two clock cycles. By default, the tool assumes single-cycle timing for all paths. Therefore, you need to specify a timing exception for this path by using the following command:

To set the multicycle path for this block, use the following command:

```
icc2_shell> set_multicycle_path -setup 2 \
           -from [get_cells Reg4] -to [get_cells Reg5]
```


This command specifies that the path takes two clock cycles, establishing the new setup relationship as shown in the following figure. The second capture edge following the launch edge becomes the applicable edge for the end of the path.

Figure 3-10 Multicycle Path Setup

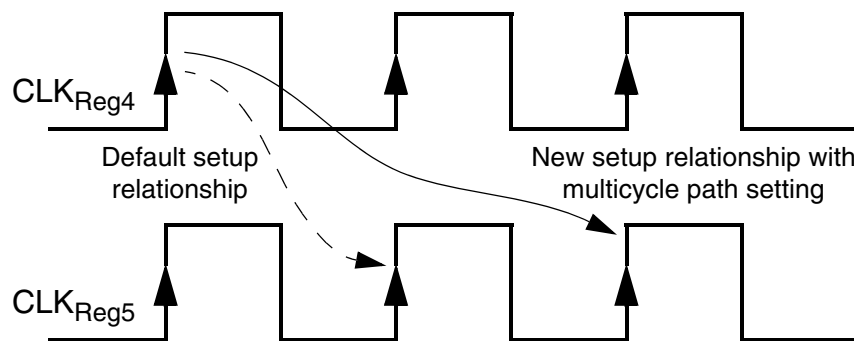

```
icc2_shell> set_multicycle_path -setup 2 \
           -from [get_cells Reg4] -to [get_cells Reg5]
```

Changing the setup relationship implicitly changes the hold relationship as well because all hold relationships are based on the valid setup relationships. The tool verifies that the data launched by the setup launch edge is not captured by the previous capture edge. The new hold relationship is shown in the following figure.

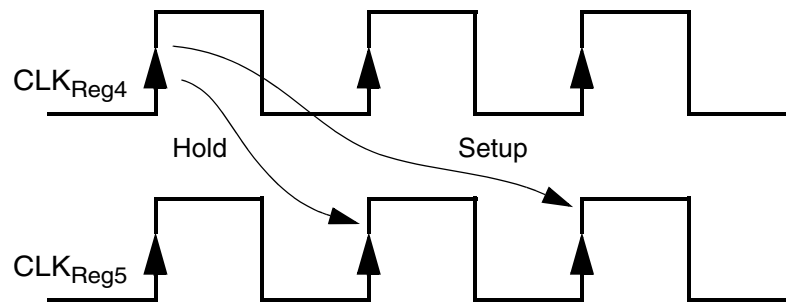
Figure 3-11 Multicycle Path Hold Based on New Setup

```
icc2_shell> set_multicycle_path -setup 2 \
             -from [get_cells Reg4] -to [get_cells Reg5]
```

The hold relationship shown in this figure is probably not the correct relationship for the design. If Reg4 does not need to hold the data beyond the first clock edge, you need to specify a multicycle hold timing exception, as shown by the following commands:

```
icc2_shell> set_multicycle_path -setup 2 \
             -from [get_cells Reg4] -to [get_cells Reg5]
icc2_shell> set_multicycle_path -hold 1 \
             -from [get_cells Reg4] -to [get_cells Reg5]
```

The following figure shows the setup and hold relationships set correctly with these two `set_multicycle_path` commands. The second `set_multicycle_path` command moves the capture edge of the hold relationship backward by one clock cycle, from the dashed-line arrow to the solid-line arrow.

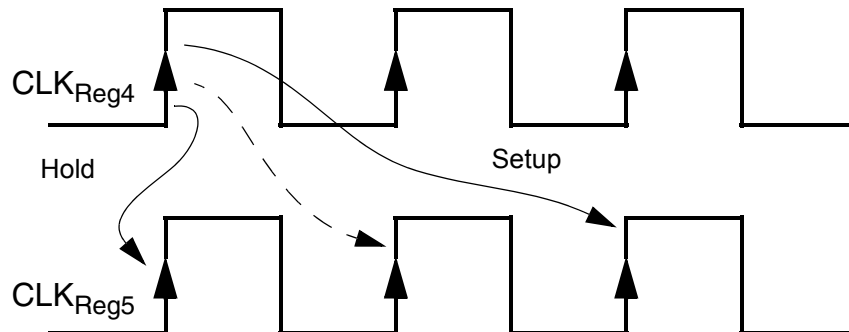Figure 3-12 Multicycle Path Hold Set Correctly

```
icc2_shell> set_multicycle_path -setup 2 \
             -from [get_cells Reg4] -to [get_cells Reg5]
icc2_shell> set_multicycle_path -hold 1 \
             -from [get_cells Reg4] -to [get_cells Reg5]
```

The tool determines the number of hold cycles as follows:

$$(\text{hold cycles}) = (\text{setup option value}) - 1 - (\text{hold option value})$$

By default, the hold cycles = $1 - 1 - 0 = 0$. For this example the hold cycles = $2 - 1 - 1 = 0$, which gives the default hold behavior.

Specifying Path Timing Margin Exceptions

You can make the timing check of a specified path less or more restrictive by a given amount of time by using the `set_path_margin` command.

When use the `set_path_margin` command, you must specify

- The margin value

A positive value results in a more restrictive or tighter check. A negative value results in a less restrictive or looser check.
- The path you want to constrain by using one or more of the following methods:
 - Specify the startpoint of the path by using the `-from`, `-rise_from`, or `-fall_from` option.

Valid startpoints are

- Clocks

If you specify a clock, timing paths starting from all the sequential cells and primary ports constrained by that clock are set as false paths.
- Sequential cells
- Clock pins of a sequential cells
- Data pins of a latches
- Input or inout ports
- Pins with an input delay settings
- Specify one or more throughpoints of the path by using the `-through`, `-rise_through`, or `-fall_through` option one or more times.

Valid throughpoints are

- Pins
- Ports

- Cells
- Nets
- Specify the endpoint of the path by using the `-to`, `-rise_to`, or `-fall_to` option.

Valid endpoints are

- Clocks

If you specify a clock, timing paths ending at all the sequential cells and primary ports constrained by that clock are set as false paths.
- Sequential cells
 - Data pins of a sequential cells
 - Output or inout ports
 - Pins with an output delay settings

Optionally, you can limit the path margin setting to

- Setup or hold analysis only by using the `-setup` or `-hold` options.
By default, it applies to both setup and hold analysis.
- Rise or fall analysis only by using the `-rise` or `-fall` options.
By default, it applies to both rise and fall analysis.

To remove a path margin setting, use the `set_path_margin -reset_path` command.

The following example makes all setup checks from cell Reg4 to cell Reg5 more restrictive by 1.2 time units.

```
icc2_shell> set_path_margin 1.2 \
    -from [get_cells Reg4] -to [get_cells Reg5]
```

The specified margin applies to a timing check in addition to any minimum-delay, maximum-delay, and multicycle path exceptions set on the same paths. A false path exception applied to the same path has priority over a path timing margin exception, causing the margin setting to be ignored.

Specifying Exceptions Efficiently

In many cases, you can specify the exception paths many different ways. To reduce the runtime during timing analysis, use the following guidelines when specifying exception:

- Look at the root cause that makes the exceptions necessary and find the simplest way to control the timing analysis for the affected paths.


- Before using false paths, consider
 - Set a case analysis by using the `set_case_analysis` command.
 - Declaring an exclusive relationship between clocks by using the `set_clock_groups` command.
 - Disabling analysis of part of the design by using the `set_disable_timing` command.

These alternatives can be more efficient than using the `set_false_path` command.

- If you must set false paths, avoid specifying a large number of paths using the `-through` option or wildcards.

For example, consider the circuit shown in the following figure. The three 16-bit registers are clocked by three different clocks. Each register represents 16 flip-flops. Register REG2 is only used for test purposes, so all paths from REG2 to REG3 are false paths during normal operation of the circuit.

Figure 3-13 Multiplexed Register Paths

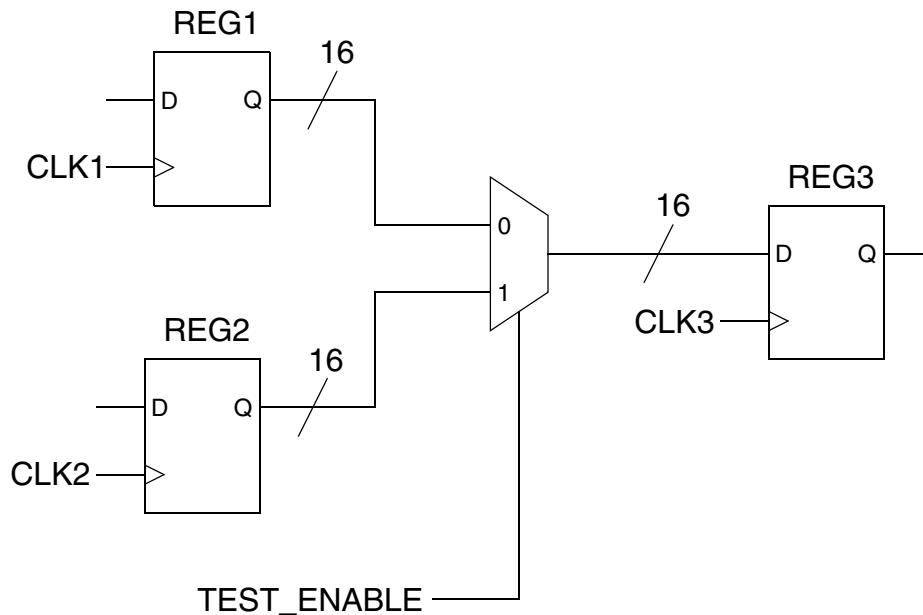

To ignore the timing from REG2 to REG3, you can use any of the following methods:

- Use case analysis to consider the case when the test enable signal is 0.
- Set an exclusive relationship between the CLK1 and CLK2 clock domains.

- Declare the paths between clock domains CLK2 and CLK3 to be false.

```
icc2_shell> set_false_path \
            -from [get_clocks CLK2] -to [get_clocks CLK3]
```

This method is an efficient way to specify the false paths because the tool only needs to keep track of the specified clock domains. It does not have to keep track of exceptions on registers, pins, nets, and so on.

- Declare the 16 individual paths from REG2 to REG3 to be false.

```
icc2_shell> set_false_path -from [get_pins REG2[0]/CP] \
            -to [get_pins REG3[0]/D]
icc2_shell> set_false_path -from [get_pins REG2[1]/CP] \
            -to [get_pins REG3[1]/D]
icc2_shell> ...
```

This method is less efficient because the tool must keep track of timing exceptions for 16 different paths.

- Declare all paths from REG2 to REG3 to be false.

```
icc2_shell> set_false_path -from [get_pins REG2[*]/CP] \
            -to [get_pins REG3[*]/D]
```

This method is even less efficient because the tool must keep track of paths from each clock pin of REG2 to each data pin of REG3, a total of 256 paths.

- Declare all paths from REG2 to be false.

```
icc2_shell> set_false_path -from [get_pins REG2[*]/CP]
```

This method is similar to the previous one. The tool must keep track of all paths originating from each clock pin of REG2, a total of 256 paths.

Order of Precedence for Exceptions

For every timing path in a given block, the tool identifies all the timing exceptions that are applicable for that path. If multiple timing exceptions are applicable for a particular path, the exception used for that path depends on

- The type of exception specified, as described in [Precedence Based on Exception Type](#)
- The path specification methods used when setting the exception, as described in [Precedence Based on Path Specification](#)

Precedence Based on Exception Type

The following pairs of timing exception types are not considered to be in conflict, so both settings can be valid for a path:

- Two `set_false_path` settings
- `set_min_delay` and `set_max_delay` settings
- `set_multicycle_path -setup` and `-hold` settings
- `set_path_margin` and `set_min_delay`, `set_max_delay`, or `set_multicycle_path` settings

In case of conflicts, the timing exception types have the following order of priority, from highest to lowest:

1. `set_false_path` settings
2. `set_max_delay` and `set_min_delay` settings
3. `set_multicycle_path` settings

For example, if you declare a path to be false and also set its maximum delay to some value, the false path declaration has priority. The maximum delay setting is ignored.

Precedence Based on Path Specification

A timing exception on more specific object, such as pin or port, take precedence over the same type of exceptions applied to a more general object, such as a clock.

The various path specification methods have the following order of priority, from highest to lowest:

1. `-from pin`, `-rise_from pin`, `-fall_from pin` settings
2. `-to pin`, `-rise_to pin`, `-fall_to pin` settings
3. `-through`, `-rise_through`, `-fall_through` settings
4. `-from clock`, `-rise_from clock`, `-fall_from clock` settings
5. `-to clock`, `-rise_to clock`, `-fall_to clock` settings

Here are some possible path specification combinations, listed in order of priority from highest to lowest, according to the preceding priority rules:

1. `-from pin -to pin`
2. `-from pin -to clock`
3. `-from pin`
4. `-from clock -to pin`
5. `-to pin`
6. `-from clock -to clock`
7. `-from clock`
8. `-to clock`

For example, assume you set the following exceptions:

```
icc2_shell> set_max_delay 12 -from [get_clocks CLK1]
icc2_shell> set_max_delay 15 -from [get_clocks CLK1] -to [get_clocks
CLK2]
```

The first command sets the maximum delay of all paths starting from CLK1. However, the second command is more specific, so it overrides the first command for paths starting at CLK1 and ending at CLK2.

Example on the Order of Precedence of Exceptions

Assume the following exception settings on a block that has four clocks named clkA, clkB, clkC, and clkD:

```
icc2_shell> set_false_path \
    -from [get_clocks clkB] -to [get_clocks clkC]
icc2_shell> set_multicycle_path 2 \
    -from [get_clocks clkA] -to [get_clocks clkC]
icc2_shell> set_multicycle_path 3 -to [get_pins Reg53/D]
icc2_shell> set_multicycle_path 3 -from [get_pins Reg24/CK]
```

For a timing path that begins at Reg24 cell, which is clocked by clkB clock, and ends at Reg32 cell, which is clocked by clkD clock, only the following exception is applicable:

```
icc2_shell> set_multicycle_path 3 -from [get_pins Reg24/CK]
```

However, for a timing path that begins at Reg24 cell, which is clocked by clkB clock, and ends at cell Reg11 cell, which is clocked by clkC clock, the following two exceptions are applicable:

```
icc2_shell> set_false_path \
            -from [get_clocks clkB] -to [get_clocks clkC]
icc2_shell> set_multicycle_path 3 -from [get_pins Reg24/CK]
```

In this case, the `set_false_path` command has priority over the `set_multicycle_path` command, so the tool uses the false-path exception for this path.

For a timing path that begins at Reg61 cell, which is clocked by clkA clock, and ends at Reg53 cell, which is clocked by clkC clock, the following two exceptions are applicable:

```
icc2_shell> set_multicycle_path 2 \
            -from [get_clocks clkA] -to [get_clocks clkC]
icc2_shell> set_multicycle_path 3 -to [get_pins Reg53/D]
```

In this case, there are two `set_multicycle_path` commands with different path specifications, so the tool uses the more specific path specification, which is the multicycle path setting to the D pin of the Reg53 cell.

Disabling Timing Paths Within Lower-Level Blocks

For designs with hierarchy, you can disable timing paths that are entirely within lower-level blocks for timing analysis and optimization by using the `set_timing_paths_disabled_blocks` command.

To disable the timing paths entirely within

- Specific subblocks, use the `-blocks` option
- All subblocks, use the `-all_sub_blocks` option

To restore the disabled timing paths within subblocks, use the `remove_timing_paths_disabled_blocks` command.

Using Case Analysis

Case analysis lets you perform timing analysis using logic constants or logic transitions on ports or pins to limit the signals propagated through the design.

If you set a case analysis with

- A logic constant, the tool disables paths where the constant is propagated.

To do so, use the `set_case_analysis 0` or `set_case_analysis 1` command, as shown in the following example:

```
icc2_shell> set_case_analysis 0 [get_ports TEST_EN]
```

- A logic transition, either rising or falling, the tool eliminates certain paths by limiting the transitions considered during analysis.

To do so, use the `set_case_analysis rising` or `set_case_analysis falling` command, as shown in the following example:

```
icc2_shell> set_case_analysis rising [get_ports RESET]
```

In addition, the tool treats the following as case analysis values also:

- Cell pins that are connected to tie-high or tie-low cells
- Cell pins that are unconnected, which the tool ties to constant values

You can control case analysis by using the following commands or application option settings:

- Propagate case analysis values through clock-gating cells by setting the `time.case_analysis_propagate_through_icg` application option to `true`.
By default, the tool stops propagating case analysis values at clock-gating cells.
- Propagate case analysis values through sequential cells by setting the `time.case_analysis_sequential_propagation` application option to `always`.
By default, this application option is set to `never` and the tool stops propagating case analysis values at sequential cells.
- Disable the propagation of logic constants except for those set with the `set_case_analysis` command by setting the `time.disable_case_analysis_ti_hi_lo` application option to `true`.
By default, the tool propagates all logic constants.
- Disable the propagation of all case analysis values by setting the `time.disable_case_analysis` application option to `true`.
By default, the tool propagates all case analysis values.
- Remove specific case analysis values by using the `remove_case_analysis` command.


To report

- Case analysis values, use the `report_case_analysis` command.
- Timing arcs that have been disabled by various causes, including case analysis, use the `report_disable_timing` command.

The following example disables the timing path going through pins B and Z of the multiplexer named U15 shown in [Figure 3-14](#) by specifying a case analysis setting of 0 on the input port named TEST_EN:

```
icc2_shell> set_case_analysis 0 [get_ports TEST_EN]
```

Figure 3-14 Using Constants to Disable Timing Arcs

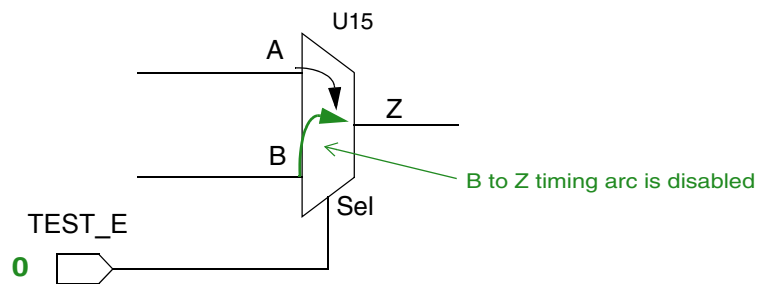

Disabling Timing Arcs

You can disable a timing path by disabling a net or cell timing arc on that path using the `set_disable_timing` command. You can disable the timing arcs of

- Leaf-level cells or library cells

When you do so, by default, all timing arcs to the output of the cell are disabled. To disable a specific timing arc of the cell, use the `-to` and `-from` options.

For example, the following commands disable all timing arcs to the output of library cell named AND3 and the timing arc from pin A2 to pin ZN of the cell instance named U17:

```
icc2_shell> set_disable_timing my_lib/AND3
icc2_shell> set_disable_timing {U17} -from A2 -to ZN
```

- Leaf-level-cell pins, library-cell pins, or ports

When you do so, all timing arcs to and from the pin or port are disabled. However, you cannot disable a specific arcs by using the `-to` and `-from` options.

For example, the following command disable all timing arcs to and from the leaf-cell pins named U37/A2 and U51/Z:

```
icc2_shell> set_disable_timing {U37/A U51/Z}
```

When you disable the timing arcs of a cell or cell pin, the tool applies a size-only attribute setting on the corresponding cell, which prevents that cell from being removed during optimization. However, it can be resized during optimization.

To report all timing arcs that are disabled in a block, including those disabled by the `set_disable_timing` command, use the `report_disable_timing` command.

Enabling Preset and Clear Timing

By default, the tool does not analyze timing paths that go through the asynchronous preset or clear input of a flip-flop and ends at the Q output of the flip-flop. To enable timing analysis and optimization on these paths, set the `time.enable_preset_clear_arcs` application option to `true`.

```
icc2_shell> set_app_options -name time.enable_preset_clear_arcs \  
              -value true
```


Introduction to Data-to-Data Checks

The tool can perform setup and hold checking between two data signals, neither of which is defined to be a clock, at any two pins in the design. A timing constraint between two data (nonclock) signals is called a nonsequential constraint. This feature can be useful for checking the following types of timing constraints:

- Constraints on handshaking interface logic
- Constraints on asynchronous or self-timed circuit interfaces
- Constraints on signals with unusual clock waveforms that cannot be easily specified with the `create_clock` command
- Constraints on skew between bus lines
- Recovery and removal constraints between asynchronous preset and clear input pins


You can define such checks by using the `set_data_check` command, or they can be defined in the logic library as nonsequential constraints. You should use data checks only in situations such as those described previously. Data checks should not be considered a replacement for ordinary sequential checking.

The following figure shows a simple example of a cell that has a nonsequential constraint. The cell has two data inputs, D1 and D2. The rising edge of D2 is the active edge that might be used to latch data at D1. Pin D1 is called the constrained pin and pin D2 is called the related pin.

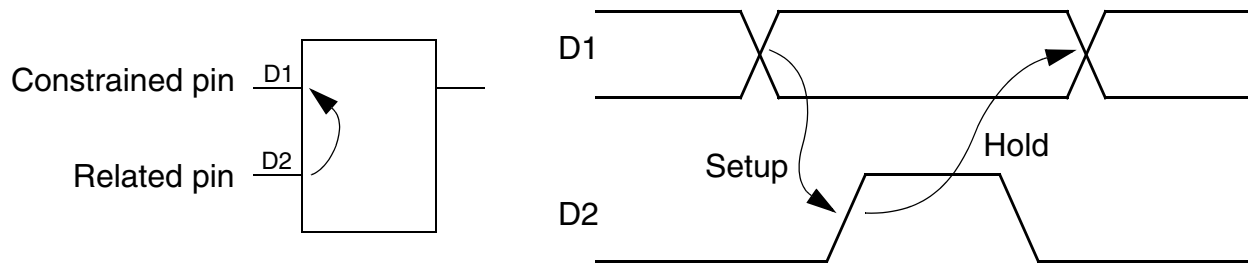Figure 3-15 Simple Data Check Example

In this example, the signal at D1 must be stable for a certain setup time before the active edge. It must also be stable for a certain hold time after the active edge. If these nonsequential constraints are not already defined for the library cell, you can define them in the tool with the `set_data_check` command.

Data checks are nonsequential, so they do not break timing paths. In the following figure, the data check between pins D1 and D2 does not interrupt the timing paths shown by the dashed-line arrows. If you define the signal at D2 as a clock, the check is sequential and the paths is terminated at D1.

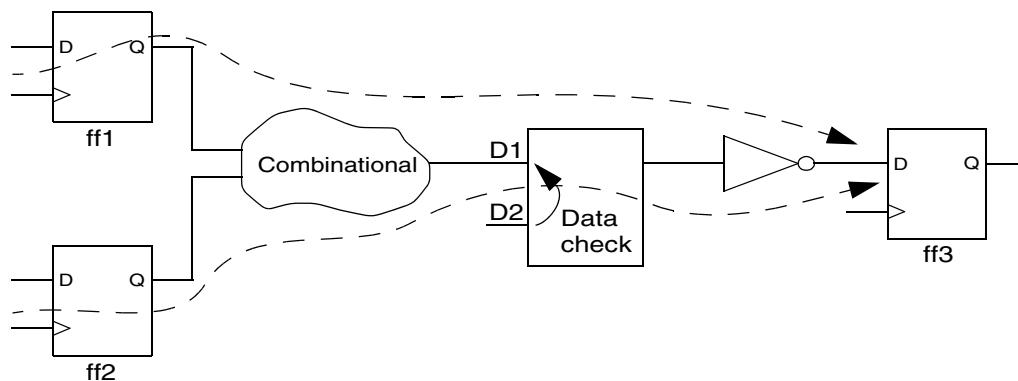Figure 3-16 Timing Paths Not Broken by Data Checks

In a data check, signals arriving at a constrained pin or related pin can come from different clock domains. The tool checks the signal paths separately and puts them into different clock groups, just like in ordinary sequential checks.

Specifying Data-to-Data Checks

To specify that data-to-data checks be performed between two data pins, use the `set_data_check` command as follows:


- To specify a pin or port as the related pin, use the `-from`, `-rise_from`, or `-fall_from` option.
- To specify a pin or port as the constrained pin, use the `-to`, `-rise_to`, or `-fall_to` option.
- To specify that the data check value be for setup only or hold only, use the `-setup` option or `-hold` option. Otherwise, the value applies to both setup and hold.
- To specify the name of a single clock that launches the signal for the related pin, use the `-clock` option.

To remove data checks set with the `set_data_check` command, use the `remove_data_check` command.

Examples of Data Checks

In the following figure, the signal at D1 must be stable for a certain setup time before the active edge. It must also be stable for a certain hold time after the active edge.


Figure 3-17 Data Check on Rising Edge

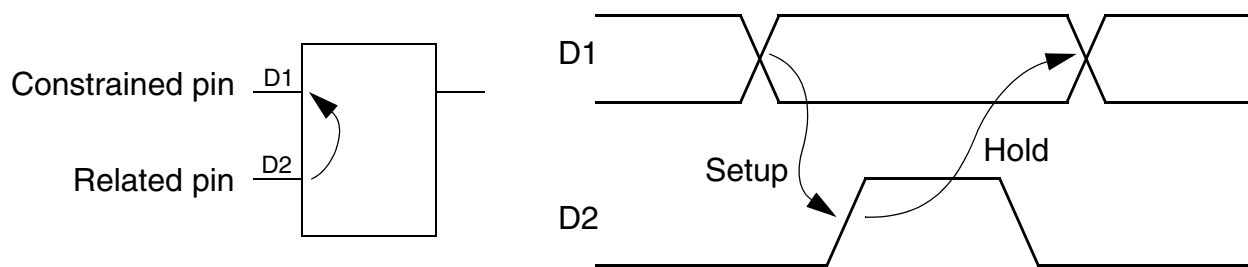

To define these data checks, use the following commands:

```
icc2_shell> set_data_check -rise_from D2 -to D1 -setup 3.5
icc2_shell> set_data_check -rise_from D2 -to D1 -hold 6.0
```

In the following figure, the data checks apply to both rising and falling edges on the related pin.

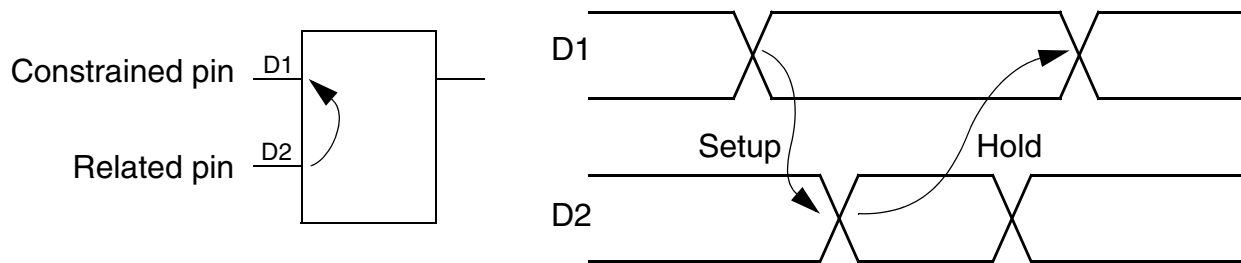Figure 3-18 Data Checks on Rising and Falling Edges


To define these data checks, use the following commands:

```
icc2_shell> set_data_check -from D2 -to D1 -setup 3.5
icc2_shell> set_data_check -from D2 -to D1 -hold 6.0
```

You can define a no-change data check by specifying only a setup check from the rising edge and a hold check from the falling edge, by using the following commands:

```
icc2_shell> set_data_check -rise_from D2 -to D1 -setup 3.5
icc2_shell> set_data_check -fall_from D2 -to D1 -hold 3.0
```

The tool interprets this as a no-change check on a positive-going pulse. The resulting timing check is shown in the following figure.

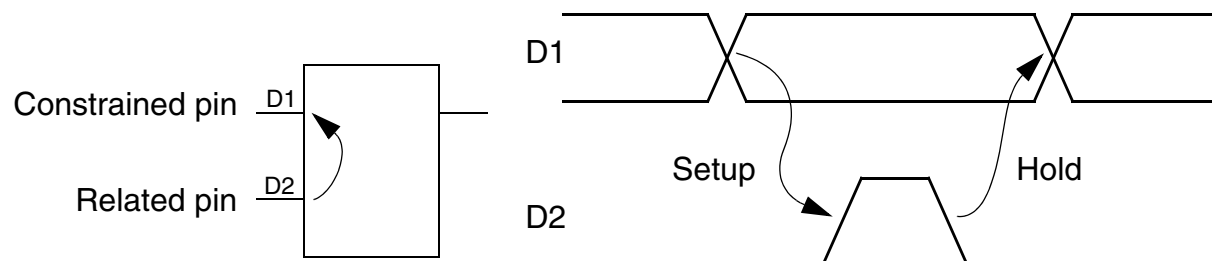Figure 3-19 No-Change Data Check

Enabling Library-Based Data Checks

To specify that the tool perform data checking for any cell that has nonsequential timing constraints defined in the library cell, if the signal at the related pin is not defined to be a clock, set the `time.enable_non_sequential_checks` application option to `true`, as shown in the following example:

```
icc2_shell> set_app_options -name time.enable_non_sequential_checks \
    -value true
```

The variable is set to false by default.

Note:

This behavior is different from that of PrimeTime, which always honors nonsequential arc checks.

If the signal at the related pin is defined as a clock, the tool ignores the library-defined nonsequential timing constraints.

In the logic library, the nonsequential constraints are defined for a cell by specifying a related pin and by assigning the following `timing_type` attributes to the constrained pin:

- `non_seq_setup_rising`
- `non_seq_setup_falling`
- `non_seq_hold_rising`
- `non_seq_hold_falling`

For more information about defining nonsequential constraints in the logic library, see the Library Compiler documentation.

Using nonsequential constraints defined in the library cell results in a more accurate analysis than using the `set_data_check` command because the setup and hold times can be made sensitive to the slew of the constrained pin and the related pin. The `set_data_check` command is not sensitive to slew.


The `remove_data_check` command does not remove data checks defined in library cells.

Introduction to Clock-Gating Checks

A gated clock signal occurs when a clock network contains logic other than inverters or buffers. The tool does not automatically check setup and hold violations on the gating signals of clock-gated cells. Therefore, it is possible for these signals to undergo transitions while clock pulses are passing through the gating cells, which can lead to both clipped and spurious clock pulses.

The following figure shows examples of distorted clock waveforms that can be caused by invalid changes on the clock-gating inputs in the absence of clock-gating checks.


Figure 3-20 Distorted Clock Waveforms

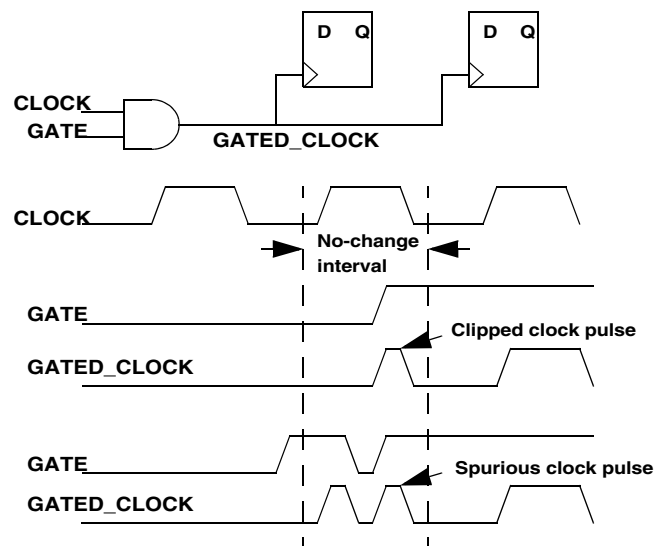

To control the transition of the gating signal, you can specify a set and hold margin with respect to the clock by using the for the `set_clock_gating_check` command.


The following figure shows a clock gating check performed on a gating element that is an AND or NAND gate.

Figure 3-21 Clock-Gating Checks for AND and NAND Gates

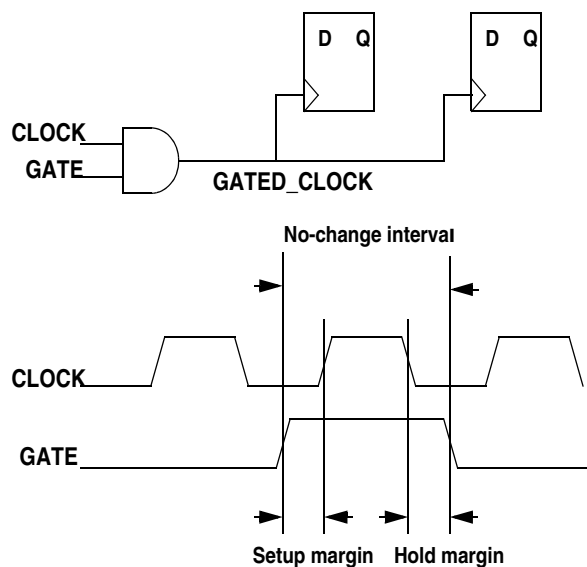

The following figure, shows a clock gating check performed on a gating element that is an OR or NOR gate.

Figure 3-22 Clock Gating Checks for OR and NOR Gates

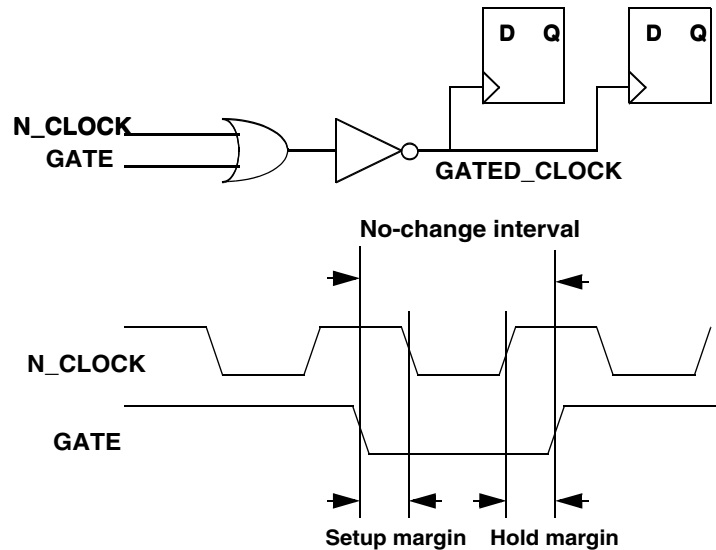

Specifying Clock-Gating Checks

To specify a clock gating check, use the `set_clock_gating_check` command.

When you use this command, by default, the tool

- Performs the clock gating check on all the clock gating elements of the current block.
To limit the check to a specific cell, clock, or the transitive fanout of a port or pin, specify the required objects.
- Uses a setup and hold value of zero. To set a specific setup or hold value, use the `-setup` or `-hold` options.
- Constrains both the rising and falling edges of the gating signal.
To control only the rising or falling edge, use the `-rise` or `-fall` options.
- Determines whether to use the high or low level of the clock to constrain the gating signal, based on the gating logic.

If the gating cell is:

- An AND or NAND gate, the tool performs the check on the high level of the clock.
- An OR or NOR gates, the tool performs the check on the high level of the clock

- Any other gate, the tool does not perform the check, unless you specify which level of the clock to use.

To specify which level of the clock to perform the check, use the `-high` or `-low` option.

The tool handles clock-gating checks like other timing constraints and tries to adjust the delays of the logic driving the gating inputs to avoid setup and hold violations. During optimization, the tool can only size cells with clock-gating checks.

Clock-gating checks can be performed only between a clock signal and a nonclock signal, not between two clock signals or between two nonclock signals.

To remove clock-gating checks, use the `remove_clock_gating_check` command.

You can disable clock-gating checks on specific cells and pins by using the `set_disable_clock_gating_check` command to list the cells and pins you want the tool to ignore. To cancel the effect of this command, use the `remove_disable_clock_gating_check` command.

The following example shows how to specify a setup requirement of 0.2 and a hold requirement of 0.4 on all gates in the clock network of CLK1.

```
icc2_shell> set_clock_gating_check -setup 0.2 -hold 0.4 CLK1
```


4

Specifying Operating Conditions

The operating conditions include the process, voltage, and temperature parameters under which the chip is operates. You can specify the operating conditions for a block and the tool analyze and optimize the block under the conditions you specify.

By default, the tool uses on-chip variation (OCV) mode to perform timing analysis, which models the effects of variation in operating conditions across the chip. In addition, the tool supports advanced on-chip variation (AOCV), which is an optional method for improving accuracy during timing analysis.

The following topics provide information on operating conditions, on-chip variation, advanced on-chip variation, and other related concepts and tasks:

- [Specifying the Operating Conditions](#)
- [Creating and Using Scaling Groups](#)
- [Using Process Labels for PVT Matching](#)
- [Reporting PVT Information](#)
- [On-Chip Variation Delay Analysis](#)
- [Specifying the Timing Derating Factors](#)
- [Introduction to AOCV](#)
- [Setting Up for AOCV Analysis](#)
- [Applying AOCV Data](#)

- [File-Based AOCV Data](#)
- [Verifying AOCV Data](#)
- [Introduction to Parametric On-Chip Variation Analysis](#)
- [POCV Data Formats](#)
- [Performing Parametric On-Chip Variation Analysis](#)
- [Introduction to Clock Reconvergence Pessimism Removal](#)
- [Enabling Clock Reconvergence Pessimism Removal](#)
- [Reporting Clock Reconvergence Pessimism Removal Calculations](#)

Specifying the Operating Conditions

The operating conditions of a block include the process, voltage, and temperature parameters under which the chip operates. The IC Compiler II tool analyzes and optimizes the block under the conditions you specify. You can specify the same or a different set of operating conditions for both early and late analysis.

The IC Compiler II tool supports the following two methods for specifying the operating conditions:

- Specify each of the following parameters:
 - The process factor by using the `set_process_number` command
By default, the process factor applies to both early and late analysis. To specify value only for early or late analysis, use the `-early` and `-late` options.
 - The voltage by using the `set_voltage` command
By default, the voltage applies to both early and late analysis. To specify a different value for early analysis, use the `-min` option.
 - The temperature by using the `set_temperature` command
By default, the temperature applies to both early and late analysis. To specify a different value for early analysis, use the `-min` option.

By default, these commands apply to the current corner for all objects in the block. You can specify the affected corners by using the `-corners` option. You can specify the affected objects by using the `-object_list` option.

- Specify the operating condition by using the `set_operating_conditions` command.
The operating condition you specify
 - Applies to both early and late analysis.
To specify an operating condition only for early or late analysis, use the `-min` or `-max` option.
 - Applies only to the current corner.
For multicorner-multimode designs, you must specify an operating condition for each corner in the block.

A cell library can contain multiple sets of operating conditions. To get a list of the operating conditions available in a particular library and to view their characteristics, use the `report_lib` command.

In general, use only one method to specify the operating conditions for a block. If you must use both methods, for example, to set operating voltages for a multivoltage design that

override the operating conditions set by the SDC file, use the `set_operating_conditions` command first, and then use the individual commands to override the specific values.

See Also

- *IC Compiler II Library Preparation User Guide*

Creating and Using Scaling Groups

By default, timing analysis and optimization are performed only at the characterization points (process, voltage, and temperature) of the logic libraries loaded in memory. To enable timing analysis and optimization at intermediate voltage and temperature values, you must create a scaling group, which defines the set of libraries with the same process setting that is used for interpolation.

Creating Scaling Groups

To create a scaling group, the characterization points of the logic libraries in the group must form a complete grid, which means that data exists for all temperature and voltage combinations, as shown in the following figure.

Figure 4-1 Grid Representation of Characterization Points



To create a scaling group, use the `define_scaling_lib_group` command to specify the logic libraries in the scaling group.

For example, assume that you load the following four logic libraries, which are generated for the same process:

- `typ_v1t1.db`, which is characterized at 1.0V and 0°C
- `typ_v1t2.db`, which is characterized at 1.0V and 125°C
- `typ_v2t1.db`, which is characterized at 0.8V and 0°C
- `typ_v2t3.db`, which is characterized at 0.8V and 125°C

To create a scaling group using these logic libraries, use the following command:

```
icc2_shell> define_scaling_lib_group \
    {typ_v1t1.db typ_v1t2.db typ_v2t1.db typ_v2t2.db}
```

By default, the `define_scaling_lib_group` command

- Searches all reference libraries in memory to locate the specified logic libraries. To restrict the search to specific libraries, use the `-reflib` option.
- Names the scaling group `sgn`, where *n* is a unique integer. To specify a name for the scaling group, use the `-name` option.

The scaling groups are saved into and restored from the design library, not the reference libraries. If you change the reference libraries associated with a design library, the scaling groups are removed from the design library.

When generating the settings of a block with the `write_script` command, you can include or exclude scaling group settings by specifying the `scaling_lib_groups` value with the `-include` or `-exclude` option. For example, to output only the scaling group settings, use the following command:

```
icc2_shell> write_script -include scaling_lib_groups \
    -output blk1_slg
```

To remove scaling groups, use the `remove_scaling_lib_group` command.

Using Scaling Groups

By default, all scaling groups can be used in all corners, for both minimum and maximum delay analysis. However, you can control the usage of scaling groups with the `set_scaling_lib_group` command.

- To apply specific scaling groups to specific corners, use the `-corners` option.

If you do not specify this option, the current corner is used. The following example applies the SG1 scaling groups to the C1 corner:

```
icc2_shell> set_scaling_lib_group -corners C1 SG1
```

- To apply all or none of the scaling groups to specific corners, use the `-all` or `-none` option with the `-corners` option.

The following example prevents the use of all scaling groups in the C2 corner:

```
icc2_shell> set_scaling_lib_group -corners C2 -none
```

- To apply specific scaling groups for minimum or maximum delay analysis, use the `-min` or `-max` option.

The `report_corners` command reports the scaling groups available in each corner.

Using Process Labels for PVT Matching

Cells in a cell library can be characterized for one or more operating conditions. When performing timing analysis on a gate-level cells in a block, if the operating conditions specified for the block exactly matches those available for the cell in the cell library, the tool uses that data. Otherwise, the tool uses the closest match.

You can use process labels to guide the tool to select the appropriate timing models from a cell library. Process labels are applied to the characterization points in a cell library during library preparation, as shown in the following example:

```
icc2_lm_shell> read_db -process_label fast fast_lib_0p95v125c.db
```

To guide the IC Compiler II tool to use a specific characterization point for a corner, use the `set_process_label` command to specify its process label for a corner, as shown in the following example:

```
icc2_shell> create_corner c_fast
icc2_shell> set_process_label -corners c_fast fast
```

Reporting PVT Information

To report PVT information, including mismatches between the operating conditions specified for corners and the timing views of the cells used in the block, use the `report_pvt` command. The report includes the specified PVT settings and the settings that are used when an exact match is not found.

In addition to the `report_pvt` command, you can access information on the PVT values used for the current block by querying the timing attributes shown in the following table.

Table 4-1 Operating Condition Attributes

Operating condition setting	Specified values	Resolved values	Mismatch count
Process label	process_label_early process_label_late	effective_process_label_early effective_process_label_late	process_label_mismatches


Table 4-1 Operating Condition Attributes

Operating condition setting	Specified values	Resolved values	Mismatch count
Process number	process_number_early	effective_process_number_early	process_number_mismatches
	process_number_late	effective_process_number_late	
Voltage	voltage_early	effective_voltage_early	voltage_mismatches
	voltage_late	effective_voltage_late	
Temperature	temperature_early	effective_temperature_early	temperature_mismatches
	temperature_late	effective_temperature_late	

On-Chip Variation Delay Analysis


During timing analysis, the tool uses the on-chip variation (OCV) mode to perform timing, which models the effects of variation in operating conditions across the chip. This mode performs a conservative timing analysis by simultaneously applying minimum and maximum delays to different paths.

For a setup check, the tool uses maximum delays for the launch clock path and datapath and minimum delays for the capture clock path, as shown in the following figure.

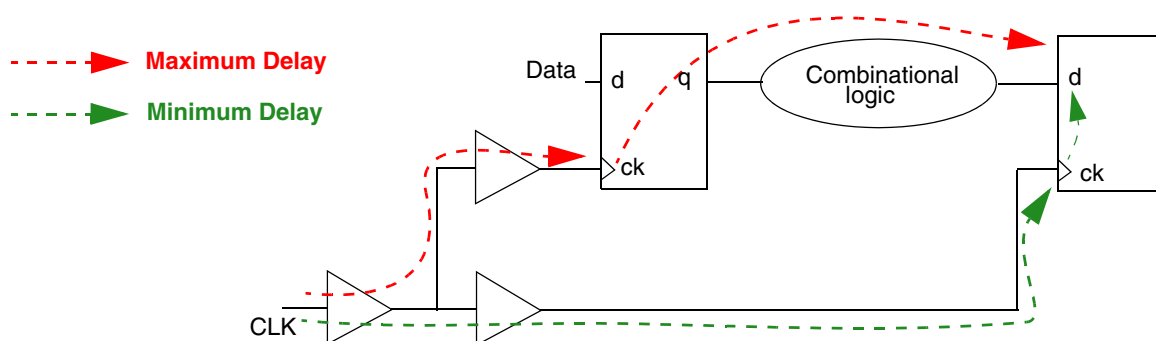Figure 4-2 On-Chip Variation for Setup Analysis

For a hold check, the tool uses minimum delays for the launch clock path and datapath and maximum delays for the capture clock path.

Figure 4-3 On-Chip Variation for Hold Analysis

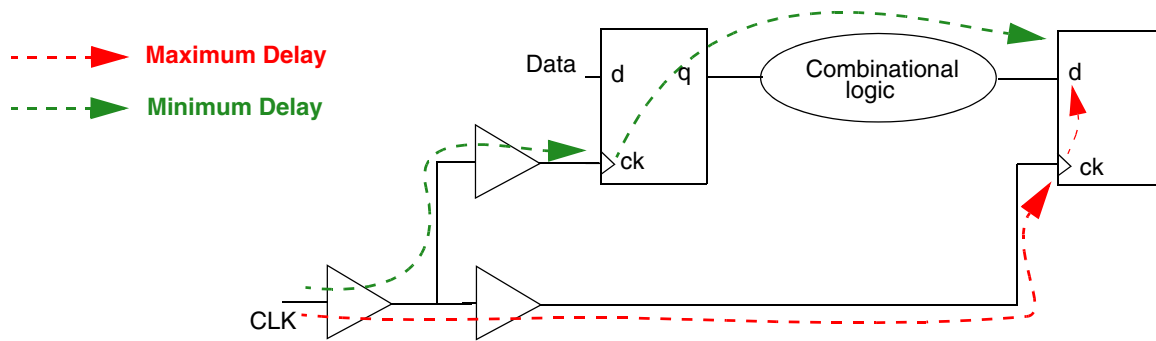

The following table shows the clock arrival times, delays, operating conditions, and derating used for setup checks and for hold analysis.

Table 4-2 Timing Parameters Used for Setup and Hold Analysis

Analysis type	Launch clock path	Data path	Capture clock path
Setup	Late clock, maximum delay in clock path, late derating, worst-case operating condition	Maximum delay, late derating, maximum operating condition	Early clock, minimum delay in clock path, early derating, minimum operating condition
Hold	Early clock, minimum delay in clock path, early derating, best-case operating condition	Minimum delay, early derating, minimum operating condition	Late clock, maximum delay in clock path, late derating, maximum operating condition

During timing analysis, the tool simultaneously considers the minimum and maximum values specified for the following design parameters:

- Input and output external delays
- Port wire load models
- Port fanout number
- Net capacitance

- Net resistance
- Net wire load model
- Clock latency
- Clock transition time
- Input port driving cell

Specifying the Timing Derating Factors

Timing derating factors model the effects of varying operating conditions by adjusting the delay values calculated for the individual timing arcs of a block. By default, the timing derating factors are 1.0 and the tool does not adjust the calculated delay values.

To set derating factors, use the `set_timing_derate` command and specify the following information:

- The derating factor
- Whether the derating factor is for early or late delays by using the `-early` or `-late` options.

Optionally, you can apply the derating factor to

- Specific leaf-level instance, hierarchical instance, or library cell by specifying the object.
By default, it applies to the current block.
- Rise or fall delays only by using the `-rise` or `-fall` options.
By default, it applies to both rise and fall delays.
- Clock or data paths only by using the `-clock` or `-data` options.
By default, it applies to both clock and data paths.
- Net delays, cell delays, or cell timing checks by using the `-net_delay`, `-cell_delay`, or `-cell_check` option.

By default, it applies to all three.

When you specify timing derating factors for net delays by using the `set_timing_derate -net_delay` command, it applies to both the dynamic and static components of the net delay. You can specify a different derating factor for the dynamic and static components by using the `-dynamic` and `-static` options.

- A specific corner by using the `-corners` option.

By default, it applies to the current corner.

To apply an increment to an existing timing derate, use the `-increment` option. This increment is added to the existing derating factor.

The following example reduces all minimum delays by 10 percent and increases all maximum delays by 20 percent for the current corner:

```
icc2_shell> set_timing_derate -early 0.9 -late 1.2
```

To report the derating factors, use the `report_timing_derate` command. By default, the command reports the derating factors for all corners. To report the derating factors for specific corners, use the `-corners` option.

To reset the derating factors to 1.0, use the `reset_timing_derate` command. By default, the command resets the derating factors for the current corner for the current block and all its cell instances. To reset the derating factors for specific corners, use the `-corners` option. To reset the derating factors for specific objects, specify the objects.

Introduction to AOCV

Advanced on-chip variation (AOCV) is an optional method for improving accuracy by using varying derating factors for different paths based on the path depth or physical distance spans. A path that has more levels of logic or covers a greater physical distance tends to have less total variation because the random variations from gate to gate tend to cancel each other out. Accordingly, AOCV applies higher derating values to short paths and lower derating values to long paths.

This method is less pessimistic than a conventional OCV analysis, which relies on constant derating factors that do not consider path-specific metrics. The improved timing accuracy affects both timing reports and design optimization.

The IC Compiler II AOCV flow consists of the following high-level steps:

1. Setup for AOCV analysis, as described in [Setting Up for AOCV Analysis](#).
2. Apply AOCV data, as described in [Applying AOCV Data](#).
3. Verify AOCV data, as described in [Verifying AOCV Data](#).
4. Perform timing analysis and optimization using the AOCV data.

Setting Up for AOCV Analysis

Enable AOCV analysis by setting the `time.aocvm_enable_analysis` application option to `true`.

You can change the default behavior of AOCV analysis by using the following application option settings:

- Change how path depth is calculated during AOCV analysis by using the `time.aocvm_analysis_mode` application option, which has the following three settings:

- `separate_launch_capture_depth`

- This setting, which is the default, specifies the tool to use both the clock and data network object and calculates a separate depth for capture and launch paths.

- `combined_launch_capture_depth`

- This setting specifies the tool to use both the clock and data network object and calculates a combined depth for the entire path, considering both the capture and launch paths.

- `separate_data_and_clock_metrics`

- This setting specifies the tool to calculate a separate depth for the clock and data paths.

- Consider physical distance, in addition to the gate counts, by setting the `time.ocvm_enable_distance_analysis` application option to `true`.
By default, the tool does not consider the physical distance of the path.
- Use only cell distance and depth metrics for deriving both cell and net AOCV derating by setting the `time.aocvm_enable_single_path_metrics` application option to `true`.
- Ignore OCV derating factors, which are specified with the `set_timing_derate` command, when AOCV derating factors are available by setting the `time.ocvm_precedence_compatibility` application option to `true`.

By default, the tool considers both OCV and AOCV derate settings based on the following priority, from the highest to the lowest:

1. OCV derate setting on the leaf cell
2. AOCV derate setting on the library cell
3. OCV derate setting on the library cell
4. AOCV derate setting on the hierarchical cell
5. OCV derate setting on the hierarchical cell

6. AOCV derate setting on the design
7. OCV derate setting on the design

Applying AOCV Data

During AOCV timing analysis, the tool uses the AOCV data to derive derating values based on the number of successive gates in the path (the path depth) and optionally, the physical distance span of the path.

You can provide the AOCV data using the following two methods:

- Using library-based AOCV data in the logic (.db) library
- Using file-based AOCV data that you can read into the tool by using the `read_ocvm` command

By default, the AOCV data is applied only to the current corner. To apply the data to different corners, specify them using the `-corners` option. The following example applies the AOCV data to all corners of the current block:

```
icc2_shell> read_ocvm -corners [all_corners] IST.aocvm
```

Both library-based and file-based AOCV data can be generated by the Synopsys SiliconSmart characterization tool. For details, see the *SiliconSmart ACE User Guide*, available on SolvNet.

You can use both library-based and file-based AOCV derating data at the same time, and the following priority is used to resolve any conflicts, starting from the highest to the lowest:

1. File-based AOCV derate setting on the library cell
2. File-based AOCV derate setting on the hierarchical cell
3. File-based AOCV derate setting on the design

You can specify the following additional AOCV information:

- A guard band for AOCV derating factors by using the `set_timing_derate -aocvm_guardband` command.

The following example specifies a guard band of 5 percent for early and late delays:

```
icc2_shell> set_timing_derate -aocvm_guardband -early 0.95
icc2_shell> set_timing_derate -aocvm_guardband -late 1.05
```

- A depth adjustment factor at the library cell or cell instance level by using the `set_aocvm_coefficient` command.

By default, the tool considers all cells to have a depth of one, when calculating the total depth (levels of logic) of a timing path. You can increase or decrease the depth for a

specific library cell by using this command. The following example increases the depth of a library cell named MGX16 to 1.5:

```
icc2_shell> set_aocvm_coefficient 1.5 [get_lib_cells lib_fast/MGX16]
```

To remove some or all AOCV derating values from objects in the design, use the `remove_ocvm` command.

File-Based AOCV Data

The AOCV data file specifies the derating values for cells, library cells, or nets as a function of the path depth, and optionally, the physical distance spanned by the path. The IC Compiler II tool accepts both binary and compressed data files produced by the `write_binary_aocvm` command in the PrimeTime tool.

The following table shows the syntax definition for the AOCV file format.

Table 4-3 AOCV File Format Syntax

Field specifier	Field description
<code>version</code>	On-chip variation data file version number.
<code>ocvm_type</code>	<code>aocvm</code> This field is supported only in version 4.0 or later.
<code>object_type</code>	<code>design cell lib_cell</code>
<code>rf_type</code>	<code>rise fall rise fall</code>
<code>delay_type</code>	<code>cell net cell net</code>
<code>derate_type</code>	<code>early late</code>
<code>path_type</code>	<code>clock data clock data</code> This field is supported only in version 2.0 or later.
<code>object_spec</code>	A string that specifies the object name. The string can be an expression that is evaluated based on the attributes of the object, similar to the <code>regexp</code> Tcl command within commands that create collections. If the <code>object_type</code> is <code>design</code> , leave this field blank.

Table 4-3 AOCV File Format Syntax (Continued)

Field specifier	Field description
voltage	A floating-point value. An optional field that allows AOCV derate values to be defined for a specific voltage. If the operating voltage of the corner falls within two of the voltage specific tables, the tool scales the derate values.
depth	A set of M floating-point values, where M can be zero.
distance	A set of N floating-point values, where N can be zero. Distance values are used only when the <code>time.ocvm_enable_distance_analysis</code> variable is set to <code>true</code> .
table	A set of N x M floating-point values. There are also the following special cases: <ul style="list-style-type: none"> • If N==0, the table is of size M. • If M==0, the table is of size N. • If M==0 and N==0, the table is of size 1. Linear interpolation is used to determine points that have not been defined in the table. The tool does not extrapolate beyond the lowest or highest values specified in the table.

To add a comment in any location within the file, use double forward slashes (//).

The following example AOCV data file sets derates values for the cells in the clock paths of the design:

```
version          4.0
ocvm_type:       aocvm
object_type:     design
rf_type:         rise fall
delay_type:      cell
derate_type:     late
path_type:       clock
object_spec:
voltage:         1.2
depth:           1 2 3
distance:        100 1000
table:           1.21 1.11 1.09 \
                  1.23 1.16 1.14
```

The AOCV data in the file is specified for 1.2v.

Verifying AOCV Data

To view AOCV derate table data, use the `report_ocvm` command. You can view design objects annotated with early, late, rise, fall, cell, or net derate tables. You can also use this command to determine cells and nets that are annotated or not annotated with AOCV information.

For example, to get the AOCV derate data for the timing arc from pin A to pin Z of cell U57, use the following command:

```
icc2_shell> report_ocvm -type aocvm \
  [get_timing_arcs -from U57/A -to U57/Z]
```

To get the AOCV derate data for the library cell liba/inv2x, use the following command:

```
icc2_shell> report_ocvm -type aocvm \
  [get_lib_cells liba/inv2x]
```

You can report the derate values used to calculate a specific cell or net delay arc by using the `-derate` option with the `report_delay_calculation` command.

Introduction to Parametric On-Chip Variation Analysis

Parametric on-chip variation (POCV) analysis is an optional timing analysis mode that takes a statistical approach to modeling on-chip variation. In this mode, the tool computes arrival time, required time, and slack as statistical distributions rather than fixed minimum and maximum values. The timing results are less pessimistic, providing a better basis for timing optimization.


In POCV timing analysis, instead of specifying absolute minimum and maximum delays for each timing arc, the tool calculates the delay as a function of the Gaussian or normal distribution P :

$$\begin{aligned} \text{delay} &= \text{nominal_delay} + \sigma * P \\ &= \text{nominal_delay} + (C * \text{nominal_delay}) * P \end{aligned}$$

The tool gets the delay variation value σ (sigma) from the logic library, if available, or calculates it from a coefficient C supplied in a POCV data file, where $\sigma = C * \text{nominal_delay}$.

The following figure graphically compares conventional min-max delay with POCV statistical delay.

Figure 4-4 Comparison of Min-Max Delay and POCV Statistical Delay

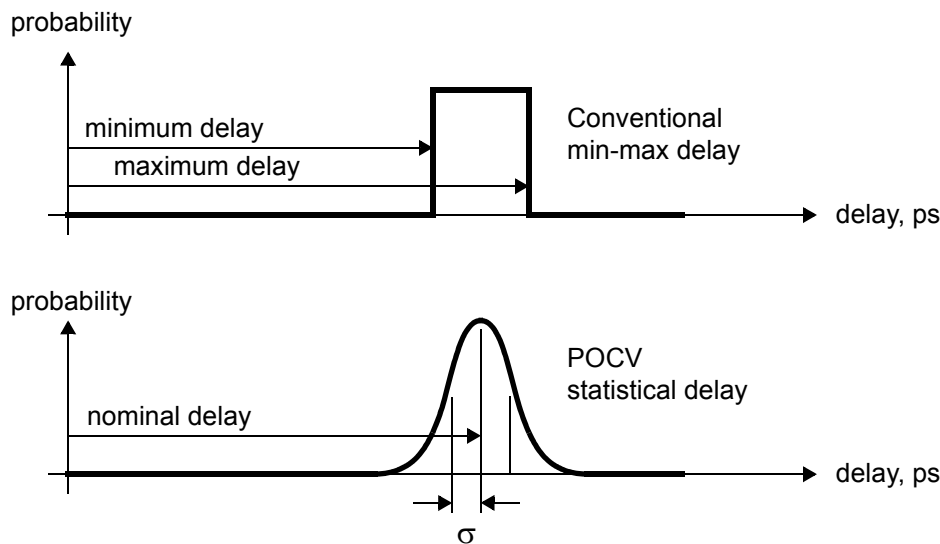

The differences between these two delay variations are:

- The min-max delay specifies the absolute minimum and maximum delay values for the timing arc. The actual delay has an equal probability of occurring anywhere between these two extremes, and no chance of occurring beyond these extremes.
- The POCV statistical model specifies a nominal delay value and a variation σ . The delay has the highest probability of occurring at the nominal value and smaller probabilities of occurring farther away from the nominal value. The actual delay has a 99.7 percent chance of falling within 3σ of the nominal delay.

After the tool determines the delay distribution of each timing arc, it propagates them statistically through timing paths to calculate each arrival time, required time, and slack value as a total nominal value plus a cumulative variation.

To determine the cumulative delay of a path, the tool statistically combines the delay distribution of each stage. This is more accurate than simply adding the worst-case value from each stage. The resulting delay and slack values are more realistic and less pessimistic than values calculated by simple min-max addition.

By default, the final slack reported by the `report_timing` command is the slack at three standard deviations (3σ) less than the nominal slack:

$$\text{reported_slack} = \text{nominal_slack} - (3\sigma)$$

You can change the sigma multiplier from 3.0 to a larger or smaller value to tighten or loosen the timing constraint.

POCV Data Formats

To perform POCV timing analysis, the IC Compiler II tool needs the variation σ for each timing arc. There are two ways to provide this information:

- Library-based POCV data

The tool supports logic-library-based POCV variation data for delay, transition, and constraint arcs in the Liberty Variation Format (LVF).

- For a delay arc, each LVF table entry specifies the delay variation σ for a combination of input slew and output load.
- For a transition arc, each LVF table entry specifies the transition variation σ for a combination of input slew and output load.
- For a constraint arc, each LVF table entry specifies the constraint variation σ for a combination of the transition of the constrained pin and the related pin.

Note:

If your logic libraries contain LVF tables, ensure that the IC Compiler II cell libraries are created using the K-2015.06-SP1 or later versions of the IC Compiler II Library Manager tool. The LVF information is included in the cell libraries and read into your IC Compiler II session automatically.

- File-based POCV data

You read in a coefficient data file for a specific corner in plain text format using the `read_ocvm` command. Coefficient files contain delay variation data, but do not support transition or constraint variation data. The file applies a single coefficient value C for each library cell, hierarchical cell, or design specified in the text file. The delay variation σ is calculated as $C * nominal_delay$. All the timing arcs of a cell share the same coefficient C , irrespective of input slew and output load.

Both library-based and file-based POCV data can be generated by the Synopsys SiliconSmart characterization tool. For details, see the *SiliconSmart ACE User Guide*, available on SolvNet.

File-Based POCV Data

The POCV data file specifies the delay variation coefficients C for the design, for hierarchical cells in the design, or library cells used in the design. The tool accepts both binary and compressed data files generated by the `write_binary_aocvm` command in PrimeTime. For transition and constraint variation data, the LVF library-based data must be used. POCV analysis always applies to both data paths and clock paths.

The following table shows the syntax definition for the POCV file format.

Table 4-4 POCV File Format Syntax

Field specifier	Field description
version	On-chip variation data file version number, which must be version 4.0 or later.
ocvm_type	pocvm
object_type	design cell lib_cell
rf_type	rise fall rise fall
delay_type	cell net cell net
derate_type	early late
path_type	clock data clock data
object_spec	<p>A string that specifies the object name.</p> <p>The string can be an expression that is evaluated based on the attributes of the object, similar to the <code>regexp</code> Tcl command within commands that create collections.</p> <p>If the <code>object_type</code> is <code>design</code>, leave this field blank.</p>
voltage	<p>A floating-point value.</p> <p>An optional field that allows POCV data to be defined for a specific voltage. If the operating voltage of the corner falls within two of the voltage specific POCV data sets, the tool scales the data.</p>
coefficient	A floating-point value.

To add a comment in any location within the file, use double forward slashes (`//`).

The following example POCV data file sets coefficients for the early cell and net delays in the clock paths of the design:

```
version                4.0
ocvm_type:            pocvm
object_type:          design
rf_type:              rise fall
delay_type:           cell net
derate_type:          early
path_type:            clock
object_spec:
voltage:              1.2
coefficient:          0.5
```

The POCV data in the file is specified for 1.2v.

Precedence of File- and Library-POCV Data

You can use both file- and library-based POCV data at the same time. By default, the tool uses the following priority to resolve any conflicts, starting from the highest to the lowest:

1. File-based POCV coefficient setting on the library cell
2. File-based POCV coefficient setting on the hierarchical cell
3. File-based POCV coefficient setting on the design
4. Library-based POCV LVF data on the library cell or on the logic library

To change the default precedence of the file- and library-based POCV data, use the `time.pocvm_precedence` application option. The default is `file`.

If you set this application option to

- `library`, the tool uses the following precedence:
 1. Library-based POCV LVF data on the library cell or on the logic library
 2. File-based POCV coefficient setting on the library cell
 3. File-based POCV coefficient setting on the hierarchical cell
 4. File-based POCV coefficient setting on the design
- `lib_cell_in_file`, the tool uses the following precedence:
 1. File-based POCV coefficient setting on the library cell
 2. Library-based POCV LVF data on the library cell or on the logic library
 3. File-based POCV coefficient setting on the hierarchical cell

4. File-based POCV coefficient setting on the design

Performing Parametric On-Chip Variation Analysis

The tool supports POCV analysis for timing analysis and optimization. It requires file- or library-based POCV data in Liberty Variation Format (LVF). The tool supports delay, transition, and constraint LVF tables. POCV analysis can also be performed with distance-based derate tables.

If your logic libraries contain LVF tables, ensure that the IC Compiler II cell libraries are created using the K-2015.06-SP1 or later version of the IC Compiler II Library Manager tool. The LVF information is included in the cell libraries and read into your IC Compiler II session automatically.

To perform POCV analysis, use the following steps:

1. Define all modes, corners, and scenarios for the block.
2. Enable POCV analysis by using the `time.pocvm_enable_analysis` application option.

```
icc2_shell> set_app_options -name time.pocvm_enable_analysis \
               -value true
```

3. (Optional) Change the number of standard deviations (σ) used to calculate the worst-case values from statistical parameters during POCV analysis as follows:
 - To change the value for the entire block, use the `time.pocvm_corner_sigma` application option.
 - To change the value for a specific corner, use the `set_pocvm_corner_sigma -corners` command.

A corner-specific value set with the `set_pocvm_corner_sigma` command has a higher precedence over a block-specific value set with the `time.pocvm_corner_sigma` application option. To report the corner-sigma value used for timing analysis, use the `report_ocvm -type pocvm -corner_sigma` command.

By default, timing analysis uses the values at 3 standard deviations (3σ) from the mean. Increasing the number of standard deviations, tightens the timing requirement.

The following example changes the number of standard deviations to 3.5 for the current block and 4 for the corner named corner1:

```
icc2_shell> set_app_options -name time.pocvm_corner_sigma \
               -value 3.5 -block [current_block]
icc2_shell> set_pocvm_corner_sigma -corners corner1 4.0
```

4. (Optional) If you use LVF logic libraries with slew variation data, enable the use of slew variation during POCV analysis by using the `time.enable_slew_variation` application option.

```
icc2_shell> set_app_options -name \
time.enable_slew_variation -value true
```

5. (Optional) If you use LVF logic libraries with constraint variation data, enable the use of constraint variation during POCV analysis by using the `time.enable_constraint_variation` application option.

```
icc2_shell> set_app_options -name \
time.enable_constraint_variation -value true
```

6. (Optional) If you use LVF logic libraries with moment-based variation models, enable the use of these models during POCV analysis by using the `time.pocvm_enable_extended_moments` application option.

```
icc2_shell> set_app_options -name \
time.pocvm_enable_extended_moments -value true
```

7. (Optional) If you have distance-based derate tables, enable the use of distance-based derating during POCV analysis by using the `time.ocvm_enable_distance_analysis` application option and read in the distance-based derate table for each corner.

```
icc2_shell> set_app_options -name \
time.ocvm_enable_distance_analysis -value true
```

```
icc2_shell> foreach_in_collection corner [all_corners] {
    current_corner $corner
    read_ocvm $corner.distance_derate.pocv
}
```

8. (Optional) If you have POCV coefficient data files, read them by using the `read_ocvm` command.

```
icc2_shell> read_ocvm coeffs.pocv
```

If an object has both a file- and library-based POCV data, the file-based POCV data takes higher precedence by default. You can change this precedence by using the `time.pocvm_precedence` application option. For more information, see [Precedence of File- and Library-POCV Data](#).

9. (Optional) Apply an additional guard band by using the `set_timing_derate -pocvm_guardband` command.

You can apply the guard band to cell delays, net delays, or cell timing checks by using the `-cell_delay`, `-net_delay`, or `-cell_check` option, as shown in the following example:

```
icc2_shell> set_timing_derate -cell_delay -pocvm_guardband -early 0.98
icc2_shell> set_timing_derate -cell_delay -pocvm_guardband -late 1.03
```

Applying a guard band increases the POCV derating effect, which makes timing analysis more restrictive.

10. (Optional) Modify the variation calculated from coefficients or the variation in LVF by using the `set_timing_derate -pocvm_coefficient_scale_factor` command.

You can apply the scale factor to cell delays, net delays, or cell timing checks by using the `-cell_delay`, `-net_delay`, or `-cell_check` option, as shown in the following example:

```
icc2_shell> set_timing_derate -net_delay \
               -pocvm_coefficient_scale_factor -early 0.86
icc2_shell> set_timing_derate -net_delay \
               -pocvm_coefficient_scale_factor -late 1.16
```

Applying coefficient scale factors alters the variation used in POCV analysis for the specified design objects.

11. (Optional) For cell timing checks, adjust the mean (nominal) value by a factor of the sigma (σ) value by using the `set_timing_derate -cell_check -pocvm_subtract_sigma_factor_from_nominal` command.

When you do so, the tool adjusts the mean value of the constraint, but leaves the sigma value unchanged. The following example subtracts 0.75σ from the mean value for early cell timing checks during POCV analysis:

```
icc2_shell> set_timing_derate -cell_check -early \
               -pocvm_subtract_sigma_factor_from_nominal 0.75
```

This derate value can only be applied for cell timing checks and you must enable constraint variation during POCV analysis by setting the `time.enable_constraint_variation` application option to `true`.

This feature allows constraint variation to be computed as a linear sum, instead of the default root-sum-squared. To do so,

- Add a factor of sigma into the mean by specifying a negative value by using the `set_timing_derate -pocvm_subtract_sigma_factor_from_nominal` command.
- Remove the constraint sigma by setting a coefficient scale factor of zero by using the `set_timing_derate -pocvm_coefficient_scale_factor` command.

For example,

```
icc2_shell> set_timing_derate -cell_check -early \
               -pocvm_subtract_sigma_factor_from_nominal -3.0
icc2_shell> set_timing_derate -cell_check -early \
               -pocvm_coefficient_scale_factor 0.0
```

12. (Optional) Report the values specified with the `-pocvm_guardband`, `-pocvm_coefficient_scale_factor`, or `-pocvm_subtract_sigma_factor_from_nominal` option of the `set_timing_derate` command by using the `report_timing_derate` command.
13. (Optional) For the objects that do not have POCV data, apply OCV derating factors by using the `set_timing_derate` command.

If both POCV and OCV data is available for the same object, the tool decides which value to use based on the following precedence, from the highest to the lowest:

- a. OCV data applied on the leaf cell
- b. POCV data applied on the library cell
- c. OCV data applied on the library cell
- d. POCV data applied on the hierarchical cell
- e. OCV data applied on the hierarchical cell
- f. POCV data applied on the design
- g. OCV data applied on the design

To ignore OCV derating factors when POCV data is available, set the `time.ocvm_precedence_compatibility` application option to `true`.

14. (Optional) Report the design objects that are annotated with POCV coefficients by using the `report_ocvm -type pocvm` command.

The following example reports the POCV coefficients for the cell instance named U21:

```
icc2_shell> report_ocvm -type pocvm [get_cell U21]
```

The following example reports the LVF data for the library cell named liba/inv2x:

```
icc2_shell> report_ocvm -type pocvm \
[get_lib_timing_arcs -from liba/inv2x/A -to liba/inv2x/Z]
```

You can report the derate values used to calculate a specific cell or net delay arc by using the `-derate` option with the `report_delay_calculation` command.

15. Perform timing analysis by using the `report_timing` command.

```
icc2_shell> report_timing -variation -derate
```


When you use the `-variation` option, the tool prints the statistical information (mean and sigma) in the timing report.

Introduction to Clock Reconvergence Pessimism Removal

Clock reconvergence pessimism (CRP) is a difference in delay along the common part of a launching and capturing clock path when you simultaneously use minimum and maximum delays during on-chip variation analysis. It is an accuracy limitation in timing analysis. Automated correction of clock reconvergence pessimism is called clock reconvergence pessimism removal (CRPR).

Consider the following figure where the launch and capture portions of the timing path from cell Reg1 to Reg2 share the clock tree until the output of the cell U2. The shared segment is called the *common portion*, consisting of cells U1 and U2 in this example. The last cell output in the shared clock segment is called the *common point*, which is the output of U1 in this case.


Figure 4-5 Clock Reconvergence Pessimism Example

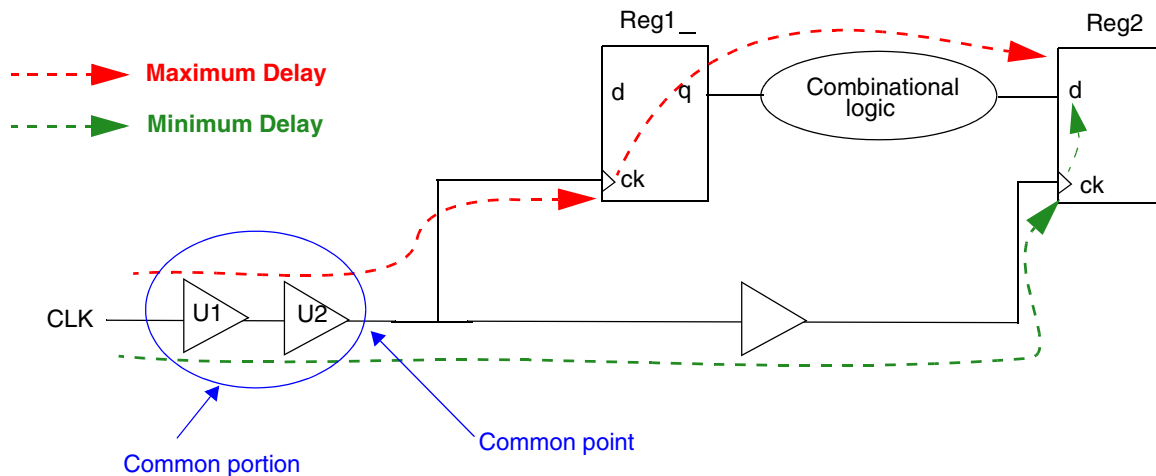

During setup analysis, for the common portion, the tool uses the maximum delay for the launch path and the minimum delay capture path, resulting in clock reconvergence pessimism.

Pessimism can also be introduced on paths that fan out from a clock source to the data pin of a sequential device and a portion of the clock path is shared by the launch and capture paths, as shown in the following figure.

Figure 4-6 Timing Path Fanout From Clock Source to Data Pin

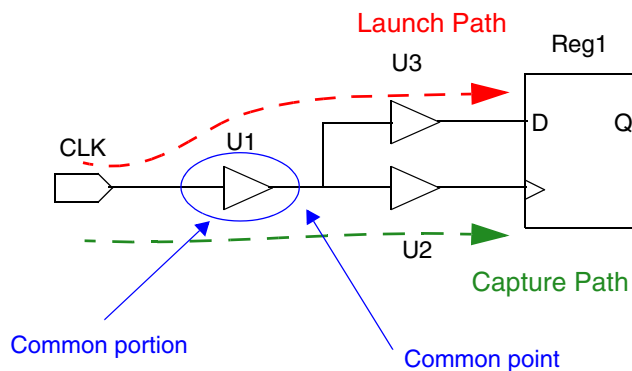

Enabling Clock Reconvergence Pessimism Removal

To enable CRPR, set the `time.remove_clock_reconvergence_pessimism` application option to `true`. By default, it is set to `false` and CRPR is not performed.

Enabling CRPR results in a less pessimistic analysis, but increases the runtime and memory usage. Any change in this variable setting causes a complete timing update.

To further control CRPR, use the following application option settings:

- To remove pessimism on the same- or opposite-sense clock transitions of the common portion, set the `time.clock_reconvergence_pessimism` application option as follows:
 - To perform CRPR only if the clock transitions in the common portion have the same sense, set the value to `same_transition`
 - To perform CRPR for both same- and opposite-sense clock transitions in the common portion, set the value to `normal`. This is the default.
- To remove pessimism between clock-to-data paths and clock paths, set the `time.crpr_remove_clock_to_data_crp` application option to `true`.

The default is `false`.

Reporting Clock Reconvergence Pessimism Removal Calculations

The `report_crpr` command reports the calculation of clock reconvergence pessimism (CRP) between two register clock pins or ports. You specify the pins of the launch and capture registers, the clock, and type of check (setup or hold). For example,

```
icc2_shell> report_crpr -from [get_pins ffa/CP] \  
                  -to [get_pins ffd/CP] -setup \  
                  -setup \
```

The command generates a report that shows the

- Location of the common point
- Launch and capture clock edge types (rising or falling)
- Four calculated arrival times (early and late, and rise and fall) at the common point
- Calculated CRP values (rise and fall)
- Values used for opening-edge and closing-edge pessimism removal

The amount of CRP reported by the `report_crpr` command can be slightly different from the amount reported by the `report_timing` command. For computational efficiency, the `report_timing` command merges multiple points for CRPR calculations when the CRP differences between adjacent points are too small.

5

Constraining Ports and Nets

Timing analysis and timing optimization depend on constraints that describe the characteristics of the ports and nets in your blocks. The following topics describe these constraints and the associated tasks:

- [Specifying Drive Characteristics at Input and Inout Ports](#)
- [Setting a Drive Driving Cell for Ports](#)
- [Setting Drive Resistance](#)
- [Setting an Input Transition Time](#)
- [Removing Drive Characteristics From Ports](#)
- [Specifying Port Load Capacitance](#)
- [Introduction to Ideal Networks](#)
- [Propagation of the Ideal Network Property](#)
- [Creating and Removing Ideal Networks](#)
- [Retrieving Ideal Objects](#)
- [Setting Ideal Latency and Ideal Transition Time](#)
- [Ignoring Net Delays During Timing Analysis](#)

Specifying Drive Characteristics at Input and Inout Ports

To constrain an input or inout port, you should specify a drive resistance and an input transition for it by using one of the following methods:

- Specify an external driving cell by using the `set_driving_cell` command, which the tool uses to calculate the drive resistance and input transition. In addition, the port inherits other characteristics, such as design rule constraints, from the driving cell.

This is the more accurate representation of the drive characteristics.

- Specify a drive resistance and input transition values by using the `set_drive` and `set_input_transition` commands.

This is the less accurate representation of the drive characteristics.

If you use both methods, the drive resistance and input transition derived based on the driving cell specified with the `set_driving_cell` command replace the values specified with the `set_drive` and `set_input_transition` commands.

To report the driving cell or the drive resistance and input transition on ports, use the `report_ports -drive` command.

Setting a Drive Driving Cell for Ports

To constrain an input or inout port, you can model the external driver characteristics of the port by using the `set_driving_cell` command. The tool uses the timing arcs of the driving cell to calculate the drive characteristics of the port being constrained.

You must specify the following information with the `set_driving_cell` command:

- The ports you are constraining
- The library cell for the external driver by using the `-lib_cell` option.

When you use this option, you also specify the name of the cell library to obtain this cell from by using the `-library` option. If you do not specify this option, the tool obtains the cell from the first cell library it finds with a matching cell.

Optionally, you can specify

- A separate driving cell for rise and fall transition by using the `-rise` and `-fall` options.
By default, the driving cell applies to both rise and fall transitions.
- A driving cell for early and late analysis by using the `-min` and `-max` options.

By default, the driving cell applies to both early and late analysis.

- An output pin of the library cell to drive the port by using the `-pin` option.
If the library cell you specify has multiple output pins and you do not use this option, the tool randomly picks an output pin of the cell to drive the port being constrained.
- An input pin of the driving cell for selecting a timing arc to calculate the drive characteristics by using the `-from_pin` option.
If you do use this option, the tool randomly picks an input pin of the driving cell.
- An input rise and fall transition at the input of the driving cell for calculating the drive characteristics by using the `-input_transition_rise` and `-input_transition_fall` options.
By default, the tool uses zero transition at the input of the driving cell.
- That the tool should not scale the drive characteristics based on the operating conditions of the block by using the `-dont_scale` option.
By default, the tool scales the drive characteristics based on the operating conditions of the block.
- That the tool should not apply the design rules of the driving cell on the port being constrained by using the `-no_design_rule` option.
By default, the tool applies the design rules of the driving cell on the port being constrained.
- A value to multiply the calculated transition for the port being constrained by using the `-multiply_by` option.


For designs with multiple scenarios, by default, the driving cell you specify applies only to the current scenario. To specify a driving cell for

- All the scenarios of specific modes, use the `-modes` option.
- All the scenarios of specific corners and the current mode, use the `-corners` option.
- All the scenarios of specific modes and corners, use the `-modes` and `-corners` options
- Specific scenarios, use the `-scenarios` option.

When you use this option, you cannot use the `-modes` or `-corners` options.

The following constrains the port named I2 by specifying a library cell of type AND2 as the driving cell, selecting the timing arc from its input pin named A, and specifying a rise and fall transition of 0.5 for this input pin:

```
icc2_shell> set_driving_cell [get_ports I2] \
-lib_cell AND2 -from_pin A \
-input_transition_rise 0.5 -input_transition_fall 0.5
```

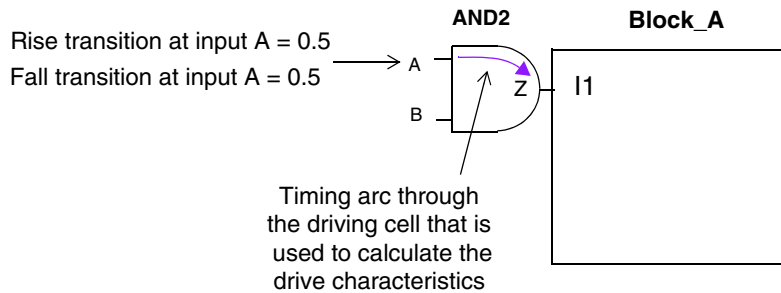Figure 5-1 Specifying Input Pin and Input Transition for the Driving Cell

Setting Drive Resistance

To constrain an input or inout port, you can model the external driver strength as a resistance value by using the `set_drive` command. The external driver is modeled as the supply voltage connected in series with the specified resistance value.

Specify the following information with the `set_drive` command:

- The ports you are constraining
- The drive resistance.

Optionally, you can specify

- A separate drive resistance for rise and fall transition by using the `-rise` and `-fall` options.

By default, the drive resistance applies to both rise and fall transitions.

- A separate drive resistance for early and late analysis by using the `-min` and `-max` options.

By default, the drive resistance applies to both early and late analysis.

For designs with multiple scenarios, by default, the drive resistance applies only to the current scenario. To specify a drive resistance for

- All the scenarios of specific modes, use the `-modes` option.
- All the scenarios of specific corners and the current mode, use the `-corners` option.
- All the scenarios of specific modes and corners, use the `-modes` and `-corners` options
- Specific scenarios, use the `-scenarios` option.

When you use this option, you cannot use the `-modes` or `-corners` options.

The following example sets the rise and fall drives of ports A, B, and C to 2.0

```
icc2_shell> set_drive 2.0 {A B C}
```

Using the `set_driving_cell` command is the more accurate method for specifying the drive characteristics of an input or inout port. However, if you cannot specify a driving cell, specify the external drive characteristics by using the `set_drive` and `set_input_transition` commands.

Setting an Input Transition Time

To specify a fixed transition time for input or inout ports, use the `set_input_transition` command. The port has zero cell delay. The tool uses the specified transition time only in calculating the delays of logic driven by the port.

Specify the following information with the `set_input_transition` command:

- The ports you are constraining
- The input transition.

Optionally, you can specify

- A separate input transition for rise and fall transition by using the `-rise` and `-fall` options.

By default, the input transition applies to both rise and fall transitions.

- A separate input transition for early and late analysis by using the `-min` and `-max` options.

By default, the input transition applies to both early and late analysis.

- The input transition relative to a clock by using the `-clock` option.

By default, the tool uses the rising edge of the clock. To use the falling edge of the clock, specify the `-clock_fall` option.

For designs with multiple scenarios, by default, the input transition applies only to the current scenario. To specify an input transition for

- All the scenarios of specific modes, use the `-modes` option.
- All the scenarios of specific corners and the current mode, use the `-corners` option.
- All the scenarios of specific modes and corners, use the `-modes` and `-corners` options
- Specific scenarios, use the `-scenarios` option.

When you use this option, you cannot use the `-modes` or `-corners` options.

The following example sets the rise and fall input transition of ports A, B, and C to 0.5

```
icc2_shell> set_input_transition 0.5 {A B C}
```

Using the `set_driving_cell` command is the more accurate method for specifying the drive characteristics of an input or inout port. However, if you cannot specify a driving cell, specify the external drive characteristics by using the `set_drive` and `set_input_transition` commands.

Removing Drive Characteristics From Ports

The commands shown in the following table remove drive information from ports.

Table 5-1 Commands to Remove Drive Information

To remove this	Use this
Driving cell information from a list of ports	<code>remove_driving_cell</code>
Drive resistance	<code>set_drive 0.0</code>
Input transition	<code>set_input_transition 0.0</code>
Drive data and all user-specified data, such as clocks, input and output delays	<code>reset_design</code>

Specifying Port Load Capacitance

To accurately perform timing analysis, the tool needs information about the external load capacitance of nets connected to top-level ports, including pin capacitance and wire capacitance. You can explicitly specify the load capacitance on a port with the `set_load` command.

When you use the `set_load` command to constrain a port, you must specify the following information:

- The ports you are constraining
- The capacitance value.

Optionally, you can specify

- A separate capacitance for rise and fall transition by using the `-rise` and `-fall` options.

By default, the capacitance applies to both rise and fall transitions.

- A separate capacitance for early and late analysis by using the `-min` and `-max` options. By default, the capacitance applies to both early and late analysis.
- That the capacitance should be treated as a wire load by using the `-wire_load` option or both a wire load and a pin load by using the `-wire_load` and `-pin_load` options. By default, the tool treats the capacitance as a pin load.

The following example sets a capacitance of 3.5 on all inputs and 5 on all outputs.

```
icc2_shell> set_load 3.5 [all_inputs]
icc2_shell> set_load 5 [all_outputs]
```

Introduction to Ideal Networks

An ideal network is a network of cells, nets, and pins that are exempt from timing updates, timing optimization, and DRC fixing. For objects in an ideal network, the maximum capacitance and transition design rules are ignored. As a result, runtime and timing optimization are improved. In addition, the tool does not remove the source port or leaf-level pin of the ideal network during optimization.

For example, if you identify certain high-fanout nets that you intend to synthesize separately, such as scan-enable and reset nets, as ideal nets, you can reduce runtime by avoiding unnecessary retiming and unwanted design changes during optimization.

When you specify the source port or leaf-level pin of an ideal network, the nets, cells, and pins in the transitive fanout of this source are treated as ideal objects. Ideal objects have the following properties:

- They are marked as don't touch.
- They are not affected by timing updates, delay optimization, or DRC fixing.
- They are assigned ideal timing properties: ideal latency, ideal transition time, and ideal capacitance of zero. You can change the latency and transition values by using the `set_ideal_latency` and `set_ideal_transition` commands, respectively.

The `size_only` attribute is set on the cell that contains or drives the source. This guarantees that the ideal network source is not lost during a compile operation.

Propagation of the Ideal Network Property

When you specify the source object of an ideal network, all the nets, cells, and pins in the transitive fanout of the source objects are treated as ideal. Any input port or internal pin of the current design can be a source object, except for a pin at a hierarchical boundary.

The tool automatically spreads the ideal network property to the nets, cells, and pins in the transitive fanout of the source object, according to certain propagation rules.

The tool propagates the ideal network property and stops when it reaches

- A sequential cell.
- A point beyond which there is no forward timing arc, such as an output port or a disabled timing arc.
- An object that is not ideal.

The tool considers the following objects to be ideal

- A pin that it is one of the following:
 - A pin specified in the object list of the `set_ideal_network` command
 - A driver pin and its cell is ideal
 - A load pin attached to an ideal net
- A net that has all its driving pins as ideal.
- A combinational cell that has one of the following characteristics:
 - All its input pins are ideal
 - An input pin is attached to a constant net and all other input pins are ideal.

An object with the case analysis attribute is not treated as constant.

If an ideal network overlaps a clock network, the clock timing information, including clock latency and transition values, overrides the ideal timing for the clock portion of the overlapped networks.

For the circuit in the following figure, assume you specified pin U1/Z as the source of the ideal network. The tool propagates the ideal network property along the nets, cells, and pins in the transitive fanout of pin U1/Z and stops at the sequential cell named REG1. In addition, the tool propagates a `dont_touch` attribute is propagated to these nets, cells, and pins. and sets a `size_only` attribute on the driver of the ideal network source, cell IV1.

Figure 5-2 Ideal Networks


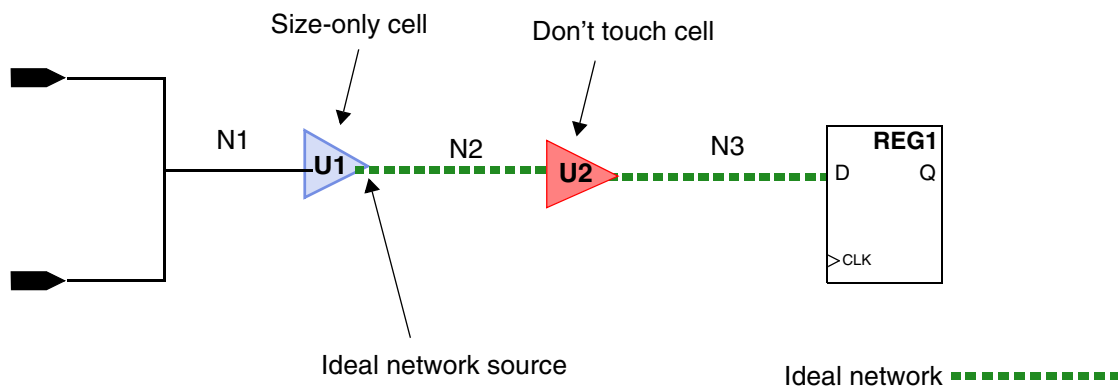


Figure 5-3 Propagation of the Ideal Network

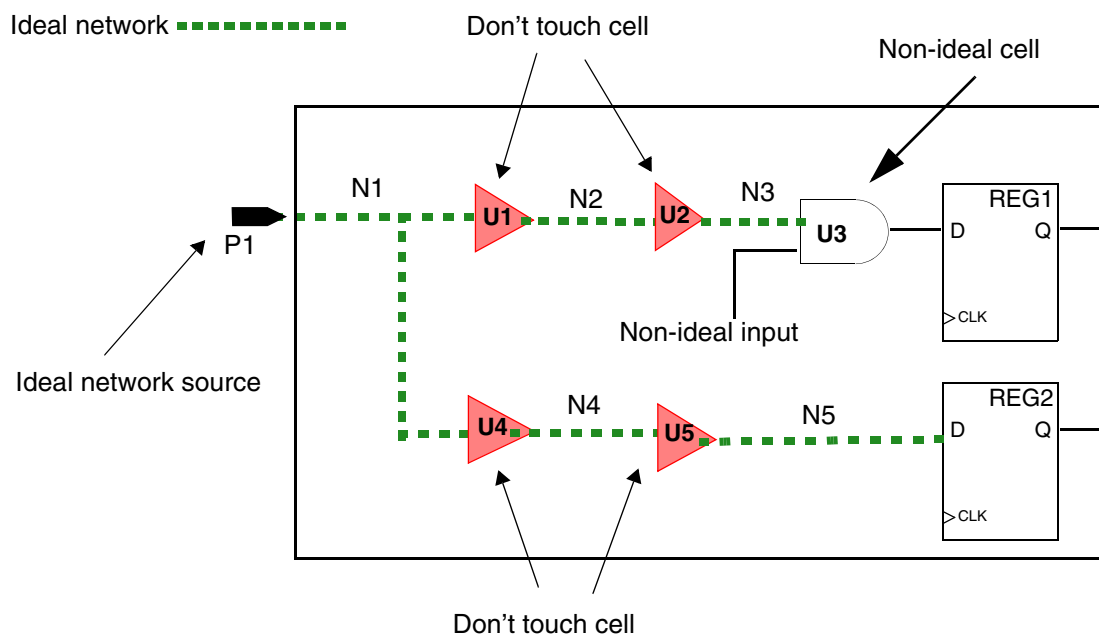

Creating and Removing Ideal Networks

To create ideal networks, use the `set_ideal_network` command.

When you use this command, you must specify a list of ports, pins, or nets as the sources of the ideal network. If you specify a net, the net's global driver pins or ports are marked as

ideal network sources. That is, the ideal network property is applied to the global driver pins or ports of the specified net. This ensures that the ideal network property is not lost even if the net is optimized away.

To prevent the ideal network from being propagated through logic gates, use the `-no_propagate` option.

The following command specifies port P1 as a source of an ideal network:

```
icc2_shell> set_ideal_network [get_ports P1]
```

To report information about ports, pins, nets, and cells on ideal networks, use the `report_ideal_network` command. To remove an ideal network setting and restore cells, nets, and pins in the ideal network to their nonideal state, use the `remove_ideal_network` command.

Retrieving Ideal Objects

Use the following commands to retrieve ideal objects.

- `get_nets -filter "ideal_net == true"`

This command returns ideal nets set by the `set_ideal_network -no_propagate` command.

- `get_pins -filter "ideal_network_source == true"`

This command returns pins that are ideal network sources. Additionally, if you use the `ideal_network_options == 1` filter, the command returns only the ideal network source pins that were set by the `set_ideal_network -no_propagate` command.

- `get_ports -filter "ideal_network_source == true"`

This command returns ports that are ideal network sources. Additionally, if you use the `ideal_network_options == 1` filter, the command returns only the ideal network source ports that were set by the `set_ideal_network -no_propagate` command.

Setting Ideal Latency and Ideal Transition Time

The default latency and transition values for ideal networks is zero. You can override these defaults by using the following commands:

- `set_ideal_latency`
- `set_ideal_transition`

Note:

The timing of ideal networks is updated whenever you execute either of these commands.

You can use these commands to set the ideal latency and ideal transition on the source pin of an ideal net or network and on any nonsource pin of an ideal network. The specified values override any library cell values or net delay values. For ideal networks, the ideal latency and transition values are propagated from the source pins to the network boundary pins.

The total ideal latency at any given point of an ideal network is the sum of the source pin ideal latency and all the ideal latencies of the leaf cell pins along the path to the given point. The ideal transition values specified at the various source and leaf cell pins are independent and noncumulative. The transition for an unspecified input pin is the ideal transition of the closest pin with a specified ideal transition value. This rule applies to boundary pins as well.

The `set_input_delay` command is applicable to ideal networks. This delay is treated as the off-block latency or source latency.

You can remove ideal latency and ideal transition values by using the following commands:

- `remove_ideal_latency`
- `remove_ideal_transition`

Ignoring Net Delays During Timing Analysis

By default, the IC Compiler II tool considers both net and cells delays during timing analysis. To ignore net delays and consider only the cell delays during timing analysis, enable zero-interconnect delay calculation by setting the `time.delay_calculation_style` application option to `zero_interconnect`. To reset the delay calculation style to the default, set this application option to `auto`.

6

Performing Parasitic Extraction

Accurate timing analysis depends on accurate RC (parasitic) information for nets. The IC Compiler II tool provides RC extraction capabilities at both preroute and postroute stages. In addition, the tool provides the capability of back-annotating detailed parasitic information. The following topics describe the tasks related to extraction and back-annotation of parasitics information.

- [Specifying the Parasitic Technology Information](#)
- [Specifying the Parasitic Scaling Factors for Extraction](#)
- [Enabling Coupling Capacitance Extraction for Detailed Routed Nets](#)
- [Performing Extraction and Generating Parasitics](#)
- [Performing In-Design Signoff Extraction](#)
- [Back-Annotating Parasitics](#)

Specifying the Parasitic Technology Information

The IC Compiler II tool uses TLUPlus files for the parasitic technology information. TLUPlus is a binary table that stores layer-specific RC coefficients.

The TLUPlus models enable accurate RC extraction results by including the effects of width, space, density, and temperature on the resistance coefficients. For details about modeling these effects in the Interconnect Technology Format (ITF) file, see the StarRC documentation.

For virtual route estimation, the IC Compiler II tool calculates the RC coefficients by applying averaging techniques to the layer-specific RC coefficients because layers are not assigned at this stage of the design flow.

To associate parasitic information with a corner, you must

1. Read in the TLUPlus files by using the `read_parasitic_tech` command.

You must read in the TLUPlus files and add them to one of the following:

- The cell library

In general, the TLUPlus files should be in the cell libraries so they can be accessed by all blocks that use a specific technology.

- The design library

If the TLUPlus files are not included in your cell libraries, add them to your design library.

You can read one or more TLUPlus files that are one of the following types:

- Emulation TLUPlus files, which are used before inserting metal fill
- Non-emulation TLUPlus files, which are used after inserting metal fill

You must also specify the TLUPlus file by using the `-tlup` option. If you specify the TLUPlus files with a relative path or with no path, the IC Compiler II tool uses the search path defined with the `search_path` variable to locate the files.

If the layer names in the TLUPlus file do not match the layer names in the technology file, you must define the mapping in a TLUPlus layer mapping file, which uses the syntax described in [TLUPlus Layer Mapping File](#). To specify the name of the layer mapping file, use the `-layermap` option.

By default, the `read_parasitic_tech` command performs a basic check on the TLUPlus file and the corresponding layer mapping files. To disable this basic check or to perform a more advanced check, set the `-sanity_check` option to `none` or `advanced`.

After you read in a TLUPlus file, it is identified by its parasitic technology model name. By default, the parasitic technology model name is the base name of the specified TLUPlus file; however, you can specify a different name by using the `-name` option.

For example, to read in a TLUPlus file named `my.tlup` using a layer mapping file named `my.layermap` and store it in the current design library with a parasitic technology model name of `para1`, use the following command:

```
icc2_shell> read_parasitic_tech -tlup my.tlup \
               -layermap my.layermap -name para1
```

Note:

The `nxtgrd` files generated with N-2017.12 or later version of the StarRC tool contain TLUPlus models, and the `read_parasitic_tech` command can read these files also.

2. Associate the TLUPlus files with a corner by using the `set_parasitic_parameters` command.
 - To associate the TLUPlus files with specific corners, use the `-corners` option.
By default, the command associates the specified TLUPlus files with the current corner.
 - To specify the TLUPlus file used for early delay calculations, use the `-early_spec` option.
 - To specify the temperature used for early delay calculations, use the `-early_temperature` option.
 - To specify the TLUPlus file used for late delay calculations, use the `-late_spec` option.
 - To specify the temperature used for late delay calculations, use the `-late_temperature` option.
 - To specify the library name that contains the parasitic specification, use the `-library` option.

By default, the tool looks for the TLUPlus files in the current design library.

You can specify only one early and one late parasitic technology model per corner. However, you can change these settings at any time during the design flow, such as changing to non-emulation TLUPlus files after inserting metal fill.

To specify the TLUPlus files with the `-early_spec` and `-late_spec` options, use the parasitic technology model name assigned by the `read_parasitic_tech` command. For example, to use the TLUPlus file that has a parasitic technology model name of `para1` for early delay calculations for the current corner, use the following command:

```
icc2_shell> set_parasitic_parameters -early_spec para1
```

TLUPlus Layer Mapping File

The TLUPlus layer mapping file uses the following syntax:

```
conducting_layers
    tf_metal_layer_name1      ITF_metal_layer_name1
...
    tf_metal_layer_namen      ITF_metal_layer_namen

via_layers
    tf_via_layer_name1       ITF_via_layer_name1
...
    tf_via_layer_namen       ITF_via_layer_namen
```

To include comments in the layer mapping file, start the line with an asterisk (*) or pound sign (#).

Specifying the Parasitic Scaling Factors for Extraction

Parasitic scaling factors allow you to adjust the resistance and capacitance values for specific conditions, such as minimum or maximum delay calculations and virtual-routed or detail-routed nets. By default, the parasitic scaling factors are 1.0 and the tool does not adjust the resistance and capacitance values.

Use the `set_extraction_options` command to specify the parasitic scaling factors. By default, the specified parasitic scaling factors apply to the current corner. To apply the parasitic scaling factors to specific corners, use the `-corners` option. The parasitic scaling factors that you specify with the `set_extraction_options` command are saved with the block when you save it in the design library by using the `save_block` command.

The following table shows the options used to set the various parasitic scaling factors.

Table 6-1 Options to Set Parasitic Scaling Factors

Parasitic value	Options
Detail route resistance	-late_res_scale -early_res_scale
Detail route capacitance	-late_cap_scale -early_cap_scale
Detail routing coupling capacitance	-late_ccap_scale -early_ccap_scale
Virtual route horizontal resistance	-late_vr_horizontal_res_scale -early_vr_horizontal_res_scale

Table 6-1 Options to Set Parasitic Scaling Factors (Continued)

Parasitic value	Options
Virtual route vertical resistance	-late_vr_vertical_res_scale -early_vr_vertical_res_scale
Virtual route via resistance	-late_vr_via_res_scale -early_vr_via_res_scale
Virtual route horizontal capacitance	-late_vr_horizontal_cap_scale -early_vr_horizontal_cap_scale
Virtual route vertical capacitance	-late_vr_vertical_cap_scale -early_vr_vertical_cap_scale

For example, to increase the capacitance values for maximum delay calculations by 10 percent and decrease the capacitance values for minimum delay calculations by 5 percent for the current corner, use the following command:

```
icc2_shell> set_extraction_options \
    -late_cap_scale 1.1 -early_cap_scale 0.95
```

To report the parasitic scaling factors, use the `report_extraction_options` command. By default, the command reports the parasitic scaling factors for all corners. To report the parasitic scaling factors for specific corners, use the `-corners` option.

To reset a parasitic scaling factor, use the `set_extraction_options` command to set its value to 1.0.

Enabling Coupling Capacitance Extraction for Detailed Routed Nets

By default, when you perform extraction for a detail routed block, the tool does not extract the net-to-net coupling capacitances separately. The coupling effect is included in the total capacitance.

To extract coupling capacitances for detail routed nets, set the `extract.enable_coupling_cap` application option to `true`.

```
icc2_shell> set_app_options -name extract.enable_coupling_cap \
    -value true
```

Disabling the Breaking of a Loop Structures in a Resistance Networks

During extraction, when the tool encounters a loop structure in a resistance network, it breaks the loop at the minimum resistance value. To improve the accuracy of pin-to-pin resistance and correlation with the StarRC tool, you can prevent the tool from breaking resistance loops by setting the `extract.cut_loop` application option to `false`. However, doing so can increase the extraction runtime.

Performing Extraction and Generating Parasitics

The tool automatically performs extraction when it updates the timing information. You can update the timing information and perform extraction by explicitly running the `update_timing` command. To write out the extracted parasitics information, use the `write_parasitics` command.

When you use the `write_parasitics` command, you must specify an output file name by using the `-output` option.

By default, the `write_parasitics` command

- Generates a SPEF file for each corner. The names of these SPEF files are derived based on the output file name you specify and the technology name, temperature, and the scaling factors specified by the `set_extraction_options` command. The tool also generates a file named `XX.spef_scenario` that lists the scenarios associated with each of the output SPEF files.

To generate the parasitic information in the galaxy parasitic database (GPD) format, which is a binary file, use the `-format gdp` option. Galaxy parasitic database files can be used in the PrimeTime tool for timing analysis.

- Maps the net names to numbers and uses these numbers when writing the parasitic information for the nets.

This reduces the file size. To override the mapping of net names, use the `-no_name_mapping` option.

- Generates a SPEF file for the top-level design.

To generate separate SPEF files for each lower-level block, use the `-hierarchical` option.

When you run the `write_parasitics` command, if the parasitic information is out-of-date, the tool performs extraction. However, if you use the `-hierarchical` option, the tool does not check if extraction has been performed for the lower-level blocks. Therefore, run the `update_timing` command before you use the `write_parasitics` command with the `-hierarchical` option.

Performing In-Design Signoff Extraction

The IC Compiler II tool supports In-Design signoff extraction on routed designs using the StarRC extraction capabilities. This feature improves correlation with the StarRC tool, and it can be used with PrimeTime delay calculation to improve postroute QoR. However, due to the slower runtime, StarRC In-Design extraction should be used only at the final stages of design closure.

To use StarRC In-Design extraction, perform the following steps before you run the `route_opt` command:

1. Specify a configuration file for running StarRC extraction by using the `set_starrc_in_design -config` command.

The configuration file must contain the following settings:

- `SIGNOFF_IMAGE`, which is the location of the StarRC executable
- `CORNER_GRD_FILE`, which is a file that lists each corner and the corresponding StarRC `nxtgrd` file
- One of the following settings:
 - `MAPPING_FILE`, which is a StarRC layer mapping file (this is the recommended setting)
 - `COMMAND_FILE`, which is a StarRC command file

To run StarRC In-Design extraction using distributed processing, specify the distributed processing settings in the StarRC command file by using the `STARRC_DP_STRING` command.

If a setting in the StarRC command file conflicts with the IC Compiler II setting, the tool uses the IC Compiler II setting. For example, if the coupling capacitance threshold specified by the `set_extraction_options` command is 1.0 ff and the StarRC command file sets `COUPLING_ABS_THRESHOLD` to 0.5 ff, StarRC In-Design extraction uses 1.0 ff.

The following is an example configuration file:

```
SIGNOFF_IMAGE: /home/star_rcxt_2016.06/bin/StarXtract
CORNER_GRD_FILE: corner_grd.mapping
MAPPING_FILE: star.mapping
```

2. (Optional) Report the settings for StarRC In-Design extraction by using the `report_starrrc_in_design` command.
3. Enable StarRC In-Design extraction by using the following application option setting:

```
icc2_shell> set_app_options -list {extract.starrrc_mode true}
```

Note:

If a design is not routed, StarRC In-Design extraction is not performed even if this application option is set to `true`.

4. (Optional) Define a multicore configuration that applies to StarRC In-Design by using the `set_host_options -target starrrc` command.

For more information about the various settings you can specify for multicore processing, see the "Enabling Multicore Processing" topic in the *IC Compiler II Implementation User Guide*.

To use the parasitic information from the StarRC extraction, run the `update_timing -full` command before you run the `report_timing`, `report_qor`, or `write_parasitics` command.

For more information about the StarRC tool, see the *StarRC User Guide and Command Reference*.

Back-Annotating Parasitics

You can read net parasitic data generated by an external tool in SPEF format, and use it during delay calculation during timing analysis. To do so, use the `read_parasitics` command and specify a SPEF file for each corner by using the `-corner_spef` option one or more times. If several corners share the same SPEF file, you can list multiple corners in one `-corner_spef` option setting.

By default, the parasitics in the SPEF file are applied to the top-level block. To read SPEF for lower-level blocks, use the `-block` option. When you use this option, the corners you specify with the `-corner_spef` option must be defined at the top level.

The following example applies

- The TOP_C1C2.spef file for corners C1 and C2 and TOP_C3C4.spef file for corners C3 and C4 at the top level.
- The BLK_C1C2.spef file for corners C1 and C2 and BLK_C3C4.spef file for corners C3 and C4 at the block level.

```
icc2_shell> read_parasitics -corner_spef {{C1 C2} TOP_C1C2.spef} \
               -corner_spef {{C3 C4} TOP_C3C4.spef}
icc2_shell> read_parasitics -block BLK \
```

```
-corner_spef {{C1 C2} BLK_C1C2.spef} \  
-corner_spef {{C3 C4} BLK_C3C4.spef}
```

After the `read_parasitics` command is executed, the tool prints the number of nets that are not annotated. The tool performs extraction for any nets that are not annotated by the SPEF files.

7

Performing Analysis

The IC Compiler II tool allows you to analyze and report a wide range of timing related information about the design. The following topics describe how to control and perform timing analysis:

- [Controlling Delay Calculation](#)
- [Using the PrimeTime Delay Calculation Engine](#)
- [Enabling Waveform Propagation Using CCS Models](#)
- [Reporting Timing Paths](#)
- [Performing Path-Based Analysis](#)
- [Reporting the Logical DRC Violations](#)
- [Generating a Global Summary of Timing Violations](#)
- [Reporting the QoR](#)
- [Generating and Analyzing a QoR Snapshot](#)
- [Reporting the Delay of a Timing Arc](#)
- [Reporting the Clock or Data Arrival Time at Pins or Ports](#)
- [Checking the Timing Constraints and Settings](#)
- [Checking for Consistency in Timing Analysis or Extraction Settings](#)

- [Analyzing Timing Correlation Between the IC Compiler II and PrimeTime Tools](#)

Controlling Delay Calculation

The IC Compiler II tool supports both the Elmore and Arnoldi delay calculation models. You cannot specify which of these timing models to use; the tool selects whichever model is the most appropriate, based on the state of the design.

You can ignore net delays during timing analysis by using the following application option setting:

```
icc2_shell> set_app_options -name time.delay_calculation_style \
               -value zero_interconnect
```

Using the PrimeTime Delay Calculation Engine

If you are using cell libraries generated by O-2018.06 or later versions of the IC Compiler II Library Manager tool, the IC Compiler II tool automatically uses the PrimeTime delay calculation engine for the `route_opt` command.

If you are using cell libraries that were generated using N-2017.09-SP5 or older version of the IC Compiler II Library Manager tool, to use the PrimeTime delay calculation engine for the `route_opt` command,

1. Set the `time.use_pt_delay` application option to `true`.

```
icc2_shell> set_app_options -name time.use_pt_delay -value true
```

2. Ensure that the IC Compiler II tool can access the logic library (.db) files of the cell libraries.

If the location of the logic library files has changed since you created the cell libraries, add the new location of the logic library files to the `search_path` variable as shown in the following example:

```
icc2_shell> lappend search_path /libraries/ref_libs/db_files
```

To ensure that the IC Compiler II timing analysis settings are consistent with the corresponding PrimeTime settings, use the `check_consistency_settings` command as described in [Checking for Consistency in Timing Analysis or Extraction Settings](#).

For more information about using the PrimeTime delay calculation engine when performing postroute optimization with the `route_opt` command, see the *IC Compiler II Implementation User Guide*.

To generate cell libraries, use either the library configuration flow in the IC Compiler II tool, as described in "Creating Cell Libraries" in the *IC Compiler II Data Model User Guide*, or the library assembly flow in the IC Compiler II Library Manager tool, as described in the *IC Compiler II Library Preparation User Guide*.

Enabling Multiple-Input Switching Analysis

Library cells are usually characterized such that a change at a single input causes the output to change. However, in an actual design, if multiple inputs switch at the same time, the actual cell delay can be very different from the characterized value. Multiple-input switching mostly affects hold analysis.

You can account for multiple-input switching effects during hold analysis by

1. Specifying multiple-input switching coefficients for library cells by using the `set_multi_input_switching_coefficient` command.
2. Enabling multiple-input switching analysis by setting the `time.enable_multi_input_switching_analysis` application option to `true`.

When you enable this feature, by default, the tool considers the data arrival windows of the input pins, checks for overlaps, and derives the actual coefficients based on the coefficients specified for the library cells. You can ignore the data arrival windows of input pins and use coefficients specified for the library cells by setting the

`time.enable_multi_input_switching_timing_window_filter` application option to `false`.

Enabling Waveform Propagation Using CCS Models

Waveform distortion effects can become significant at advanced geometry nodes. The IC Compiler II tool offers an advanced gate-level waveform propagation analysis mode that captures the effects of such distortion on the next stage delay, including the Miller effect and long tail effect.

The waveform propagation mode uses CCS timing models and propagated piecewise linear waveforms in place of simplified equivalent waveforms. It produces more accurate results when the voltage waveform shapes differ significantly from the library characterization driver waveform shapes. The CCS modeling data must be available in the logic libraries to get more accurate results.

To enable waveform propagation, use the following steps:

1. Generate your cell libraries with IC Compiler II Library Manager version M-2016.12-SP2 or later.
2. Use CCS receiver models for delay calculation.

```
icc2_shell> set_app_options -list {time.enable_ccs_rcv_cap true}
```

3. Use CCS-based waveform analysis on the design.

```
icc2_shell> set_app_options \ }
```

```
-list {time.delay_calc_waveform_analysis_mode full_design}
```

4. Improve PrimeTime correlation when using CCS-based waveform analysis on the design.

```
icc2_shell> set_app_options \ }
               -list {time.awp_compatibility_mode false}
```

Reporting Timing Paths

To report information about the timing paths in a block, use the `report_timing` command.

By default, the command reports the path having the worst maximum (setup) delay across all scenarios for the current block that are enabled for setup analysis. To report the timing information for minimum (hold) delay analysis, use the `-delay_type` option.

To report the timing paths for

- All scenarios associated with specific modes, use the `-modes` option.
- All scenarios associated with specific corners, use the `-corners` option.
- Specific scenarios, use the `-scenarios` option.

To report maximum and minimum timing information for a scenario, you must enable the scenario for setup and hold analysis.

You can further limit the report to

- Include only specific path groups by using the `-groups` option
- Include only paths
 - Starting from specific points by using the `-from`, `-rise_from`, or `-fall_from` option
 - Ending at specific points by using the `-to`, `-rise_to`, or `-fall_to` option
 - Going through specific points by using the `-through`, `-rise_through`, or `-fall_through` option
 - Between a specific startpoint and endpoint pair by using the `-start_end_pair` option
- Include only a specific number of paths or paths per endpoint by using the `-max_paths` or `-nworst` option
- Include only specific paths that have a slack less than a specified value by using the `-slack_lesser_than` option.
- Exclude any timing paths that are

- From, through, or to specific pins, ports, nets, or cell instances by using the `-exclude` option
- Rising at specific pins, ports, nets, or cell instances by using the `-rise_exclude` option
- Falling at specific pins, ports, nets, or cell instances by using the `-fall_exclude` option

Control the information that is printed about the timing paths or its objects by using the following options:

- Include nets by using the `-nets` option
- Include pin locations by using the `-physical` option
- Include attributes by using the `-attributes` option
- Include input pins by using the `-input_pins` option
- Include hierarchical pins by using the `-include_hierarchical_pins` option
- Include transition times by using the `-transition_time` option
- Include capacitances by using the `-capacitance` option
- Include information about the dominant timing exceptions (false paths, multicycle paths, and minimum and maximum delays) that apply to each timing path that is printed by using the `-exception` option

Including information about the exceptions that apply to each timing path increases the runtime.

- Include operating condition process, voltage, and temperature by using the `-process`, `-voltage`, and `-temperature` options
- Include timing derates by using the `-derate` option
- Include crosstalk information when signal integrity is enabled, by using the `-crosstalk_delta` option
- Include the mean and standard deviation of the statistical time increment for each path element when parametric on-chip variation (POCV) analysis is enabled by using the `-variation` option

You can further control this variation information by using the `time.pocvm_use_normalized_reporting` application option. For more information, see its man page.

- Exclude the transparency window for latch based designs by using the `-skip_transparency_window` option

You can control the formatting of the report as follows:

- Specify the path reporting style, such as the full path, endpoints only, and so on, by using the `-path_type` option
- Order the report based on modes, corners, scenarios, path groups, or the entire block by using the `-report_by` option
- Sort the report based on paths, path groups, or slack by using the `-sort_by` option
- Specify the number of significant digits to display by using the `-significant_digits` option
- Prevent the splitting of lines, if columns over flow, by using the `-nosplit` option

The following is an example of the default output of the `report_timing` command.

Example 7-1 `report_timing` Report Example

```
icc2_shell> report_timing
*****
Report : timing
        -path_type full
        -delay_type max
        -nworst 1
        -max_paths 1
        -report_by design
        -nets
        -physical
        -attributes
Design : my_design
.....
.....
.....
*****
...
Startpoint: u0_3/p0/mul0/m0_U1_INT_SUMR_reg_1_/CLK (rising edge-triggered flip-flop)
Endpoint: u0_3/p0/iu0/r_reg_E__OP2__31_/D (rising edge-triggered flip-flop)
Mode: my_mode
Corner: wc_corner
Scenario: wc_scenario
Path Group: pci_clk
Path Type: max
Launch clock: pci_clk r
Capture clock: pci_clk r

Attributes
b - black-box (unknown)
s - size_only
d - dont_touch
u - dont_use
g - generic
h - hierarchical
i - ideal
n - noncombinational
E - extracted timing model
Q - Quick timing model
```

Point	Fanout	Cap	Trans	Incr	Path
clock pci_clk (rise edge)				0.00	0.00
clock network delay (ideal)				2.00	2.00
u0_3/p0/mul0/m0_U1_INT_SUMR_reg_1_/CLK (SDFFX1_LVT)			0.00	0.00	2.00 r
u0_3/p0/mul0/m0_U1_INT_SUMR_reg_1_/QN (SDFFX1_LVT)	1	7.19	0.11	0.18	2.18 f
...					
u0_3/p0/iu0/U6660/S (MUX21X1_LVT)			0.22	0.00	6.26 r
u0_3/p0/iu0/U6660/Q (MUX21X1_LVT)	1	1.78	0.11	0.11	6.37 f
u0_3/p0/iu0/r_reg_E_OP2_31_/D (SDFFX1_LVT)			0.11	0.00	6.37 f
data arrival time					6.37
clock pci_clk (rise edge)				5.00	5.00
clock network delay (ideal)				2.00	7.00
clock uncertainty				-0.40	6.60
library setup time				-0.20	6.40
data required time					6.40
data required time					6.40
data arrival time					-6.37
slack (MET)					0.03

Controlling the Column Order in a Timing Report

The default report shows the startpoint, endpoint, path group, path type, the incremental and cumulative time delay values along the data and clock paths, the data required time at the path endpoint, and the timing slack for the path.

You can control the column order in the report by using the `time.report_timing_column_order` application option, as shown in the following example:

```
icc2_shell> set_app_options -name time.report_timing_column_order \
               -value {point incr path cap fanout trans}
```

The valid values for this application option are `point`, `incr`, `path`, `cap`, `fanout`, `trans`, `derate`, `mean`, and `sensit`.

Reporting Unconstrained Timing Paths

By default, the `report_timing` and `get_timing_paths` commands do not report timing paths that are unconstrained. To report unconstrained timing paths, use the following application option setting before you run the `report_timing` or `get_timing_paths` command:

```
icc2_shell> set_app_options -list {time.report_unconstrained_paths true}
```

Unconstrained paths have a slack value of infinity, and you can report unconstrained paths only by using path filtering as shown in the following example:

```
icc2_shell> report_timing [filter_collection \  
    [get_timing_paths -max_paths 200000 -to [all_outputs]] \  
    slack=="INFINITY"]
```

Performing Path-Based Analysis

For faster runtime and lower memory usage, by default, the tool uses graph-based analysis (GBA), which merges the timing data at nodes with multiple paths going through them. Graph-based analysis is conservative and provides a safety margin for timing optimization.

Path-based analysis (PBA) can address the pessimism of graph-based analysis by analyzing and propagating the timing for each topological path. It is recommended for more accurate timing analysis at the postroute stage.

You can perform path-based analysis by using the `-pba_mode` option with the following commands:

- `report_timing`
- `report_global_timing`
- `report_qor`
- `get_timing_paths`

The supported values for the `-pba_mode` option are:

- `none`
Graph-based analysis is performed, which is the default.
- `path`
Graph-based analysis is used to identify the appropriate timing paths, and then path-based analysis used to report the timing of the selected paths.
- `exhaustive`
Path-based analysis is used exhaustively to identify and report the appropriate timing paths, which might increase the runtime significantly. You can limit the number of paths analyzed by using the `time.pba_exhaustive_endpoint_path_limit` application option.

To specify that path-based analysis is used only for adjusting the timing derating values, set the `time.pba_derate_only_mode` application option to `true`.

Reporting the Logical DRC Violations

To report the logical DRC violations, use the `report_constraints` command. This command displays a summary of the constraint violations in the block, including the amount by which a constraint is violated, information about the design object that is the worst violator, and the weighted cost of the violation.

By default, the `report_constraints` command checks the following timing constraints:

- Minimum path delay, which includes violations of hold time on registers or ports with output delay as well as violations of the `set_min_delay` constraint setting.
- Maximum path delay, which includes violations of setup time on registers or ports with output delay as well as violations of the `set_max_delay` constraint setting.
- Maximum transition time
- Maximum capacitance
- Minimum capacitance

To restrict the report to a specific constraint, use one of the following options:

- `-min_delay` (minimum path delay)
- `-max_delay` (maximum path delay)
- `-max_transition` (maximum transition time)
- `-max_capacitance` (maximum capacitance)
- `-min_capacitance` (minimum capacitance)

By default, the report generated by the `report_constraints` command displays brief information about the worst violation for each constraint in the current block and the overall cost. To report all violations, rather than just the worst violations, use the `-all_violators` option.

The following is an example of the default output of the `report_constraints` command.

Example 7-2 Default Constraint Report

```
icc2_shell> report_constraints
*****
Report : constraint
Design : placed
.....
.....
.....
*****
```

Group (min_delay/hold)	Cost	Weight	Weighted Cost	Scenario

```

...
pci_clk                0.00      1.00      0.00  wc_scenario
FEEDTHROUGH            0.00      1.00      0.00  wc_scenario
REGIN                  0.00      1.00      0.00  wc_scenario
REGOUT                 0.00      1.00      0.00  wc_scenario
...
pci_clk                1.12      1.00      1.12  bc_scenario
FEEDTHROUGH            0.00      1.00      0.00  bc_scenario
REGIN                  0.01      1.00      0.01  bc_scenario
REGOUT                 0.00      1.00      0.00  bc_scenario
-----
min_delay/hold                                1.13

Group (max_delay/setup)    Cost      Weight      Weighted      Scenario
-----
...
pci_clk                    0.44      1.00      0.44  wc_scenario
FEEDTHROUGH                0.00      1.00      0.00  wc_scenario
REGIN                      0.00      1.00      0.00  wc_scenario
REGOUT                     0.24      1.00      0.24  wc_scenario
...
pci_clk                    0.00      1.00      0.00  bc_scenario
FEEDTHROUGH                0.00      1.00      0.00  bc_scenario
REGIN                      0.00      1.00      0.00  bc_scenario
REGOUT                     0.00      1.00      0.00  bc_scenario
-----
max_delay/setup                                0.68

Constraint                  Cost
-----
min_delay/hold              1.13  (VIOLATED)
max_delay/setup             0.68  (VIOLATED)
max_transition              417.69 (VIOLATED)
max_capacitance            189895.48 (VIOLATED)
min_capacitance            100.52  (VIOLATED)

```

1

Generating a Global Summary of Timing Violations

To generate a global summary of all timing violations in a block, use the `report_global_timing` command. The report shows the worst negative slack, the total negative slacks, and the number of violating endpoints.

The following example shows a default report:

```

icc2_shell> report_global_timing
*****
Report : global_timing
...
*****

Setup violations

```

	Total	reg->reg	in->reg	reg->out	in->out
WNS	-20.34	-20.34	0.00	-1.19	-0.98
TNS	-6887.98	-6882.84	0.00	-3.17	-1.96
NUM	398	392	0	4	2

Hold violations

	Total	reg->reg	in->reg	reg->out	in->out
WNS	-3.55	-3.55	0.00	0.00	0.00
TNS	-561.17	-561.17	0.00	0.00	0.00
NUM	418	418	0	0	0

By default, the tool analyzes both setup and hold violations of all path groups in all active corners, modes, and scenarios. You can limit the analysis by using the `-delay_type`, `-groups`, `-corner`, `-mode`, and `-scenario` options. For more information about these options and other options available for changing the granularity of the report, see the man page of the `report_global_timing` command.

Reporting the QoR

To generate a summary of the quality of results and other statistics of a block, use the `report_qor` command. It reports information about timing path group details and cell count and current block statistics, including combinational, noncombinational, and total area. The command also reports static power and design rule violations.

By default, the command reports the QoR for all active scenarios. To report the QoR for

- All scenarios associated with specific modes, use the `-modes` option.
- All scenarios associated with specific corners, use the `-corners` option.
- Specific scenarios, use the `-scenarios` option.

The following is an example of a report generated by the `report_qor` command.

Example 7-3 report_qor Report Example

```

icc2_shell> report_qor
*****
Report : qor
Design : placed
.....
*****

Information: Design Average RC value per unit length: (NEX-011)
Information: r = 1.792938 ohm/um, c = 0.079907 ff/um, cc = 0.000000
ff/um (X dir) (NEX-017)
Information: r = 1.785714 ohm/um, c = 0.093680 ff/um, cc = 0.000000
ff/um (Y dir) (NEX-017)

Scenario          'bc_scenario'
Timing Path Group 'pci_clk'
-----
Worst Hold Violation:      -0.15
Total Hold Violation:      -8.79
No. of Hold Violations:    283
-----
...

Scenario          'wc_scenario'
Timing Path Group 'pci_clk'
-----
Levels of Logic:          55
Critical Path Length:      2.79
Critical Path Slack:       0.03
Critical Path Clk Period:  3.00
Total Negative Slack:      0.00
No. of Violating Paths:    0
-----
...

Cell Count
-----
Hierarchical Cell Count:   694
Leaf Cell Count:           116919
Buf/Inv Cell Count:        17031
CT Buf/Inv Cell Count:     0
-----

```

```

Area
-----
Combinational Area:      8365846.92
Noncombinational Area:   571218.74
Net Area:                0
Net XLength:             0
Net YLength:             0
-----
Cell Area:               8937065.66
Design Area:             8937065.66
Net Length:              0
-----

Design Rules
-----
Total Number of Nets:    142890
Nets with Violations:    273
Max Trans Violations:    12
Max Cap Violations:      262
-----

```

In the Cell Count section, the report shows the number of macros in the block. To qualify as a macro cell, a cell must not be hierarchical and must have the `is_macro_cell` attribute set on its library cell.

Generating and Analyzing a QoR Snapshot

You can generate detailed information about the quality of results (QoR) for the design by using the `create_qor_snapshot` command. This command measures and reports the quality of the design in terms of timing, design rules, area, and power, and stores the quality information into a set of snapshot files.

Subsequently, you can

- Retrieve and report the QoR information of the snapshot with the `report_qor_snapshot` command
- Selectively retrieve, sort, and display the desired information from the snapshot with the `query_qor_snapshot` command
- Remove the snapshot with the `remove_qor_snapshot` command

When you create a QoR snapshot with the `create_qor_snapshot` command, you must specify a name for the snapshot by using the `-name` option. You use this name when you report, query, or remove the snapshot.

By default, the tool creates the QoR snapshot for all scenarios of the block. To create it for a specific scenario, use the `-scenarios` option, as shown in the following example:

```
icc2_shell> create_qor_snapshot -name func1 -scenarios func1
```

```

*****
Report          : create_qor_snapshot (func1)
.....
.....
.....
Time unit       : 1.00ns
Resistance unit  : 1.00MOhm
Capacitance unit: 1.00fF
Voltage unit    : 1.00V
Current unit    : 1.00uA
Power unit      : 1.00pW
Location        : /home/my_work_dir/placement_stage/snapshot
*****
No. of scenario = 1
s1 = func1

-----
WNS of each timing group:                                s1
-----
SD_DDR_CLK                1.07
SDRAM_CLK                 0.06
PCI_CLK                   -1.76
SYS_2x_CLK                0.08
v_PCI_CLK                 -0.71
SYS_CLK                   0.06
-----
Setup WNS:                -1.76
Setup TNS:                -102.47
Number of setup violations: 95
Hold WNS:                 -0.50
Hold TNS:                 -27.81
Number of hold violations: 125
Number of max trans violations: 0
Number of max cap violations: 28
Number of min pulse width violations: 0
-----
Area:                     444776.034
Cell count:               53399
Buf/inv cell count:       7182
Std cell utilization:      0.50
CPU(s):                   64
Mem(Mb):                  649
Host name:                 syn_host
-----

Histogram:              s1
-----
Max violations:          95
  above ~ -0.7    ---  40
    -0.6 ~ -0.7    ---  55
    -0.5 ~ -0.6    ---   0
    -0.4 ~ -0.5    ---   0

```

```

-0.3 ~ -0.4 --- 0
-0.2 ~ -0.3 --- 0
-0.1 ~ -0.2 --- 0
  0 ~ -0.1 --- 0
-----
Min violations:      125
-0.06 ~ above --- 0
-0.05 ~ -0.06 --- 0
-0.04 ~ -0.05 --- 0
-0.03 ~ -0.04 --- 3
-0.02 ~ -0.03 --- 4
-0.01 ~ -0.02 --- 20
  0 ~ -0.01 --- 41
-----
Snapshot (func1) is created and stored under "/home/my_work_dir/
placement_stage/snapshot" directory

```

By default, the snapshot is stored in a directory named `snapshot` in the current working directory. To specify a different location, use the `time.snapshot_storage_location` application option.

When you create, report, or query a QoR snapshot with the `create_qor_snapshot`, `report_qor_snapshot`, or `query_qor_snapshot` command, you can display the results in the GUI by using the `-display` option.

The following example analyzes a snapshot and displays the paths that have a worst negative slack between `-2.0` and `-1.0`:

```
icc2_shell> query_qor_snapshot -name func1 -display \
             -filters "-wns -2.0,-1.0"
```

The following example analyzes a snapshot and displays the paths that have more than 10 levels of logic:

```
icc2_shell> query_qor_snapshot -name func1 -display \
             -filters "-logic_level 10, "
```

Reporting the Delay of a Timing Arc

To get a detailed report about the delay calculation of a given cell or net timing arc along a timing path, use the `report_delay_calculation` command.

Use the `-from` and `-to` options to specify the “from” and “to” pins of the cell or net. These two pins can be the input and output pins of a cell to report the calculation of a cell delay, or can be the driver pin and a load pin of a net to report the calculation of a net delay.

By default, the command reports the delay calculation for the current scenario. You can specify the mode and corner to report with the `-mode` and `-corner` option, respectively, or you can specify the scenario to report by using the `-scenario` option.

The following is an example report generated by the `report_delay_calculation` command for the current scenario.

Example 7-4 Delay Calculation Report

```
icc2_shell> report_delay_calculation \
  -from u0_3/p0/mul0/m0_U1_INT_SUMR_reg_1_/CLK \
  -to u0_3/p0/mul0/m0_U1_INT_SUMR_reg_1_/QN
*****
Report : delay_calculation
Module : placed
Mode   : my_mode
Corner : wc_mode
.....
.....
*****

cap units: 1.00fF  res units: 1.00MOhm  time units: 1.00ns

Current delay calculation style: auto
Current min Elmore tau: 0.00s
Current min Arnoldi tau: 2.00ps

Cell arc:
Lib: /usr/libs/mylib.ndm:mylib_lvt
Cell: u0_3/p0/mul0/m0_U1_INT_SUMR_reg_1_ (FD1_LVT)
From-pin: CLK  To-pin: QN

Sense:  rising_edge

          Input          Output  Stored  Stored  Delay
          slew   Load   Delay   slew   delay  output slew  derate
early rise: 0.29   7.27   0.22   0.11   0.22   0.11   0.11   0.99
late rise:  0.29   7.27   0.22   0.11   0.22   0.11   0.11   1.01
early fall: 0.29   6.85   0.20   0.10   0.20   0.10   0.10   0.99
late fall:  0.29   6.85   0.20   0.10   0.20   0.10   0.10   1.01
```

1

Reporting the Clock or Data Arrival Time at Pins or Ports

To obtain the arrival time of a data signal at a pin or port on a data net, query the `arrival_window` attribute by using the `get_attribute` command as shown in the following example:

```
icc2_shell> get_attribute [get_pins U50/Y] arrival_window
{{{SYS_CLK} pos_edge {min_r_f 0.367955 0.361167} {max_r_f 0.385574
0.383949}}}
```

For the arrival window, the tool reports the clock name, the edge type that launches the path, and the minimum and maximum rise and fall arrival times at the pin. If data launched from multiple clocks arrive at a pin, the tool reports a separate arrival window for the data launched by each clock.

To obtain the arrival time of a clock signal at a pin or port on the clock network, query the `clock_arrival_window` attribute by using the `get_attribute` command as shown in the following example:

```
icc2_shell> get_attribute [get_pins CT_BUF_7/Y] clock_arrival_window
{{{SYS_CLK} pos_edge {min_r_f 1.03046 --} {max_r_f 1.03067 --}}}
```

For the clock arrival window, the tool reports the clock name, the active edge type, and the minimum and maximum rise or fall arrival times at the clock pin, based on the active edge of the clock. If multiple clocks or multiple active edges of the same clock arrive at the pin, the tool reports a separate arrival window for each clock or clock edge.

Checking the Timing Constraints and Settings

Paths that are incorrectly constrained might not appear in the violation reports, possibly causing you to overlook paths with violations. You can check for incorrectly specified or missing constraints or other timing issues by using the `check_timing` command.

[Table 7-1](#) shows a list of checks that performed by the `check_timing` command.

- To perform all the checks, use the `-all` option.
- To include specific checks, in addition to the default checks, use the `-include` option.
- To exclude specific checks, from the default checks, use the `-exclude` option.

Table 7-1 Types of Checks Performed by the `check_timing` Command

Type of Check	Default	What the tool does
<code>gated_clock</code>	Yes	Issues a warning about any gated clocks that do not reach register clock pins.

Table 7-1 *Types of Checks Performed by the check_timing Command*

Type of Check	Default	What the tool does
generated_clock	Yes	Checks the generated clock network and issues a warning for any of the following conditions: Generated clocks with no path to the master clock Generated clocks with no path to the master clock that meets the sense relationship specified Multiple generated clocks that form a loop Generated clocks that are not expanded Generated clocks that have no period specified
loops	Yes	Issues a warning if a combinational feedback loops is found.
no_clock	Yes	Issues a warning if no clocks reach a register clock pin.
no_input_delay	Yes	Issues a warning if no clock-related delay is specified for an input port.
unconstrained_endpoints	Yes	Issues a warning if register data pin or primary output is unconstrained.
clock_crossing	No	Issues a warning if a timing path crosses a clock domain.
data_check	No	Issues a warning if no clocked signal or multiple clocked signals reach the reference pin of a data check register.
multiple_clock	No	Issues an information message if multiple clocks reach a register pin.

By default, this command performs the timing checks for all active scenarios. To perform the timing checks for

- All scenarios associated with specific modes, use the `-modes` option.
- All scenarios associated with specific corners, use the `-corners` option.
- Specific scenarios, use the `-scenarios` option.

The following is an example output of the `check_timing` command.

```
icc2_shell> check_timing
Warning: The register clock pin 'F1/CLK' has no fanin clocks. (TCK-002)
Warning: The register clock pin 'F2/CLK' has no fanin clocks. (TCK-002)
Warning: The register clock pin 'F3/CLK' has no fanin clocks. (TCK-002)
```

```
Warning: The reported endpoint 'OUT' is unconstrained. Reason: 'no
check'. (TCK-001)
Warning: The reported endpoint 'F1/DATA' is unconstrained. Reason:
'unclocked'. (TCK-001)
Warning: The reported endpoint 'F2/DATA' is unconstrained. Reason:
'unclocked'. (TCK-001)
Warning: The reported endpoint 'F3/DATA' is unconstrained. Reason:
'unclocked'. (TCK-001)
```

You can also perform the timing checks by using the `check_design -checks timing` command, as shown in the following example:

```
icc2_shell> check_design -checks timing
*****
Report : check_design
Options: { timing
g }
Design : TOP
.....
*****
Running atomic-check 'timing'
*** EMS Message summary ***
-----
Rule      Type    Count Message
-----
TCK-002   Warn     3      The register clock pin '%pin' has no fanin clocks.
-----
Total 7 EMS messages : 0 errors, 3 warnings, 0 info.
-----
*** Non-EMS message summary ***
-----
Total 0 non-EMS messages : 0 errors, 0 warnings, 0 info.
-----
Info: EMS database is saved to file 'check_design.ems'
```

In addition to generating a report, the `check_design` command generates an enhanced messaging system (EMS) database that you can view by using the message browser in the IC Compiler II GUI.

Checking for Consistency in Timing Analysis or Extraction Settings

To achieve faster timing convergence, it is important to ensure that the settings used for timing analysis in the IC Compiler II and PrimeTime tools are consistent. Similarly, the settings used for extraction in the IC Compiler II and StarRC tools should also be consistent. To check for the consistency of these settings, use the `check_consistency_settings` command.

This command can help you identify the following:

- Inconsistencies in the settings for IC Compiler II and PrimeTime timing analysis.
- IC Compiler II and PrimeTime timing analysis settings that are different from the recommended settings for the respective tools.
- Inconsistencies in the settings for IC Compiler II and StarRC extraction.
- Your IC Compiler II and StarRC extraction settings that are different from the recommended settings for the respective tools

Before you run the `check_consistency_settings` command, you must specify options for consistency checking by using the `set_consistency_settings_options` command.

The following example sets up and checks the consistency between the IC Compiler and PrimeTime settings.

```
icc2_shell> set_consistency_settings_options \
    -exec_path /global/SNPS_tools -tool pt \
    -script PT_top.tcl
icc2_shell> check_consistency_settings -tool pt \
    -output icc2_pt_consistency_check.rpt
```

The following is part of the output file generated for this example:

```
Error: The timing_crpr_threshold_ps PrimeTime setting should be set to 5.
(CORR-800)
Error: The time.crpr_remove_clock_to_data_crp IC-Compile-II setting
should be set to FALSE. (CORR-812)
Error: The time.enable_si(si_enable_analysis) setting is inconsistent
between IC-Compile-II and PrimeTime. The IC-Compile-II value is true; the
PrimeTime value is false. (CORR-803)
```

The following example sets up and checks the consistency between the IC Compiler and StarRC settings.

```
icc2_shell> set_consistency_settings_options \
    -exec_path /global/SNPS_tools -tool starrc \
    -script run_starrc.tc -corner max
icc2_shell> check_consistency_settings -tool starrc \
    -output icc2_starrc_consistency_check.rpt
```

The following is part of the output file generated for this example:

```
Information: The ccap_ratio(COUPLING_REL_THRESHOLD) setting in both IC
Compiler II and StarRC are set to '0.02'; The recommendation is for both
tools to set to '0.03'. (CORR-804)
Error: The include_pin_resistance(INSTANCE_PORT) setting is inconsistent
between IC Compiler II and StarRC. The IC Compiler II value is FALSE
(SUPERCONDUCTIVE); the StarRC value is EXPLODE. (CORR-803)
Error: The temperature(OPERATING_TEMPERATURE) setting is inconsistent
between IC Compiler II and StarRC. The IC Compiler II value is 0; the
StarRC value is -30. (CORR-803)
```

```
Error: The reference_direction(REFERENCE DIRECTION) setting is
inconsistent between IC Compiler II and StarRC. The IC Compiler II value
is USE_FROM_TLUPLUS (NONE); the StarRC value is VERTICAL. (CORR-803)
Error: The virtual_shield_extraction IC Compiler II setting should be set
to FALSE. (CORR-812)
Error: The EXTRACT_VIA_CAPS StarRC setting should be set to NO.
(CORR-800)
```

Analyzing Timing Correlation Between the IC Compiler II and PrimeTime Tools

You can analyze timing correlation between the IC Compiler II and PrimeTime tools by using the `analyze_timing_correlation` command.

By default, this command performs the following steps:

1. Based on the current IC Compiler II settings, generates the files necessary for running the PrimeTime tool for each scenario of the current block.
2. Invokes the PrimeTime tool and generate the timing data corresponding to each scenario.
3. Generates the IC Compiler II timing data for each scenario.
4. Generates the timing correlation report between the two tools.

With the `analyze_timing_correlation` command, you must specify

- A working directory for correlation analysis by using the `-work_dir` option.
The working directory contains the intermediate files such as design netlist, constraints, parasitics, and Tcl scripts generated for running the PrimeTime tool, and also the timing data generated for correlation analysis.
- The path to the PrimeTime executable by using the `-pt_exec_path` option.

```
icc2_shell> analyze_timing_correlation -work_dir run_correlation \
-pt_exec_path /tools/SNPS/linux64/bin/pt_shell
```

The following is an example of a correlation report generated by this command:

Correlation Metric: slack

Correlation Metric	Value
All Endpoints	99.952% at 3.00% Threshold
Violating Endpoints	99.306% at 3.00% Threshold
Absolute Slack Difference on Average	2.664 ps
Absolute Slack Difference Standard Deviation	4.253 ps

Context	WNS	TNS	NVE	Unique	NVE
PT	-0.058	-1.476	132		39
ICC2	-0.039	-0.997	105		12
Difference	-0.019	-0.480	27		27

This report shows

- The percentage of timing endpoints that correlate within a specified threshold, which defaults to 3 percent. You can change this threshold by using the `-pass_rate_threshold` option.
- The percentage of violating timing endpoints that correlate within the specified threshold.
- The average and standard deviation of the absolute difference between IC Compiler II and PrimeTime slack for all endpoints.
- The worst negative slack (WNS), total negative slack (TNS), number of violating endpoints (NVE), and the unique number of violating endpoints for the both tools and the difference.

