
BLACKOUT DRIVE LIGHT REPLACEMENT

0021 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool Kit, General Mechanic’s (Item 10, WP 0032 00)

Materials/Parts

Locknut

References

WP 0011 00

Equipment Conditions

Vehicle parked on level ground (TM 9-2320-364-10)


Parking/Emergency Brake applied (TM 9-2320-364-10)

Engine off (TM 9-2320-364-10)

Disconnect battery cables (TM 9-2320-364-20)

BLACKOUT DRIVE LIGHT REPLACEMENT - CONTINUED**0021 00****REMOVAL**

1. Disconnect blackout drive electrical connector (4).
2. Remove locknut (5), washer (6), bolt (3), washer (2), and blackout drive light (1) from bracket (7). Discard locknut.

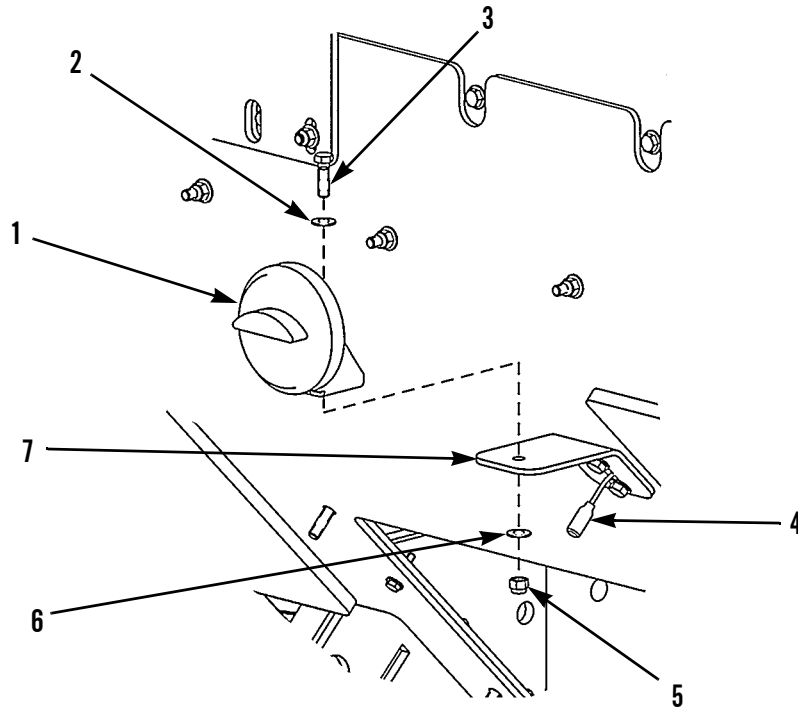

417-136

CLEANING AND INSPECTION

Clean and inspect all parts IAW *General Maintenance Instructions* (WP 0011 00).

INSTALLATION

1. Install blackout drive light (1), washer (2), bolt (3), washer (6), and new locknut (5) on bracket (7).
2. Connect blackout drive electrical connector (4).
3. Connect battery cables (TM 9-2320-364-20).
4. Check operation of blackout drive light (TM 9-2320-364-10).

END OF WORK PACKAGE