

DOOR HANDLE ASSEMBLY REPLACEMENT

0012 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

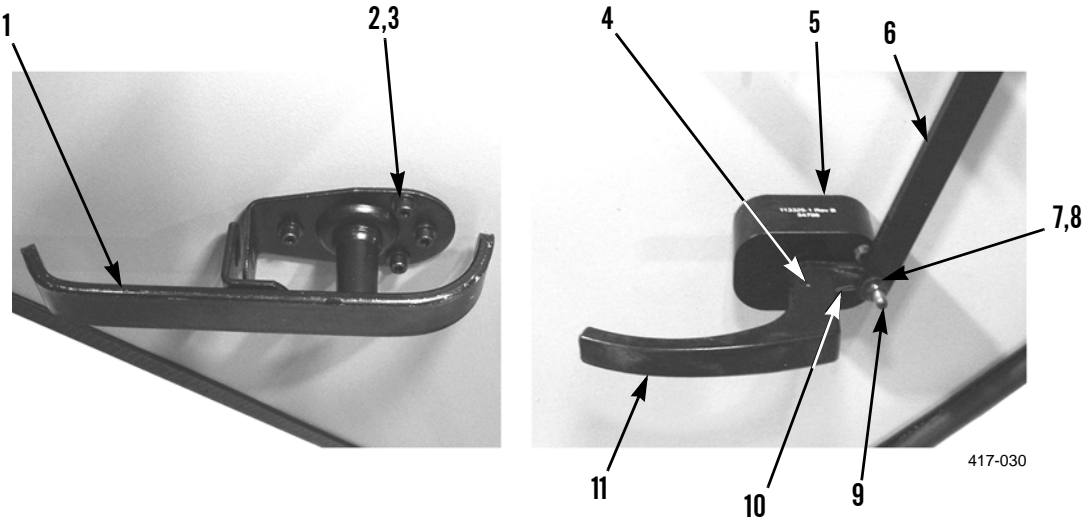
Maintenance Level	References
Unit	WP 0002 00
Tools and Special Tools	WP 0011 00
Tool Kit, General Mechanic's (Item 10, WP 0032 00)	WP 0015 01
Materials/Parts	Equipment Conditions
Rag, Wiping (Item 7, WP 0033 00)	Vehicle parked on level ground (TM 9-2320-364-10)
Locknut	Parking/Emergency Brake applied (TM 9-2320-364-10)
	Engine off (TM 9-2320-364-10)
	If equipped, Battery Disconnect Switch in OFF position (TM 9-2320-364-10)

NOTE

- The following procedure is for left door handle assembly. Use same procedure for right door handle assembly.
- If vehicle is equipped with an applique kit (WP 0002 00), a spacer block is installed between the door applique and door armor. Refer to Door Applique Replacement (WP 0015 01).

DOOR HANDLE ASSEMBLY REPLACEMENT - CONTINUED**0012 00****REMOVAL**

1. Open door assembly.
2. Remove locknut (7) and washer (8) from door cam (10) and position link rod (6) aside. Discard locknut.
3. Loosen setscrew (4) and remove interior grab handle (11), door cam (10), and bolt (9).
4. Remove four capscrews (2), washers (3), interior handle spacer (5), and exterior door handle (1).

**CLEANING AND INSPECTION**

Clean and inspect all parts IAW *General Maintenance Instructions* (WP 0011 00).

INSTALLATION

1. Position interior handle spacer (5) and exterior handle (1) on door assembly.
2. Install four washers (3) and capscrews (2) on exterior handle (1).
3. Install bolt (9) on door cam (10).
4. Install door cam (10) and interior grab handle (11). Tighten setscrew (4).
5. Position link rod (6) on bolt (9) and install washer (8) and new locknut (7).
6. Operate door handle to verify correct operation.

END OF WORK PACKAGE