


DESCRIPTION AND USE OF OPERATOR CONTROLS

0004 00

GENERAL

1. This work package describes all operator controls for the Crew Protection Kit.
2. Do not attempt to operate the PLS with Crew Protection Kit installed until becoming familiar with the location and function of all armor kit controls.

OPERATOR CONTROLS

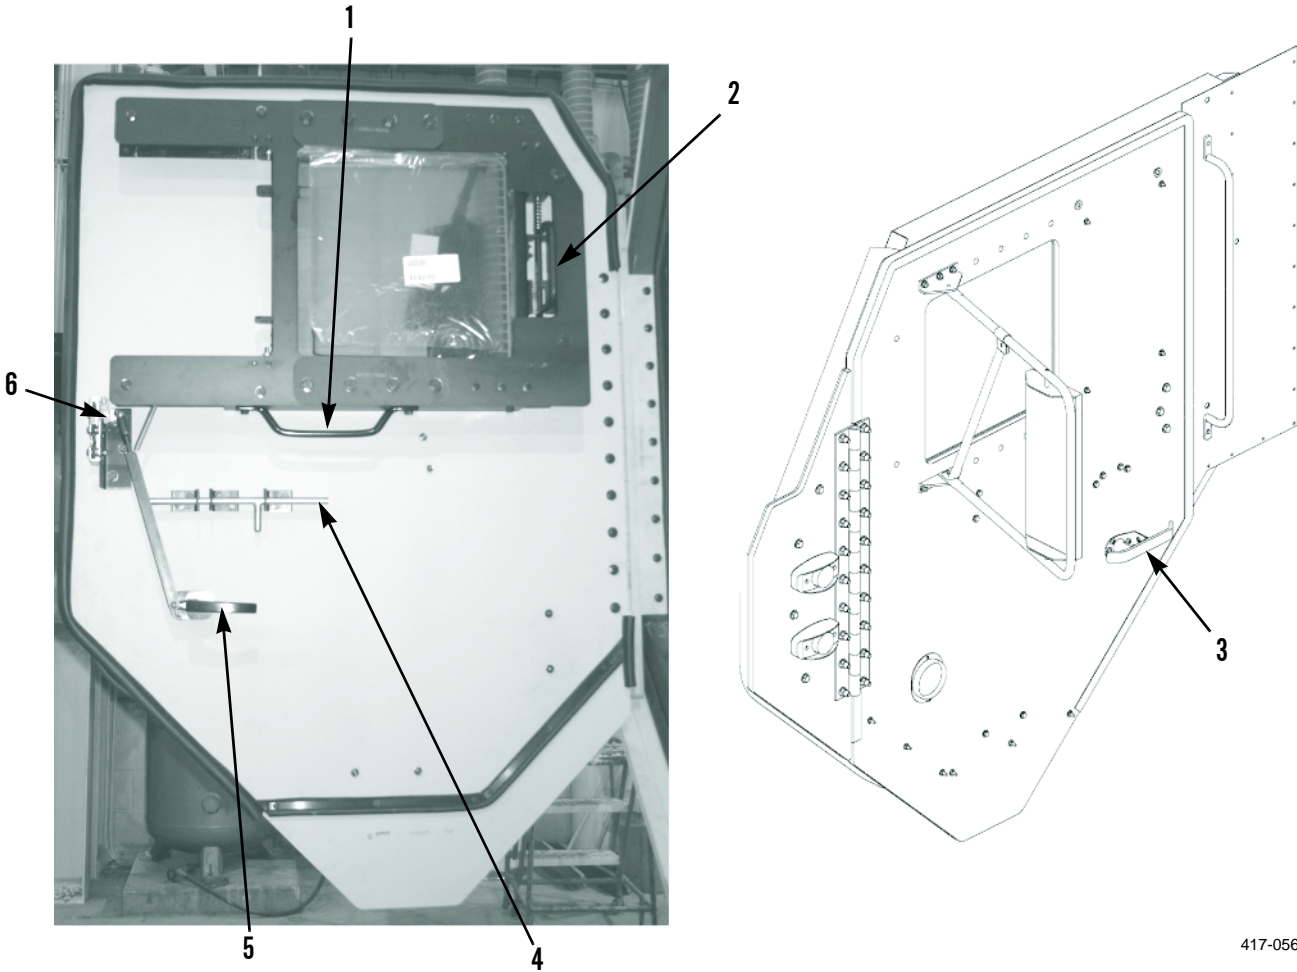


417-056

KEY	CONTROL OR INDICATOR	FUNCTION
1	Interior Door Grab Handle	Provides handle for closing door.
2	Window Opening Handle	Lift up on handle and slide window to the rear to open window.
3	Exterior Door Handle	Allows door to be opened from the outside.
4	Lock Pin	Slide rod rearward to lock side door. Slide rod forward to unlock side door.
5	Interior Door Handle	Allows door to be opened from the inside.
6	Latch	Secures side door closed.

DESCRIPTION AND USE OF OPERATOR CONTROLS - CONTINUED

0004 00

OPERATOR CONTROLS - CONTINUED

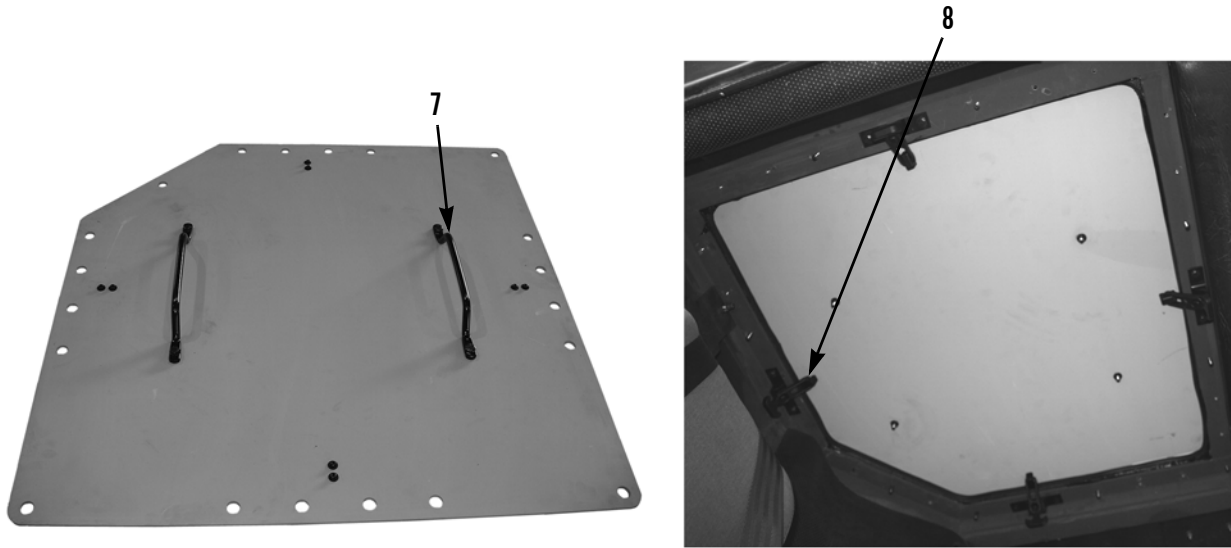

417-057

KEY	CONTROL OR INDICATOR	FUNCTION
7	Grab Handle	Use two grab handles to install escape hatch from the outside.
8	Draw Latch T-handle	In an emergency, pull on T-handle to unlatch each of four latches, then push out on escape hatch to exit vehicle through roof.

END OF WORK PACKAGE