
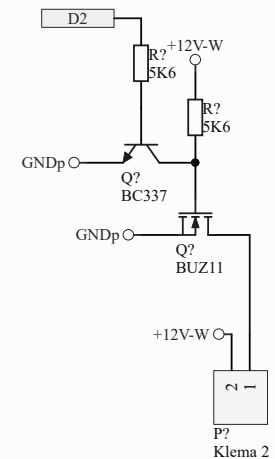
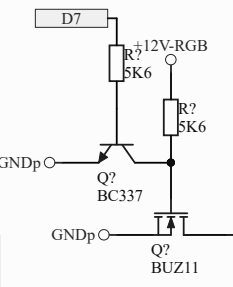
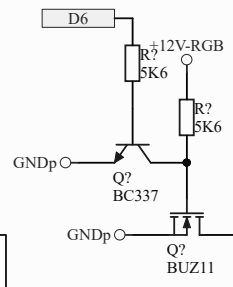
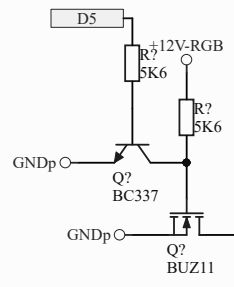

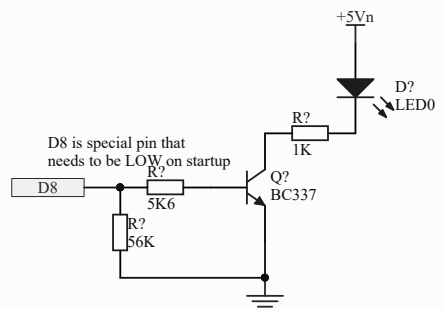
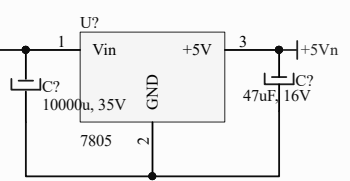
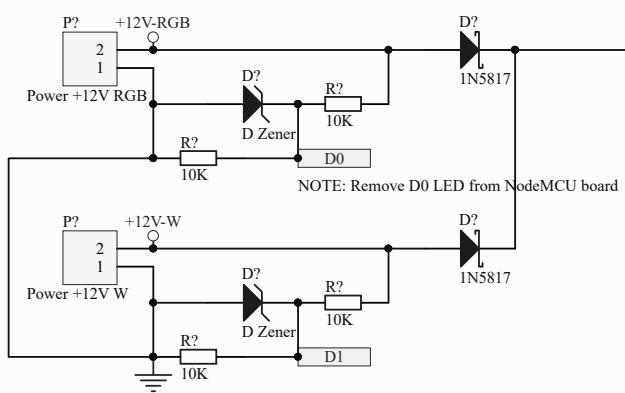


D3 and D4 are special pins that needs to be LOW on startup

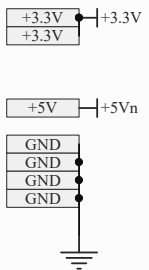

RGB & W LED Controller