


SAM

(Schedulable Autonomous Mower)

User Manual

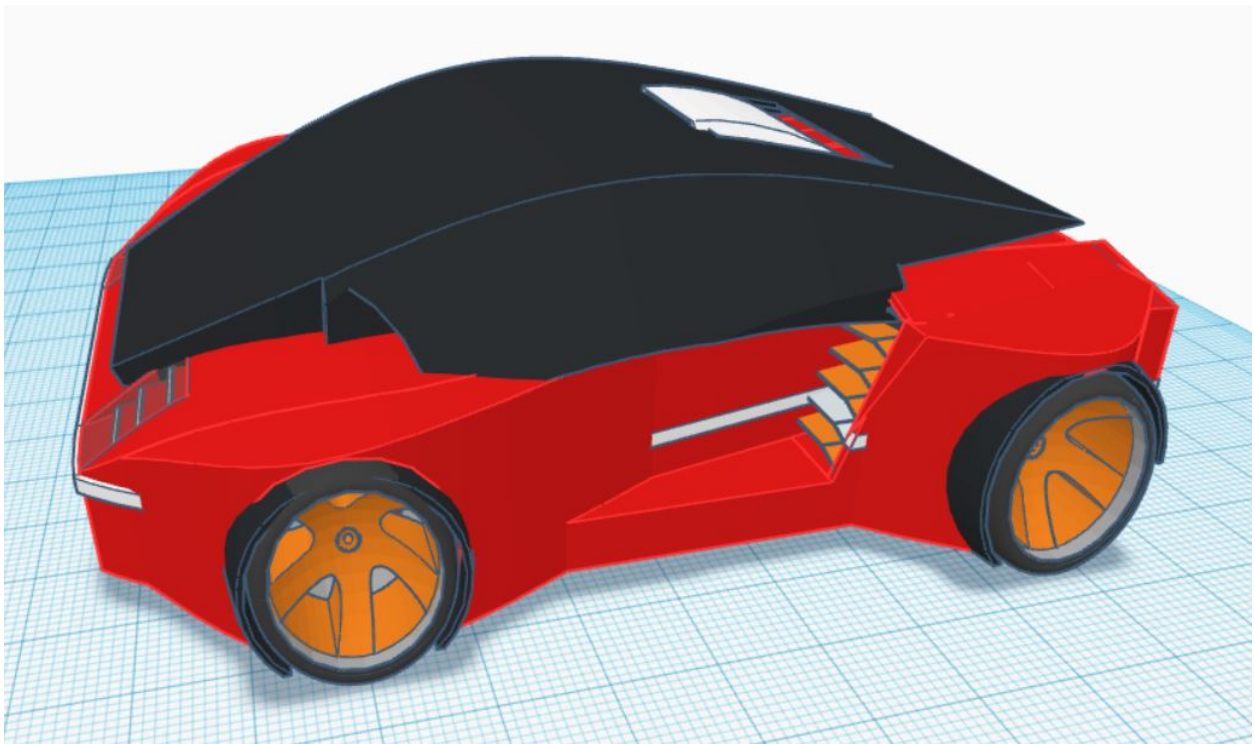

Please read all instructions carefully to familiarize yourself with your new mower robot before using.

Save these instructions for further reference.

Contents

- [Important Safegaurds](#)
- [Features](#)
- [Instructions](#)
- [Replacing batteries](#)
- [Points to be noted](#)

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic safety precautions should always be followed, including the following:

1. This appliance can be used by children from aged 14 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
3. Any servicing or repair must be performed by an authorized service representative.
4. Do not use outdoors or in damp areas
5. The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance
6. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands.
7. Do not put your hands in the water. Do not take into bathroom
8. Do not drop or insert any object into any opening.
9. Use this appliance only for its intended purpose.
10. Exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with local legal regulations. Do not throw into fire where heat could cause them to rupture.

Features:

Features on web browser:

There are 4 buttons available on the web browser. You can check time, date, mowing status and battery bar on web browser.

To schedule mowing, select time (Start and Stop) from the available fields and then click on 'Schedule Mowing' button. Please fill in both start and stop times before clicking on 'Schedule Mowing' button.

Click on 'Stop' for Emergency Stop.





Weather Status shows the live local weather status.

Battery bar is present as well.

Animations will show current status of the Robot.


Mower Console:

10:40



Robot Lawn Mower Web Console

Weather Status : Clouds



Start at (hour/minute) :

Stop at (hour/minute) :

Enable:

Battery Level :

Wednesday, July 07, 2021

22 : 40 : 32 PM

[en|de](#)

Instructions:

Step 1:

Make sure the Wi-Fi is on. Check if the robot is connected to Wi-Fi.

If robot is not connected to Wi-Fi, then turn off the robot and turn it back on. It can be verified that it is connected to WiFi only if the WebServer can be accessed on IP address mentioned by the Personnel.

Step 2:

Define the start and stop timings of Mowing and press Update.

Replacing batteries:

- Fully charged 4 AA 1.5V batteries can last 70 minutes of mowing.
- A mowing area of 4m x 5m area can be mowed in 50 hour.
- When you want change batteries, turn off the robot and switch them.

Points to be noted:

- If robot is currently performing scheduled mowing task and Emergency stop button is pressed then current mowing schedule will be lost.
- Only a single schedule can be added.
- Make sure that there are no obstacles on or near the boundary of mowing arena. Robot is not designed to detect and avoid obstacles while following boundary to reach charging station.
- When the robot reaches charging station, it has to be rescheduled.
- Make sure water is not spilled on the robot.