


Inspection

1. The oil pump rotor and oil pump teeth are not abnormally worn.


Install

1. Inject an appropriate amount of oil into the rotor of the oil pump, place the oil pump gasket at the corresponding position of the oil pump, then place the oil pump at the corresponding position of the right crankcase, take 2 m5×15-5 # inner hexagonal cylindrical screws and apply an appropriate amount of thread glue, after screwing in, tighten with a fixed torque, torque: 5±1N.m.

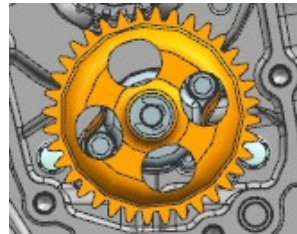

Oil filter

System components

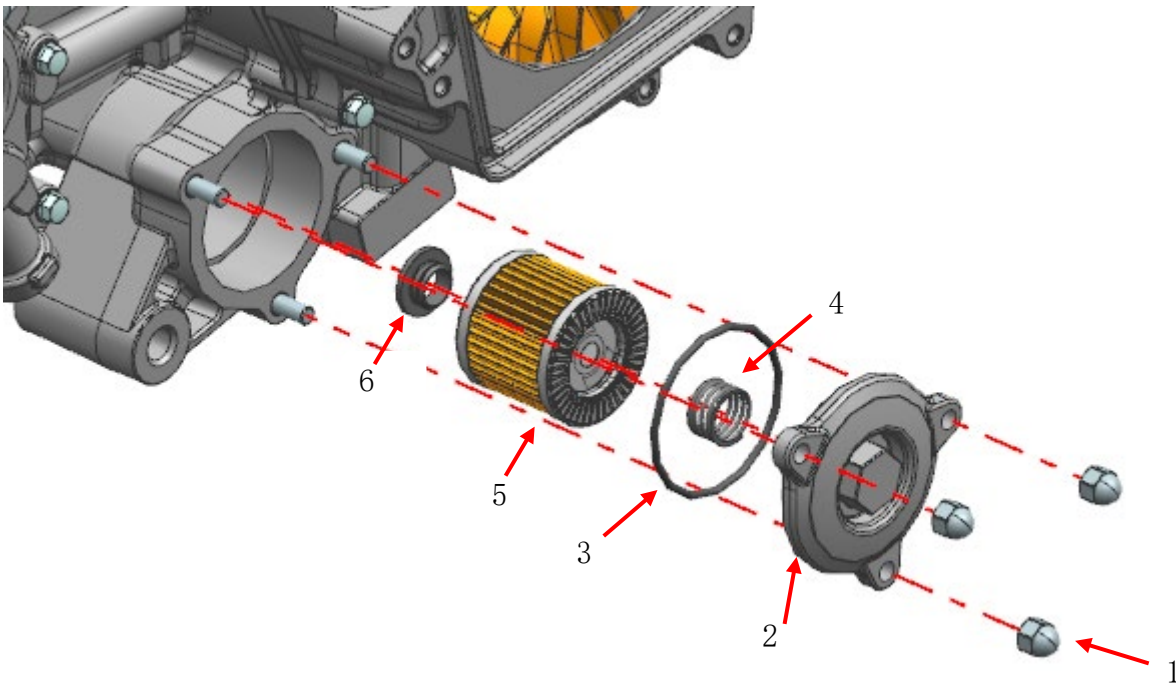

No.	Material name	Quantity	Remark
1	Non-standard cap-shaped 9-grade nut m6×13 (zinc)	3	T-sleeve-10#, constant torque: 10±1N.m
2	ZT1P58MJ oil filter cover (ceramic)	1	
3	Φ51 ×φ2.65 hydrogenated nitrile rubber O-ring	1	