

## 2-3 Accumulator Piston


### 72871-01

1 Accumulator Piston

Also Available

### 72872-01

1, 3-4 Accumulator Piston

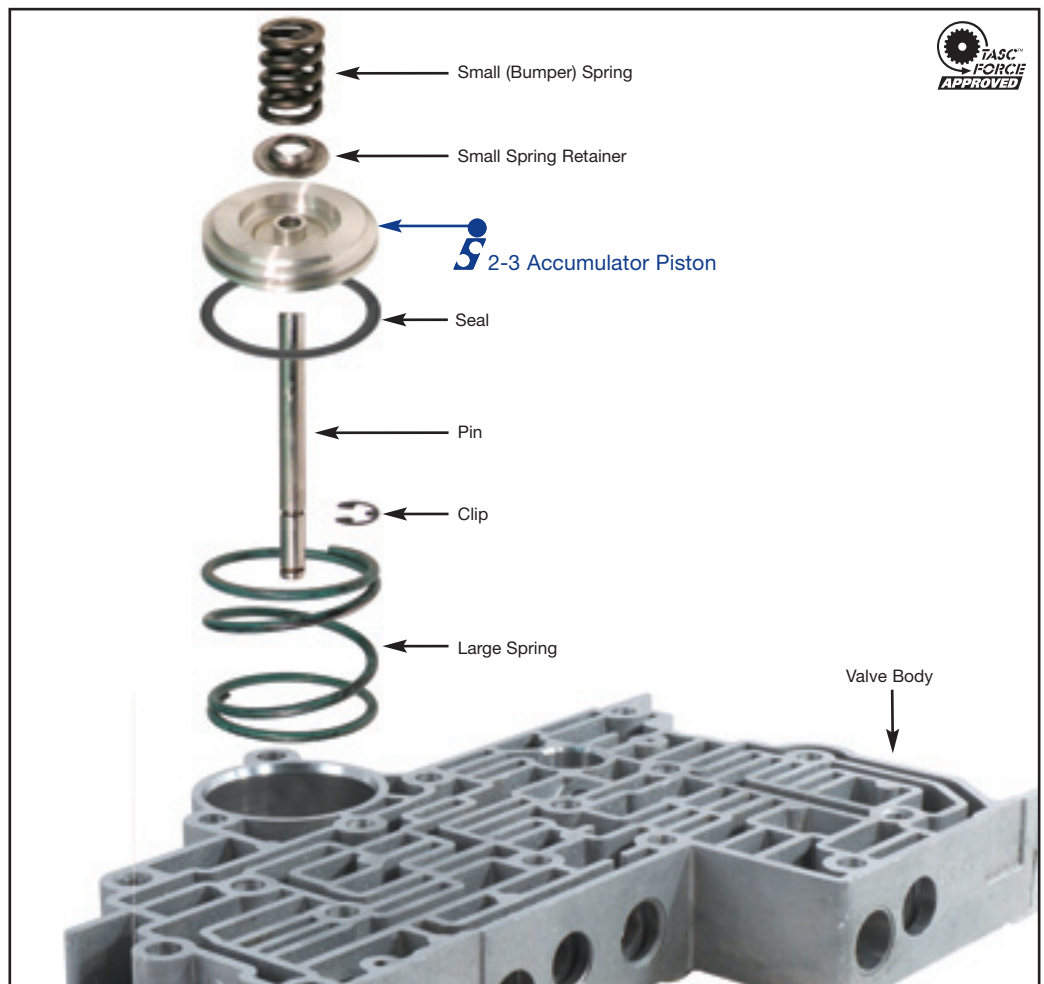

### INSTALLATION:

#### NOTES:

- This piston should not be used in a first-design 2-3 accumulator found in 1993 models. These units do NOT have the second “bumper spring” on the top portion of the accumulator piston.
- If the large spring is broken, replace with GM part number 8684827

1. Bend the tip of a small screwdriver as shown in figure at right.
2. Use the screwdriver to pry off the small spring.
3. Pry off the small spring retainer, using the bent screwdriver.
4. Check the small spring retainer for flatness.
5. Place the small spring retainer onto replacement piston and stake in place.
6. Twist and push the small spring onto the small spring retainer.
7. Install new replacement seal (not supplied).
8. Install the replacement 2-3 accumulator piston into the housing.

