

Part No.

96003-01

Forward Planetary Bearing

Part No.

96003-MTL

Installation Tool




Installation Tool



Forward Planetary
Bearing



Forward Planetary

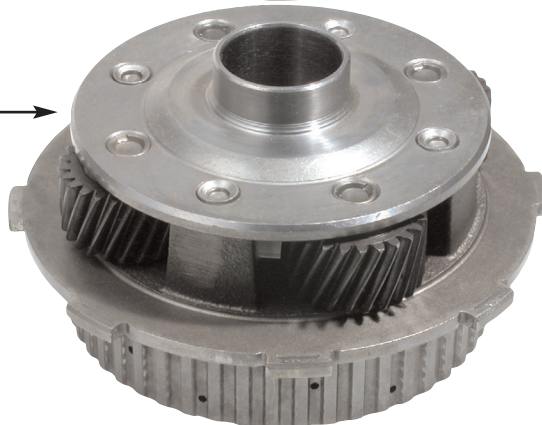

INSTALLATION INSTRUCTIONS

- 1 Use a suitable driver to remove the old bushing. Do not try to remove with a chisel.
2. Place bearing on installation tool and press into bore until tool stops against planet carrier.
3. Verify correct depth and that lube holes are not blocked by bearing.