


## Turbine Shaft Stator Bushings

### 46000-01K

2 Turbine Shaft Stator Bushings

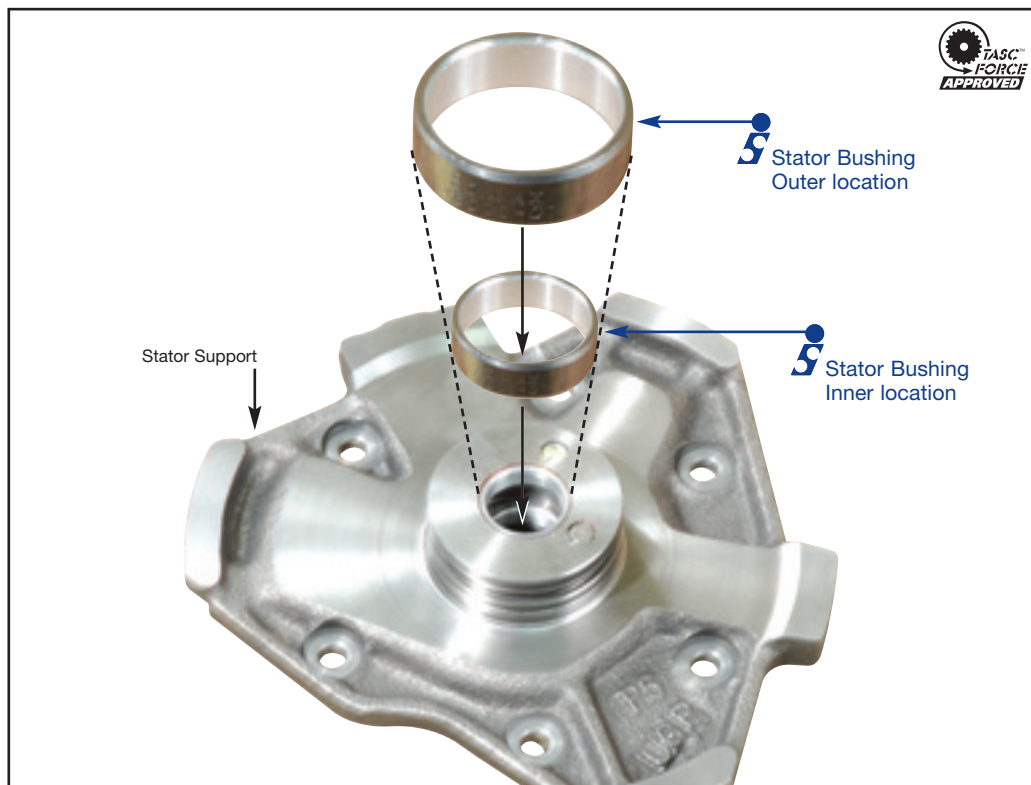

### Installation Instructions

1. Note OEM bushing depth.
2. Remove worn bushings from pump stator.
3. Install bushings, starting with inner bushing first.
4. Depth of bushing should be approximately .015" below the chamfer of the bore

