


TCC Control Plunger Valve Assembly


122892-01K

1 Control Plunger Valve
1 Plunger Valve Sleeve

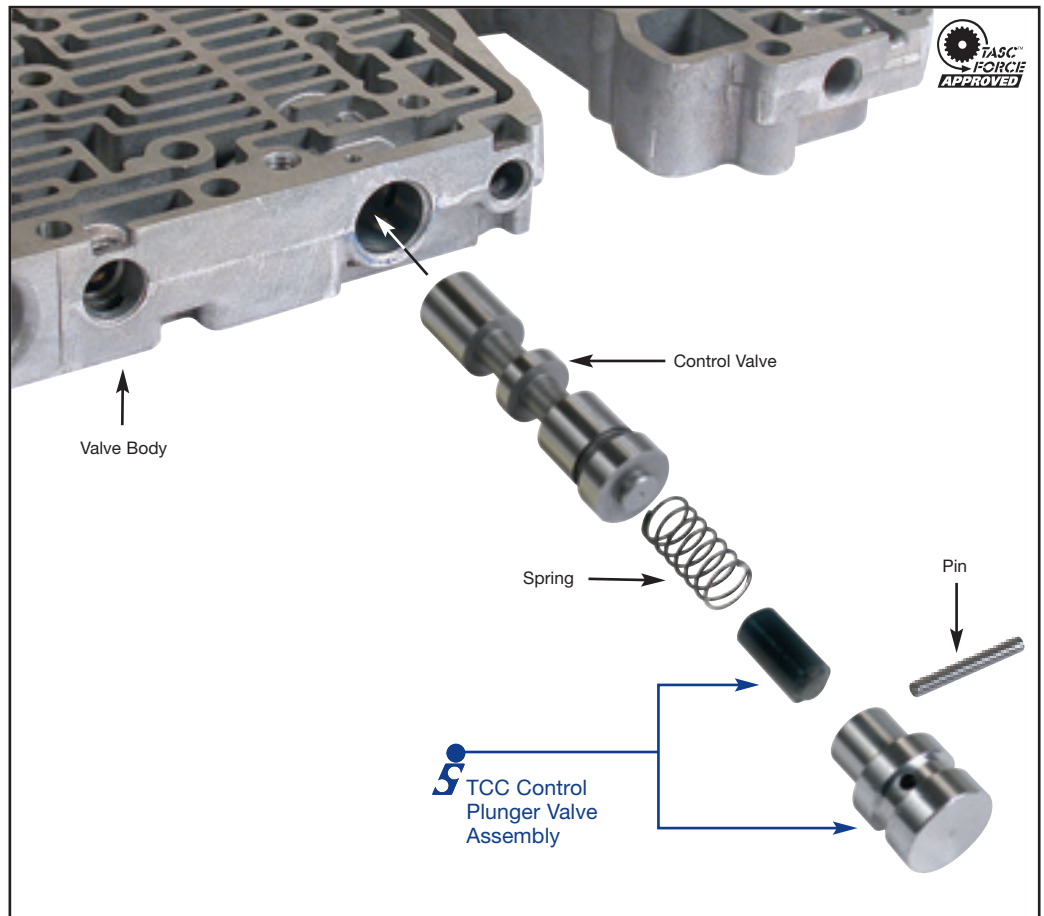

INSPECTION

Place ATF into the indicated apply port and follow with low air pressure (see Figure 1). Leakage at the plunger valve sleeve end and out the exhaust port on the reverse side of the valve body indicates excessive wear.

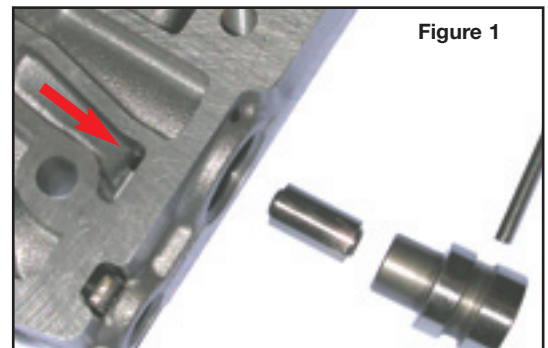

INSTALLATION

1. Remove the worn TCC control plunger valve and sleeve assembly from the valve body and discard.
2. Insert the replacement plunger valve and sleeve assembly into the valve body, open end inward.
3. Push into the bore just far enough to accept the OEM retaining pin.