


Buje de bomba con medidas precisas

Part No. 12502-01

5 Bujes de bomba de frente

BUJE DE BOMBA CON MEDIDAS PRECISAS

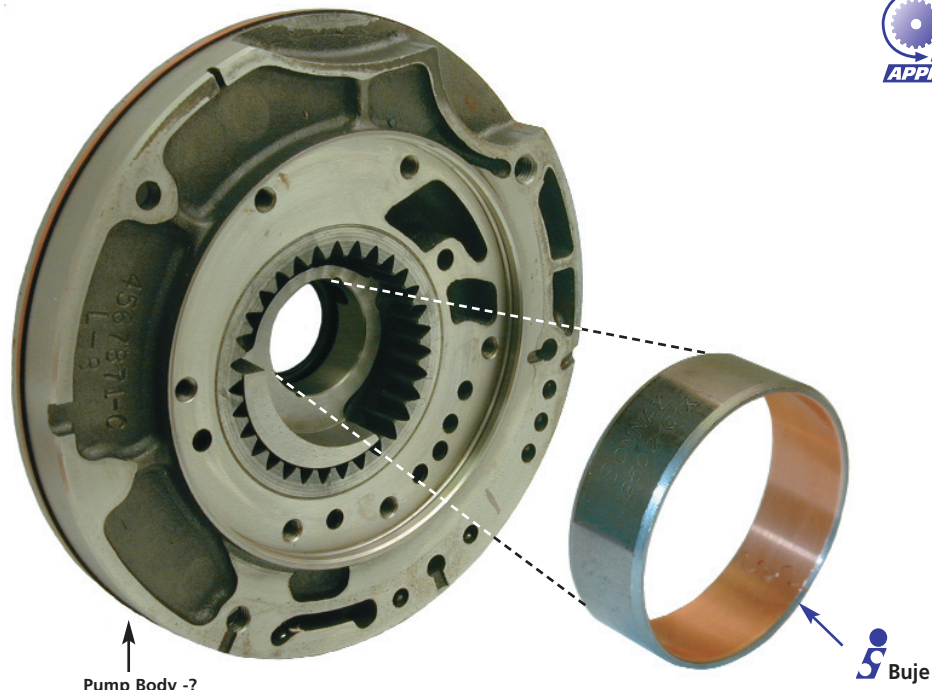

INSTALLATION INSTRUCTIONS

Remove the worn bushing from the pump housing using an appropriate bushing driver. Inspect the pump housing bore for any damage. Also inspect the torque converter hub for signs of wear. The hub diameter should be no less than 1.497". Press in the Sonnax replacement bushing, again using the correct size bushing driver. Stake the bushing in place at the two notch locations. Be careful not to raise the surface of the I.D. of the bushing.

