

## Differential Lube Tube Retainer

### 84532-01K


Differential Lube Tube Retainer

1 Top Clamp

1 Bottom Clamp

1 Bolt

**Note:** Patent pending

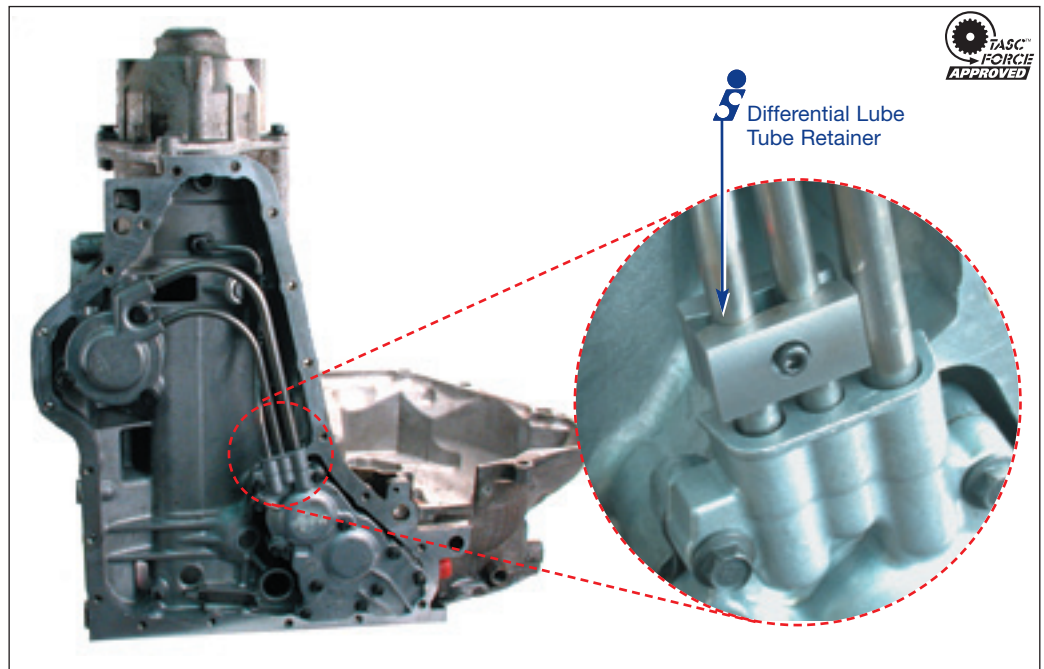

### Instructions

1. Place the threaded half of the lube tube retainer between the tubes and the case.
2. Place the other half of the lube tube retainer over the tubes.
3. Apply a small amount of Loctite® 242 (blue) on the socket head cap screw provided.
4. Bolt the two halves together.
5. Reinstall the oil pan.