

Bypass Clutch Control Sleeve & Plunger Valve


96201-06K

1 Bypass Sleeve
1 Bypass Plunger Valve

Also Available:

96201-01K

Boost Valve and Sleeve Kit

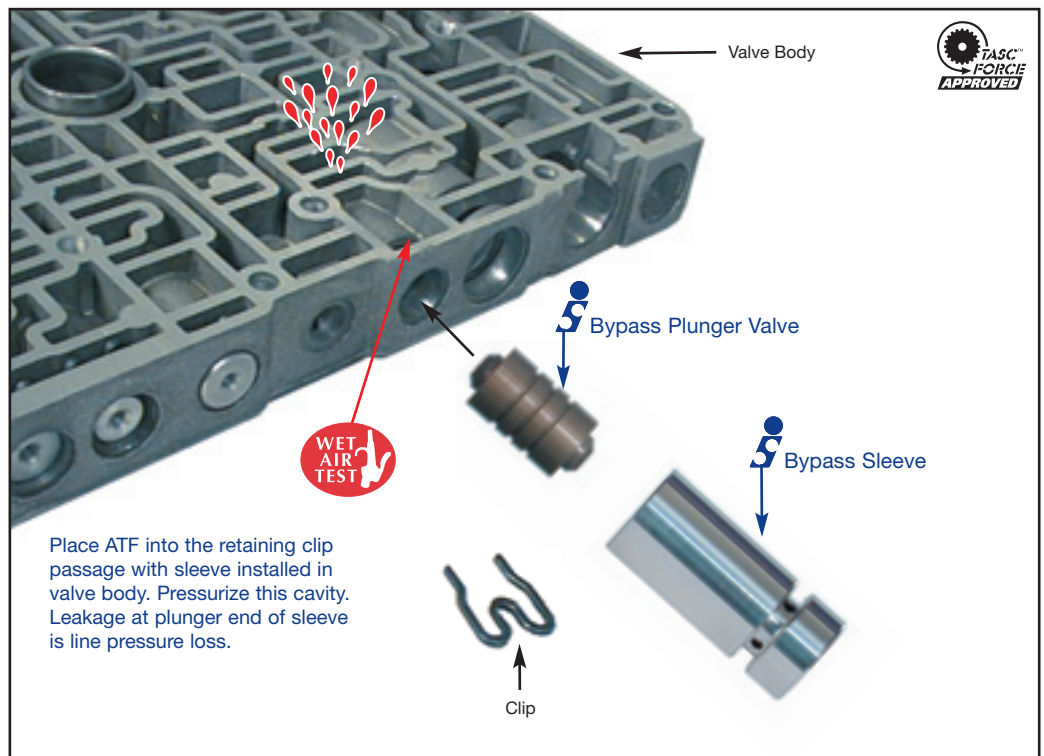

Instructions

1. Remove the worn bypass clutch control sleeve and plunger valve assembly from the valve body.
2. Discard the sleeve and valve.
3. Place the Sonnax replacement plunger valve into the replacement sleeve. Insert this sleeve and valve assembly into the valve body bore, with the open end of the sleeve first.
4. Press into the bore just far enough to accept the retaining clip.

