


Servo Tube Bracket

96806

1 Servo Tube Bracket

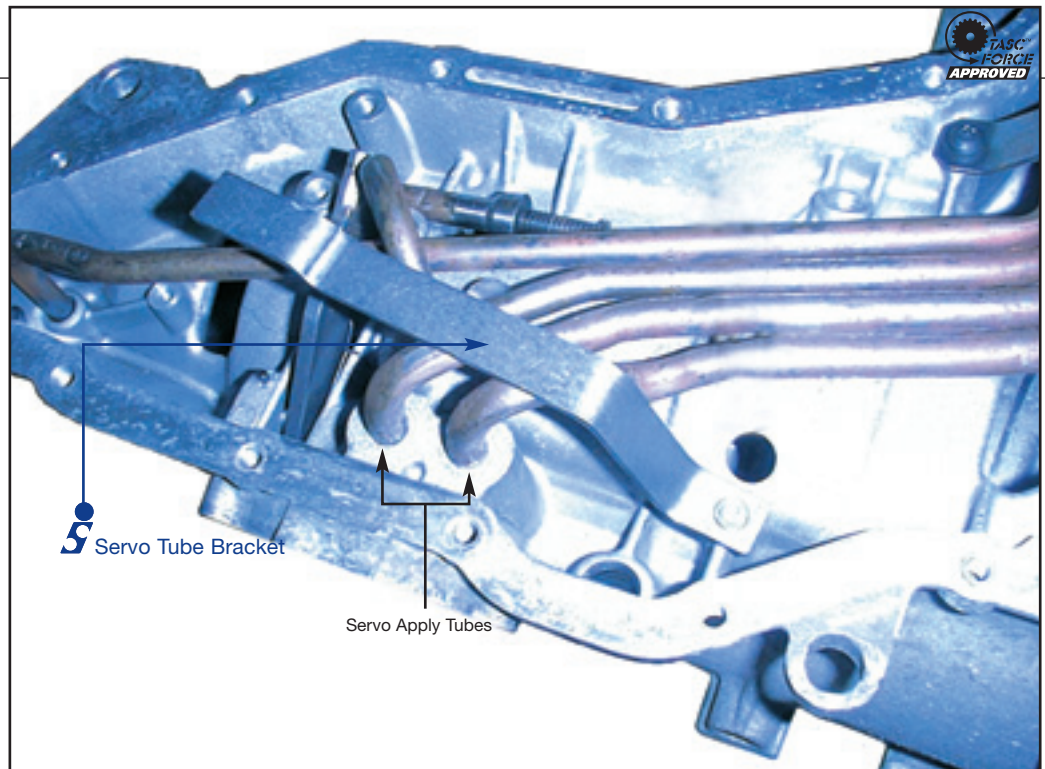

Installation Instructions

1. Remove filter bracket mounting screw.
2. Place tube support bracket over filter bracket and replace screw.
3. Align tube support bracket with tubes and tighten mounting screw.
4. Confirm that the bracket contacts servo tubes and bottom of pan, but does not interfere with the mounting of pan or oil filter.