


## Boost Valve Spring Retainer

### Boost Valve Spring Retainer

**22990-01**

5 Retainers

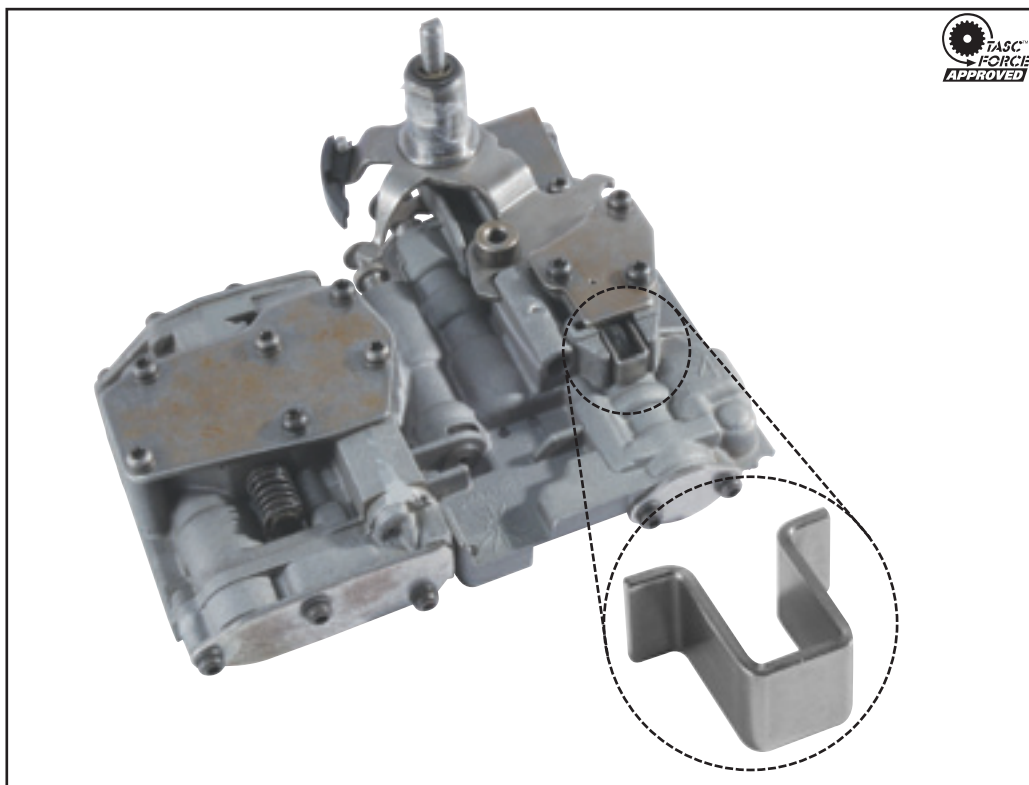

#### Disassembly/Installation

1. Remove cover plate and the original retainer, spring and valve.
2. Inspect spring and valve for damage.
3. Reinstall valve, spring, new retainer and cover plate.