


## Torque Converter Limit Spring

### 44912-02

5 Springs

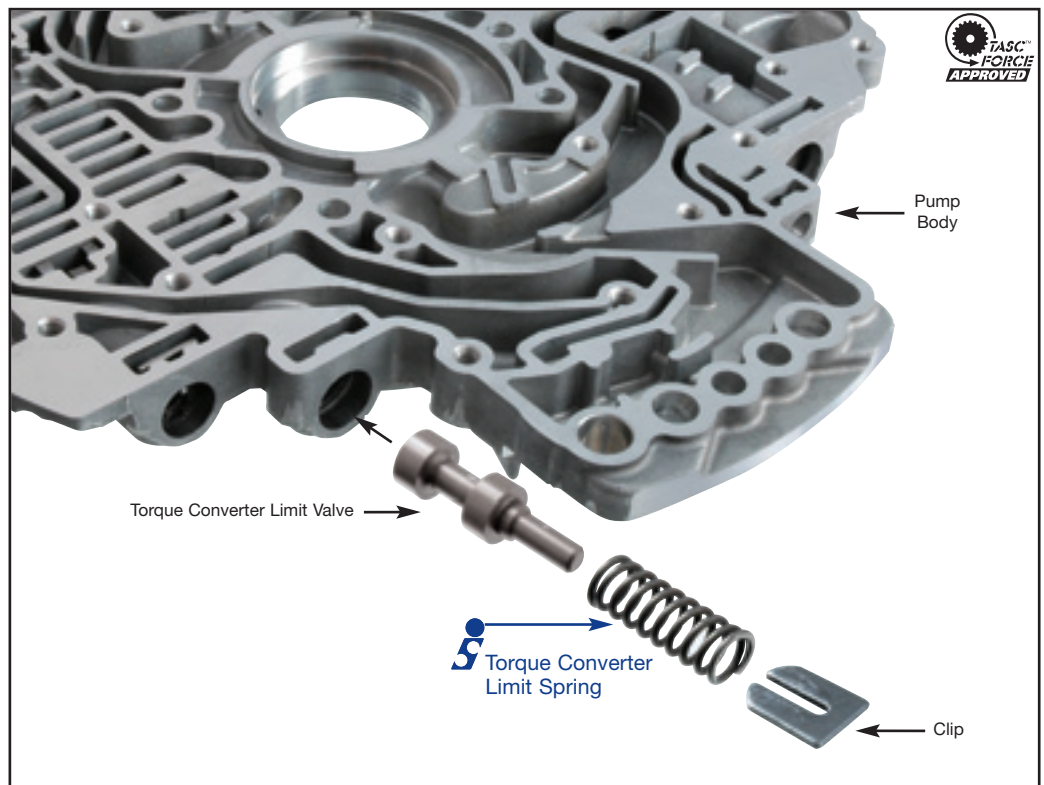

### INSTALLATION:

1. Remove OEM spring, ensuring all broken spring parts are removed.
2. Inspect the bore and TCC for wear or damage.
3. Install replacement spring, using photo as reference for correct part orientation.