

Boost Valve & Sleeve Kits


89010-01K

1 Small-Ratio Boost Sleeve
1 Small-Ratio Boost Valve

89010-02K

1 Large-Ratio Boost Sleeve
1 Large-Ratio Boost Valve

NOTE *Note: The application is meant as a guide only. Be sure to measure original valve and compare dimensions before purchasing.*

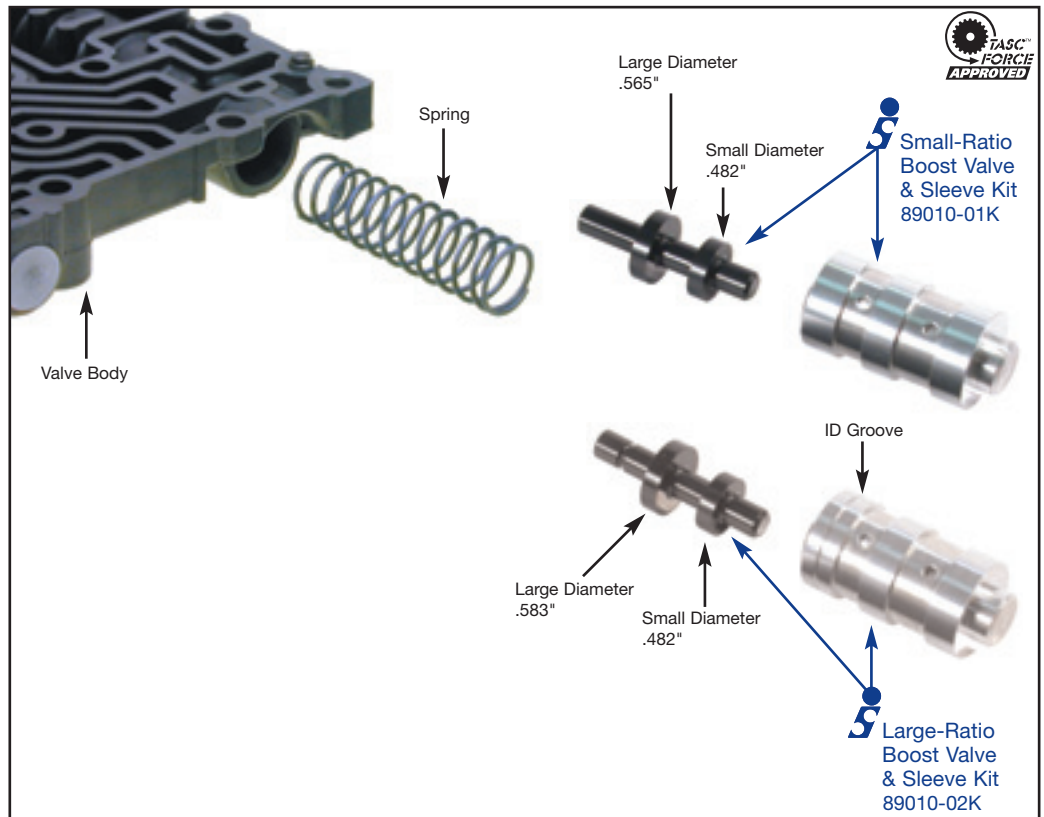

Installation Instructions

1. Identify the transmission valve body to ensure proper valve is installed.
2. Remove the OE boost sleeve, boost valve and spring.
3. Save the spring for reinstallation with the new boost valve and sleeve assembly.
4. Verify the existing boost valve and sleeve ratio by measuring the valve's small and large spool diameters.
5. Refer to the Sonnax announcement to identify the boost sleeve ratio.
6. Inspect the valve body bore for any contamination and clean if necessary.
7. Install the OE spring and the correct Sonnax replacement boost valve and sleeve assembly.

IDENTIFICATION CHART

PART NUMBER	SMALL DIA.	LARGE DIA.	RATIO	GROOVE
89010-01K	.482"	.565"	small	no
89010-02K	.482"	.583"	large	yes