

Split Ring Retainer


100420-01K

230 Series with
1.180" Diameter Shaft

100420-02K

230 and 240 Series with
1.375" Diameter Shaft

Each kit includes the following:
1 Split Ring Retainer

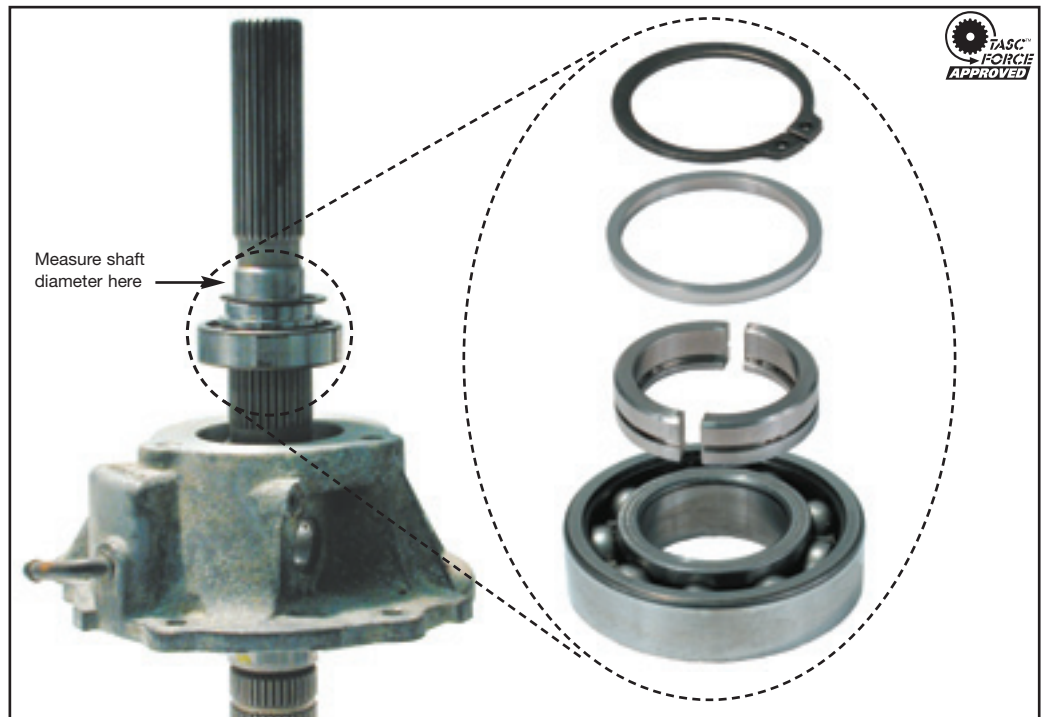

Instructions:

1. Remove OEM retaining ring.
2. Place the two halves of the split ring retainer around the output shaft.
Note: The end of the retainer with the chamfer on the O.D. should face away from the bearing.
3. Place the solid retaining ring over the split retainer. Slide it over the split retainer until it is in contact with the bearing.
4. Install the snap ring into the groove on the split ring retainer. This will keep the assembly together.