

Axle/Side Leak Repair Plate

84995-01


1 Leak Repair Plate

Note: For use with stamped steel side cover.

Also Available:

84573-01K

Accumulator Pin Kit

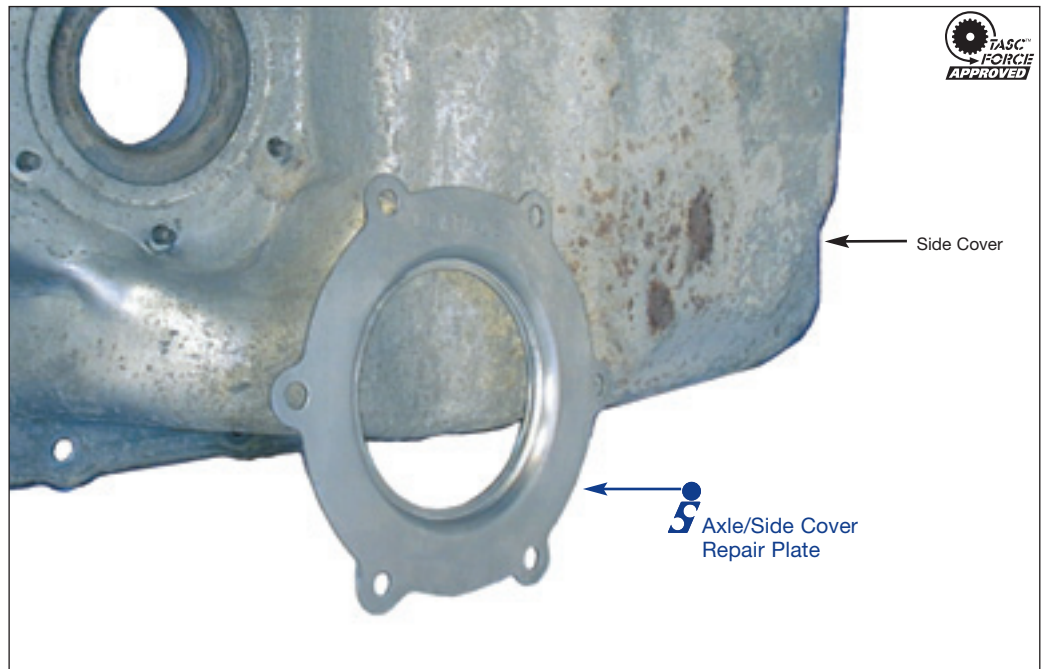

Installation instructions

1. Remove the left axle.
2. Remove the six side pan nuts and washers. Discard the six washers (plate thickness eliminates the need for washers).
3. Clean the exposed channel plate area and side cover pan surfaces thoroughly.
4. Apply RTV silicone on the flat surfaces on the transmission side of the repair plate. Also apply silicone to the channel plate surface and side pan surface where the repair plate will touch.
5. Install the leak repair plate over the six threaded studs on the channel plate. Reinstall the six nuts to the studs and torque 6 to 10 ft. lbs.
6. Reinstall the left axle.