


4R/5R44E, 4R/5R55E

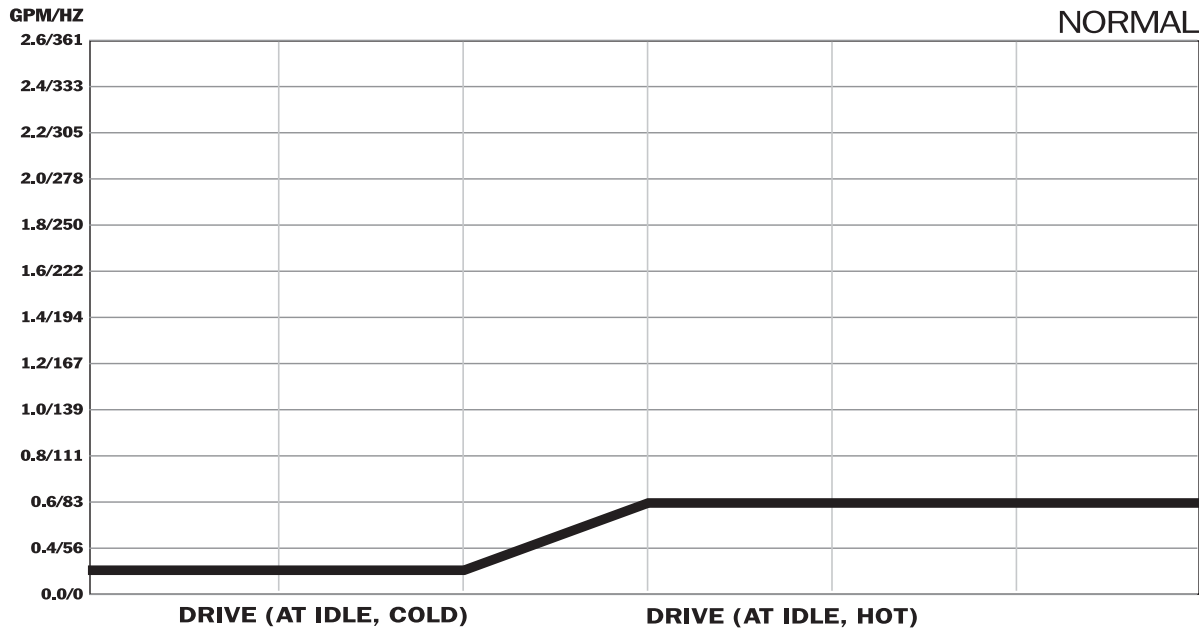

Condition: Cooler flow when cold at start.

Correction: None. This is normal. Thermostatic control valve opens when warmed.