


Anti-Shudder Spring

56995A

2 Springs

Note: This is a shudder related to the converter clutch shift valve, not the shuttle valve.

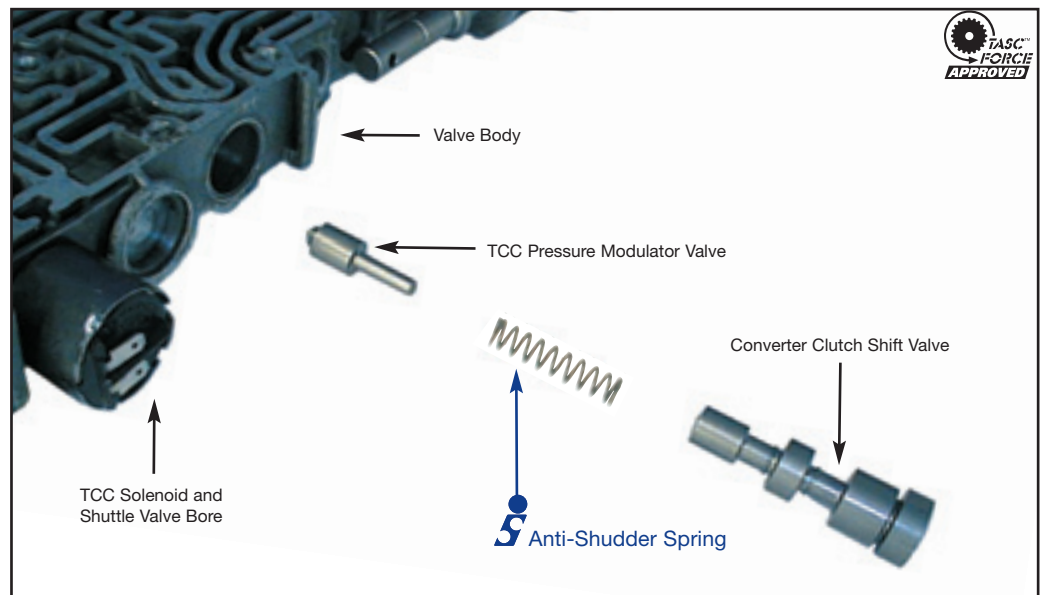

Installation Instructions

1. Remove the OEM 4-3 torque demand valve, converter clutch shift valve and converter clutch valve spring from A4LD valve body.
2. Replace OEM spring with **56995A**, a stiffer replacement converter clutch valve spring.
3. Return valves to valve body, ensuring they are in their original locations and orientations.