


## TCC Accumulator Springs

### 44912-01

5 Springs

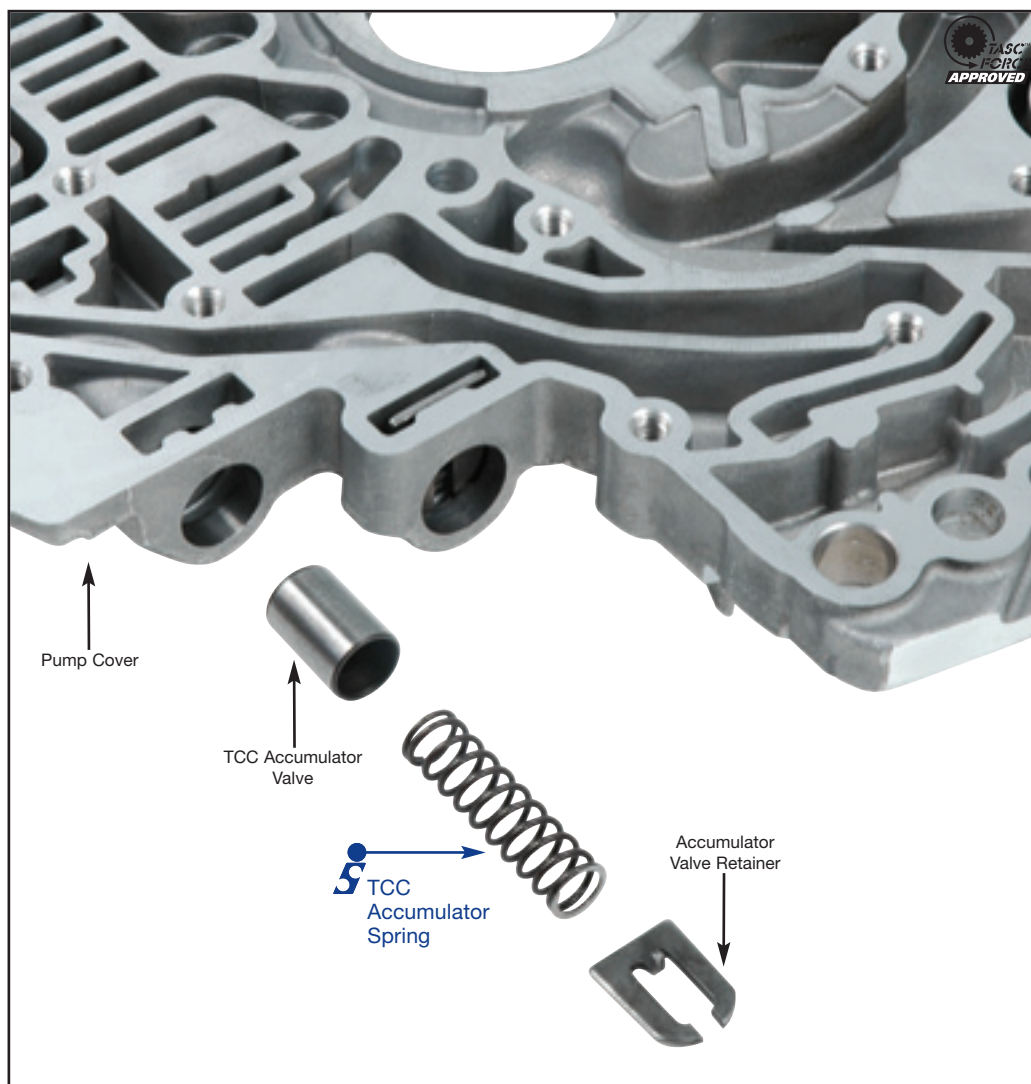

### INSTALLATION

1. Remove the OEM spring. Make sure to remove all pieces of a broken spring.
2. Inspect the valve and bore for wear or damage from broken spring.
3. Install the Sonnax spring, using the photo as a guide for proper valve and clip location and orientation.