


Low/Reverse Retaining Ring

36885

1 Retaining Ring

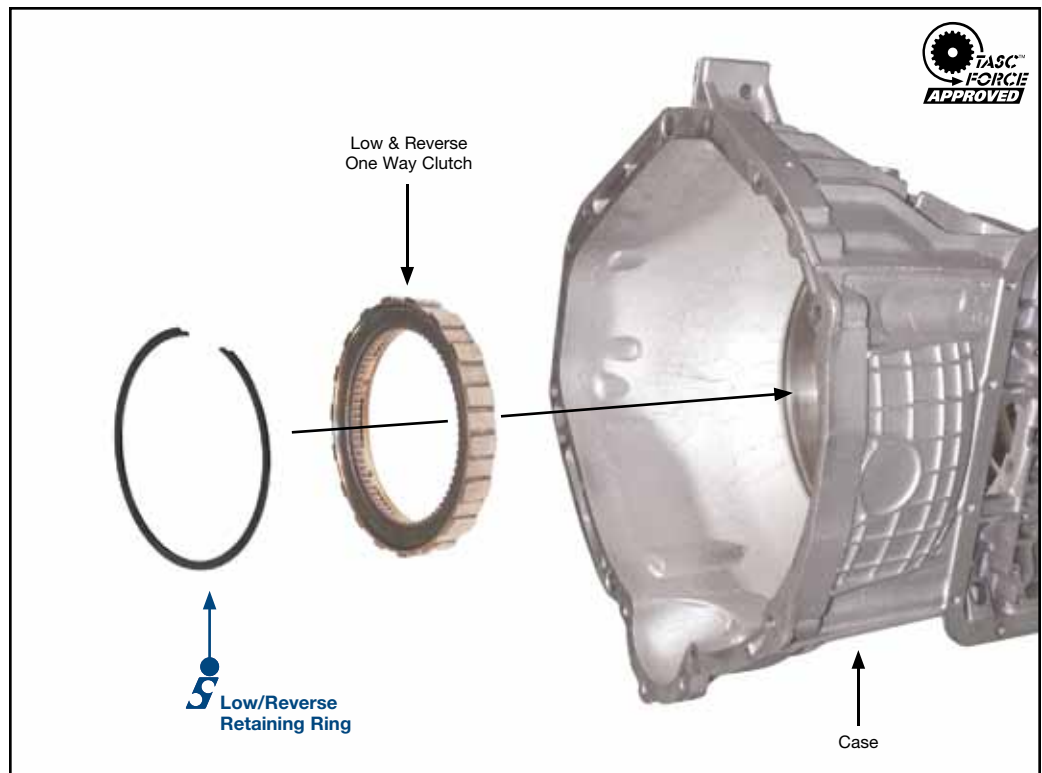

Disassembly

Remove and discard the existing low/reverse retaining ring.

Installation/Assembly

Install the new retaining ring so that ring ends are in the gaps between the lugs at the 12:00 o'clock position at the top of the case (*see illustration*).

