


TCC Regulator Valve Springs

119940-19

5 Springs

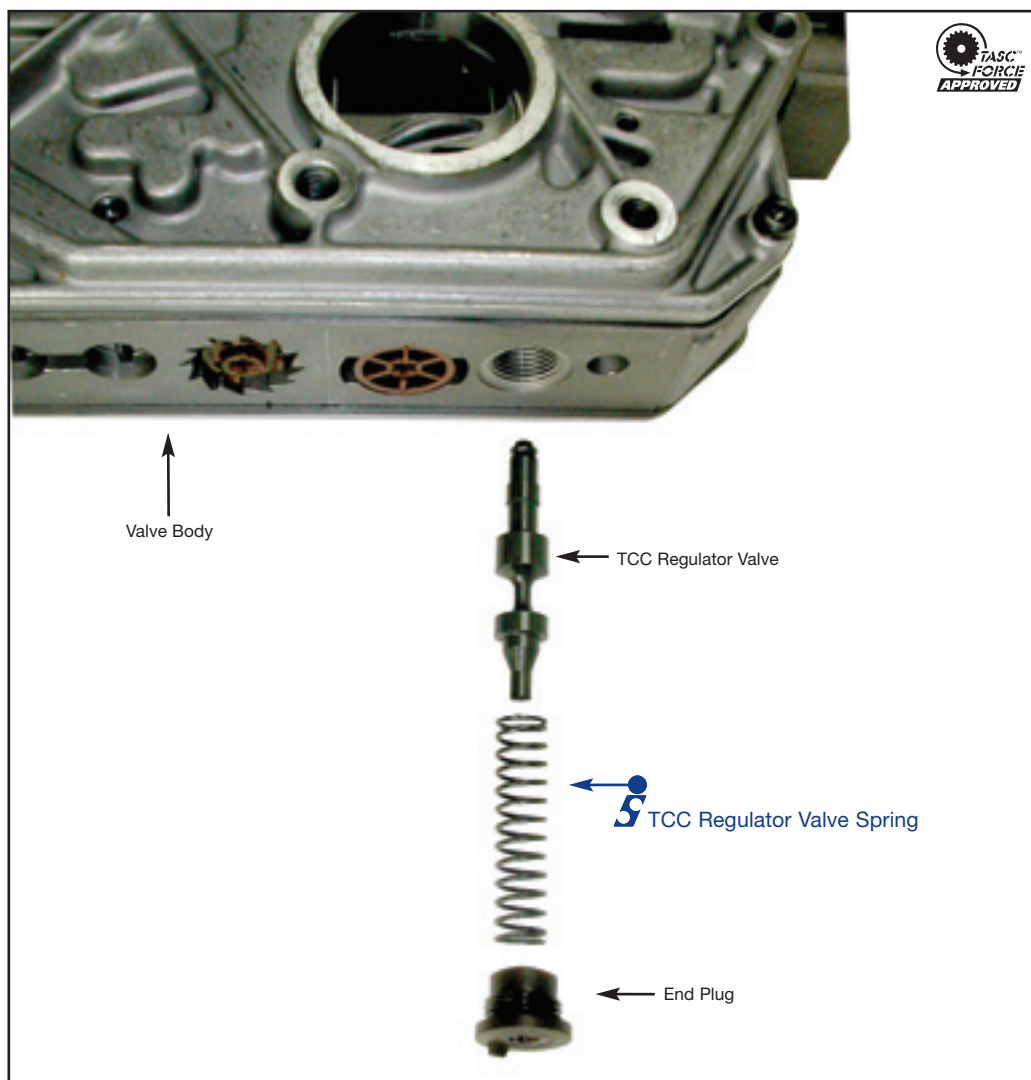

DISASSEMBLY:

1. Remove the end plug and OEM spring.
2. Replace the OEM spring with the Sonnax spring.
3. Reinstall the end plug.