


1-2 or 3-4 Accumulator Spring – Purple

74926

Accumulator Spring

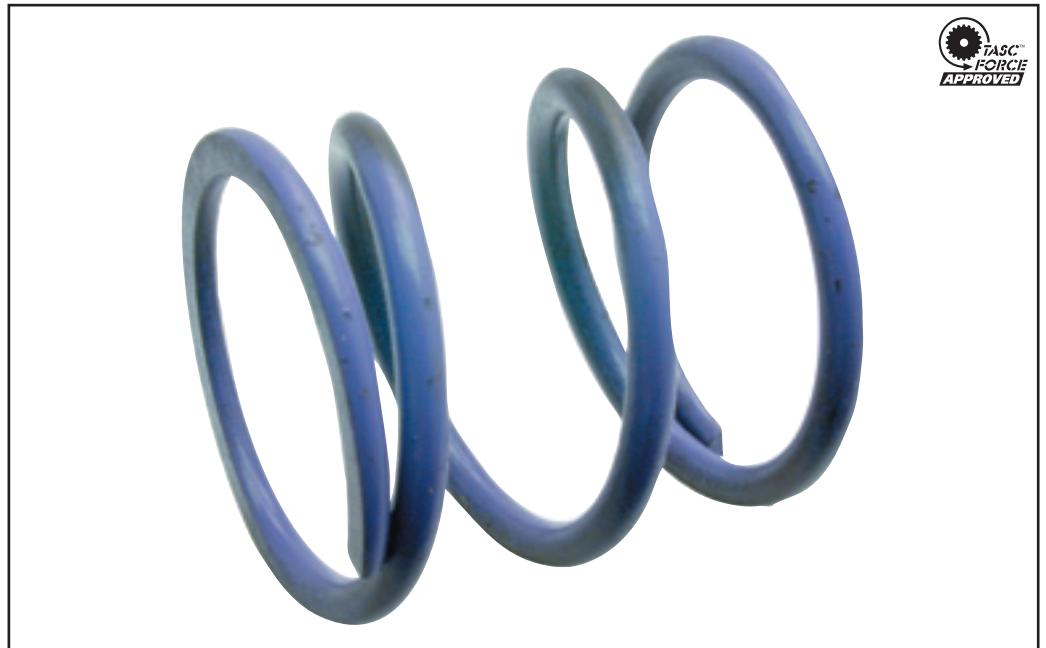

Instructions

Remove the 1-2 or 3-4 accumulator piston spring and replace with Sonnax spring 74926.