


Part No.

96855-01K

1 Bearing w/ Integral Seal

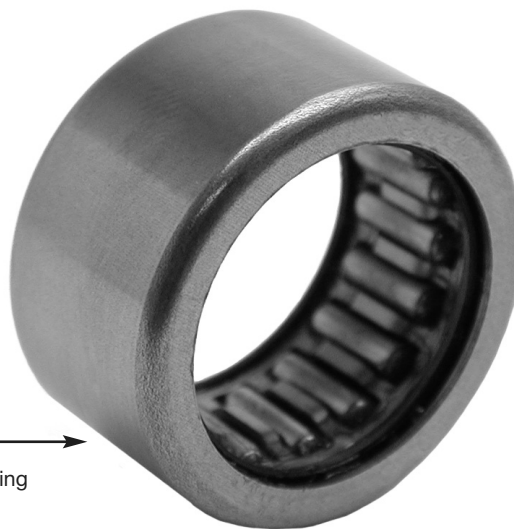

INSTRUCTIONS

1. Install the bearing with the seal toward the valve body side of the pump.
Do not use in conjunction with the OEM-type lip seal.