


Torque Converter Clutch Solenoid Snout

65961-01K

1 TCC Solenoid Snout

1 O-Ring

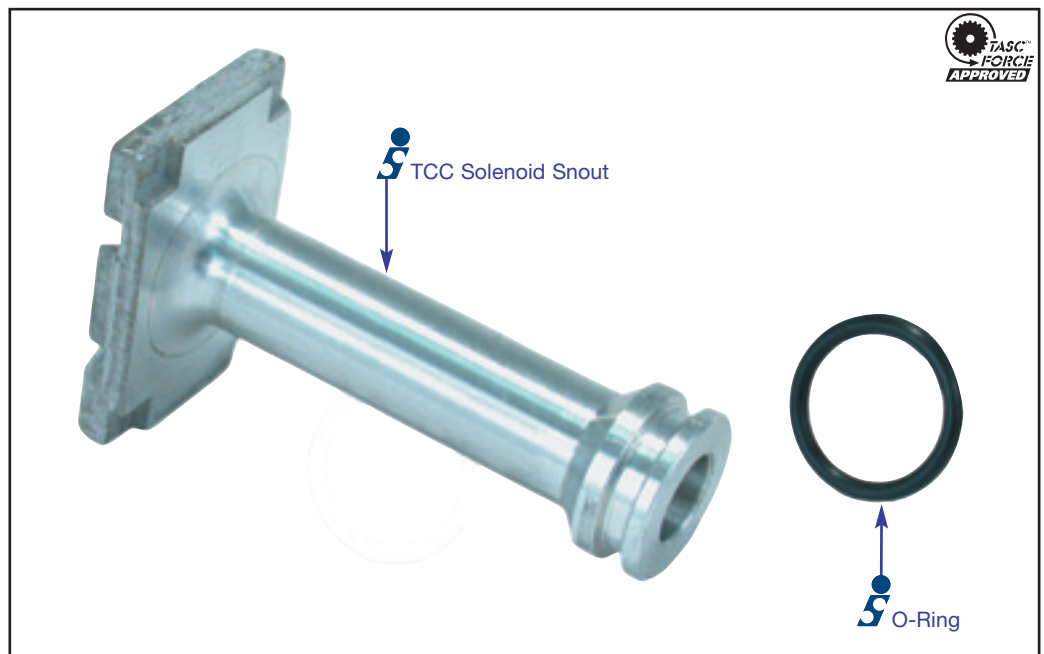

Instructions

1. Remove the plastic OEM solenoid snout by unbending the four metal tabs that secure it.
2. Discard the plastic snout, and make sure to retain the steel plunger valve.
3. Place the new solenoid snout on the OEM solenoid base and bend the bracket tabs to secure the snout.