


Pump Flow Control Valve Assembly

56200-03K

1 Pump Flow Control Valve Assembly
1 O-Ring

Note: Product supersedes 56200-02K

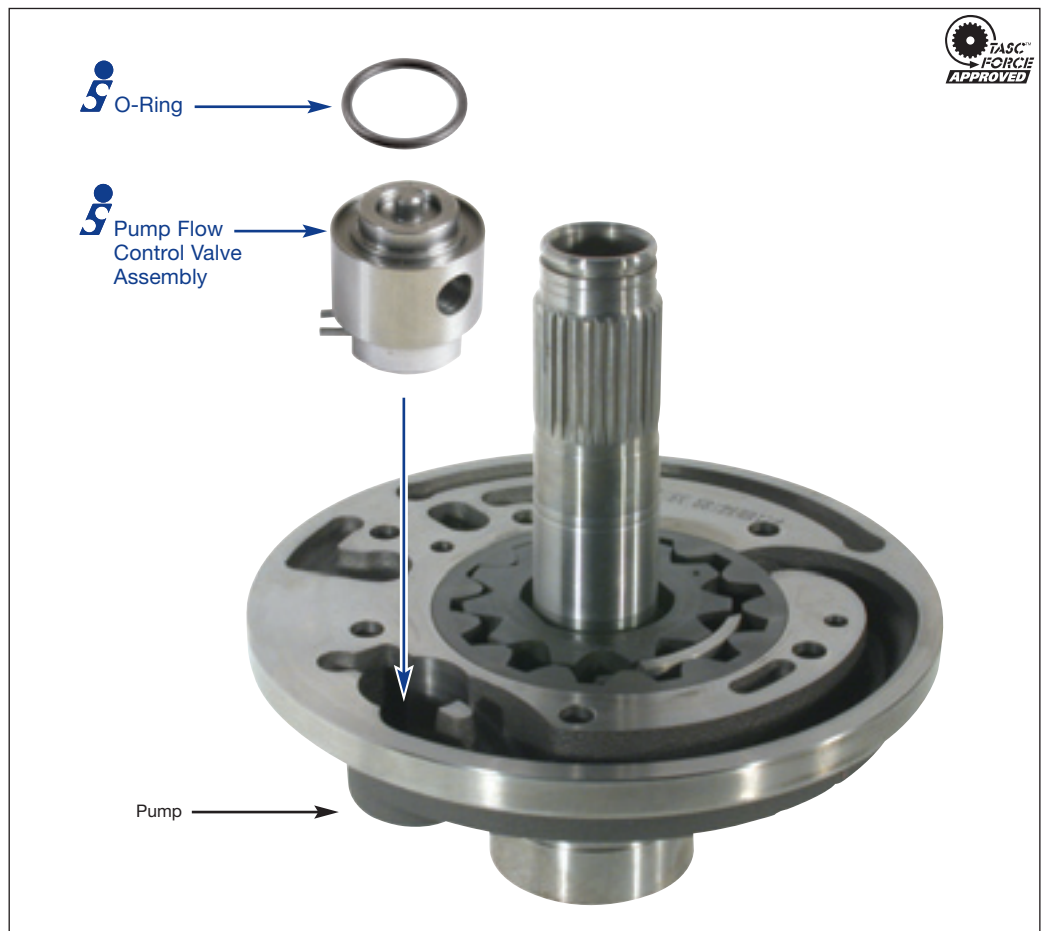

Disassembly:

Disassemble the pump and remove the flow control assembly.

Installation:

1. Install assembly with the opening pointing up.
2. Install o-ring on top of canister.

Verification:

Before installing the plate, compress the plunger through its full stroke to ensure travel and return.